



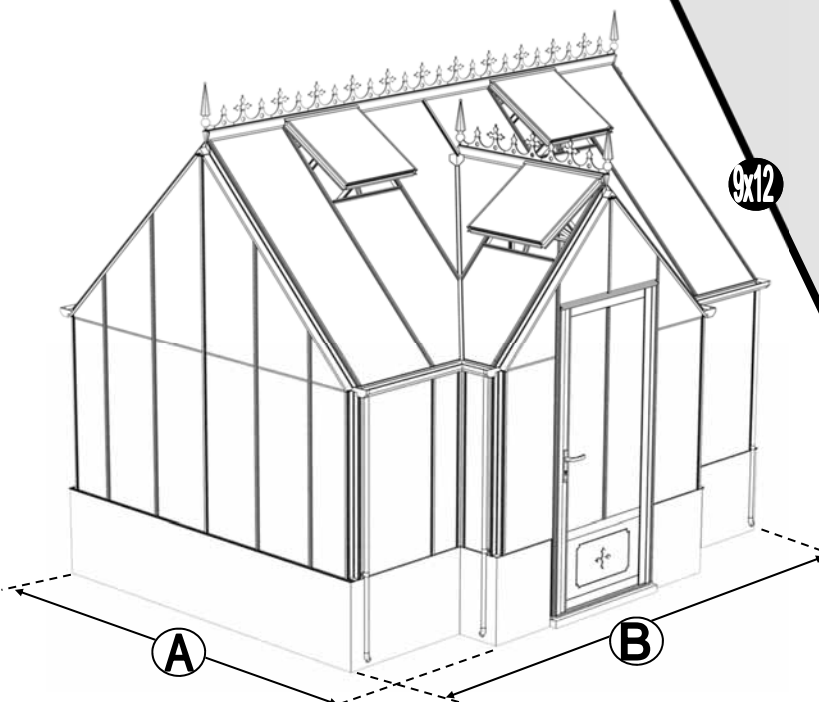

Robinsons
ALUMINIUM GREENHOUSES

Victorian 'RUSHBY' 9 Assembly Instructions

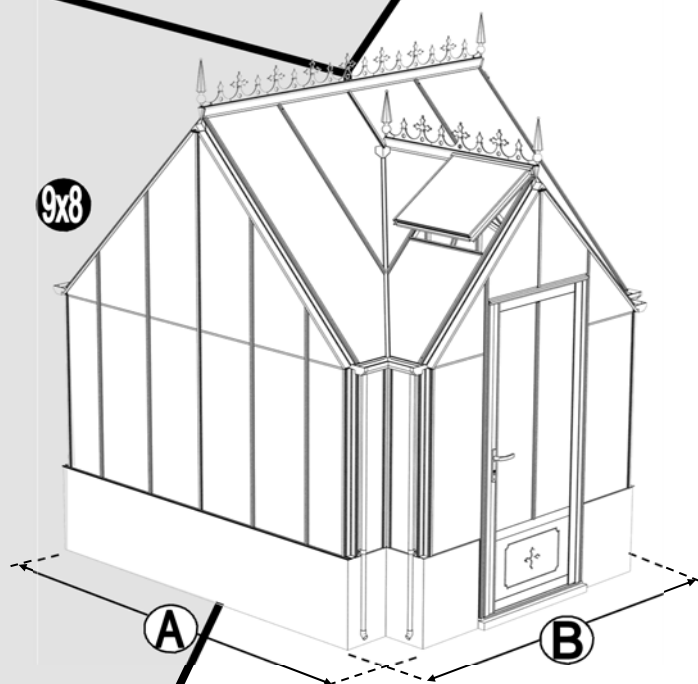

NOMINAL SIZE	A (mm)	B (mm)
9 x 8	2905	2630
9 x 12		3870
9 x 16		5110
9 x 20		6350

Issue 08/25



Thank you for purchasing your new Robinsons greenhouse. We recommend you familiarise yourself with the instructions and read all safety information before you commence assembly. This instruction manual is also available online at www.robinsonsgreenhouses.co.uk in our technical help section should you need to reprint it. Should you require any additional advice you can always call us on 01782 385409.

These instructions are divided into sections highlighted by a white number/letter on a black background at the bottom corner of most pages (see opposite page for details); **part lists**, **B**-base, **P**-preparation, **1**-rear, **2**-porch gable, **3**-end gables, **4**-porch sides, **5**-main frame assembly, **6a**-rear roof, **6b**-porch roof, **7**-vent, **8**-louvre, **9**-glazing, **10**-vent attachment, **11**-door attachment, **12** anchoring down, **13** finishing touches, **14** optional shelf, **15** optional staging. If you need to contact us for assistance please refer to the relevant section/s. If your building is longer than 12', i.e. has an extension then please also refer the separate extension manual before you begin construction.

Safety Warning

- Glass and aluminium can potentially cause injury. Please ensure you wear protective goggles, gloves, headgear and suitable footwear when assembling and glazing the building.
- Please remember that glass is fragile and should be handled with extreme care. Always clear up and dispose of any breakages immediately.
- Do not assemble the greenhouse in high winds.
- For safety reasons and ease of assembly, we recommend that this greenhouse is assembled by a minimum of two people.
- Please clear all lying snow from the greenhouse roof as it can cause the roof to buckle or collapse.

Site Preparation

- When selecting a site for your greenhouse, it is vital that you choose as flat and level an area as possible.
- A concrete or slabbed base will provide the most solid foundation for your greenhouse.
- IMPORTANT: Do **not** fix your building down until the building is fully assembled, including glazing.
- Avoid placing your greenhouse under trees or in other vulnerable locations.
- To minimise the risk of wind damage, try to select as sheltered a site as possible, e.g. beside a hedgerow or garden fence.

Additional Considerations

- Please bear in mind that assembling your greenhouse can be time consuming. You may need to spread the construction over two or more days. We recommend that you avoid leaving the building partially glazed. If you ever have to leave your greenhouse half assembled and not anchored down, weigh it down with slabs or bags of sand to stop the wind moving it.
- You will find it helpful to prepare a large, clean and clear area in which to work in. A garage floor or flat lawn area is ideal.
- If you have arranged for someone to install your greenhouse for you, please check that all components are included. The components can be identified by their distinctive profiles, lengths and quantities detailed in the parts list (see next page).
- Anchoring down your greenhouse should be the final stage of construction (including glazing).
- Once installed your greenhouse requires little maintenance, but to maintain the smooth running of your door(s) WD40 or similar can be applied to the door pivot pins / lock etc...

Guarantee

- Your new Robinsons greenhouse is guaranteed for 10 years against faulty manufacture of the frame-work. This does not include glazing, moving parts, accidental damage or wind damage.

UPDATE: Robinsons plastic / aluminium cover strips -

On a Robinsons building the glazing capping is in two parts. The lower plastic capping screws into the glazing bars pressing the glass down onto its rubber beading. The upper plastic / aluminium covers then need to be applied to cover the heads of the self-tapping screws. If you are struggling to press on the cover strips then we recommend the use of a rubber mallet or perhaps a wooden block and hammer, a short sharp tap onto the cover at one end is all that is needed to stretch the cover around the lower capping protrusions locking it into place. You can then either continue to use the mallet along the length of the cover or continue just using the palm of your hand. Once in the building and the edges are protected Robinsons 4mm thick toughened safety glass is very strong and can cope with the vibrations caused by hitting the covers though we would not recommend that you hit the glass directly. Some of the aluminium cover caps have a hole in them at one end which is sometimes used to hang the parts for powder coating. You can if you wish use the hole to stop the covers from sliding in the roof using a glazing screw, note you will have to use a countersunk screw under the vents to avoid interference with the vent bottom.

KEY SYMBOL	KEY DESCRIPTION
	EXTERNAL VIEW
	INTERNAL VIEW
	THINK
	THIS SECTION RELATES TO ANOTHER (e.g. 1 to 5)
	CORRECT
	DO NOT FIX DOWN!
	TWIST TO LOCK
	TIGHTEN
	PUSH AND HOLD
	CUT TO LENGTH



SECTION No	TITLE	ASSEMBLY SYNOPSIS: IMPORTANT INFORMATION / CONSIDERATIONS
B P 1 2 / 3 4 5 6a 6b 7a 7b 8 9 10 11 12 13 14 15	PARTS LIST	Identify and separate all like for like components prior to assembly. The 'parts list' also separates parts into the various sections 1 - 13 shown below. Parts can also be identified by their profile pictures and stated lengths etc..
	BASE	Base dimensions and recommendations. Ensure that your base is level as this will make assembly of the building, especially the glazing of the roof much more straight forward. Please be aware that the hinge door on your greenhouse opens inwards, make sure that there will be no interference between the door and the foundations.
	PREPARATION	Tools required. IMPORTANT: Use WD40 or similar in the glazing bar channels and insert the black glazing rubber prior to frame assembly.
	REAR	Take the glazing bars 'D609' with the rubber inserted and the diagonal braces 'D604', use 12mm bolts to join them to the gutter and 16mm bolts to the cills (note how the head of the bolt slides into each glazing bar during construction). Please also remember to slide in your 22mm bolts for attaching the decorative eave spandrels 'DV100' in section 6.
	PORCH GABLE	Again ensuring that the gable framework is rubbered-up follow the diagrams to assemble each gable in the building. Make sure that you have inserted the extra bolts utilised in sections 4 and 5. On the roof and side corner bars not every rubber channel will require rubber unless it is to be utilised in a partition (see separate manual and section P).
	END GABLES	
	PORCH SIDES	The porch sides (the L-shaped area to the left and right of the porch gable between cills and gutters level) can either be built in situ piece by piece or built away from the structure as an L-shape and then attached in a similar manner to plain gable/s to rear. Please ensure that where relevant you slide 2 x 22mm bolts into the side bars for the attachment of the DV100 eaves spandrels.
	MAIN FRAME ASSEMBLY	Take the rear (1) and the end gables (3) and join them together on your base. It is a good idea to tie some ladders to the sides to support them if you do not have anyone to hold them for you. Once the porch sides (4) have been attached to the main building then the porch gable (2) can be inserted between them in the same way you would attach a end gable to the rear. You will now have a T-shaped framework. It is important that you check that the internal diagonal measurements within the building are equal to ensure that the building is square, spending a little time on this now will speed up roof assembly and glazing. On buildings longer than 12' the end gable (3) should attach to the extension sides (see separate manual) first before the rear (1) maintaining 620mm spacings, e.g. a 16' building = end (3), 4' handed extension sides, 8' rear (1), 4' handed extension sides, end (3).
	REAR ROOF	Attach the main ridge between the end gables and then the rubbered-up roof bars 'DV254' ensuring that they are fully butted up to the ridge and down onto the gutter. Attach your cresting before you glaze the building to give yourself more room to work. Utilise the 22mm bolts slid into the rear (section 1) and roof bars to attach your DV100 and DV101 spandrels. On longer models you may need to carefully prop up the roof and tie the sides together to keep the ridge and gutters straight (i.e. not sagging or bowed) until the building is fully glazed.
	PORCH ROOF	The porch ridge can be fitted to the porch gable supporting its free end with ladders or a wooden sprag. The porch hips 'DV381' can now be attached between the welded porch gutter sections and the free end of the porch ridge. A 'lower' height porch utilises a DV380 bracket to allow the porch ridge to connect to the main module. Identify all of the handed roof bars and look for their locations. Insert the rubber into their channels and when attaching ensure again that were relevant you slide in 22mm bolts for eave (x2) and roof spandrels (x2). Eave and Roof spandrels can now be attached using the previously inserted 22mm bolts. The ladders / sprag supporting the porch ridge free end can now be removed. Prior to glazing the cresting and finials should be siliconed into place. Attaching them once the glass has been installed by leaning through vent apertures is more time consuming.
	VENT	Once the vent is glazed add silicone to the vent sides and top. Stand the vent/s on their hinge (vent top) and then leave the silicone to set.
	VENT SLAM	The slam bar 'D079' can be moved up and down between the roof glazing bars so that it can be butted down onto the pane of glass beneath, the autovent will be attached to it later on (10).
	LOUVRE	They attach to the building during the glazing process (9) like a piece of glass with a black separator above them. If you are fitting an optional auto-louvre then you need to carefully drill (3mm bit) out the rivets which mount the handle to the frame. You can then either utilise those holes or create more to mount the unit. On the 8' long building they will both have to go back centre side by side.
	GLAZING	Layout the bar cappings and covers around the building like a sundial checking that all is present and correct. You can also place the roof cappings in the gutters so they are closer to hand. Use the capping and the self tapping screws to then hold the glass in place. The covers then enclose the screw heads giving a neat finish. It is a good idea to glaze two roof sections first to ensure the building is square followed by two side sections to ensure the building isn't leaning. We would then recommend that you glaze the porch roof and its adjoining angled roof panes whilst the building still has some movement in it. The porch cowl 'DV341' should be attached before the vents are inserted so that access through vent apertures is available. Silicone the cowl area internally, position cowl and VERY carefully (avoiding glass below) mark, drill and screw x 2 'FS6018' into place. IMPORTANT: Silicone the cowl externally and check with watering can than the cowl is water tight, note silicone can be moulded shortly after application if you wet your fingers. IMPORTANT: On the roof sections please make sure that you place a screw around 25mm / 1" from the bottom of each capping strip (create a hole in the plastic if required) and that the screws are nice and tight to avoid any glass slippage.
	VENT ATTACHMENT	Take the assembled vent and slide the vent hinge 'D866' into the end of the ridge allowing the vent to pivot open and closed. Vent stops go either side of the vent to stop any lateral movement (so insert stop / vent / stop). Attach the autovent/s.
	DOOR ATTACHMENT	Your door comes pre-constructed and locked minus the handles and their pivot pin but now it needs to be mounted to the front end of your building. Utilise the 'DV522' plates and twist in crop headed bolts to join the door and its frame to the building (pinch the door frame against your long front verticals whilst tightening your 'DV522' plates to ensure that there is no gap). If you are struggling to eradicate the gap between the door frame and verticals then some silicone can be carefully applied to the area to create a vertical seal. Be careful not to lock yourself in the building and to avoid damage do not open the door until it is attached to the front gable. Getting the door to swing perfectly without dropping or rubbing on the ground may require some small but vital adjustments. You may also need to insert a packer underneath the door frame hinge to increase ground clearance. Part 'DV275' canopies the door frame top hiding the clearance space at the top of the door. The door can only be made to swing inwards. IMPORTANT: Please do NOT let the door slam open or closed as it is likely to cause damage to the door and the frame. Please twist the handle to open and close. Please also be aware that your door KEYS (3 provided) are unique to the building so they should not be stored together.
	ANCHORING DOWN	Now that the greenhouse is finished and the door and vent/s are operating without interference then you need to anchor the building down using 2" rawl plugs and screws. Use a 7mm masonry bit in a hammer drill to create the holes.
	FINISHING TOUCHES	Now that the main body of the structure is complete you can add; downpipe fittings, eave bungs, gutter stop ends. It is also important to carefully apply some silicone to the internal eaves corners and external and internal ridge corners to minimise the chance of water entering the structure.
	OPTIONAL REAR SHELVEING	Robinsons integral cantilever staging and shelving attaches to the inside of the greenhouse frame using either hex / square head bolts (insert four into each glazing bar 'D609' during construction of the rear (1)) or rectangular 'crop head' bolts which can be fitted retrospectively (both sets of bolts accompany the shelving/staging). This system allows the height of either the staging or the shelf to be set at an operator specific height. Commonly the staging brackets are set 900mm from the cills though you can alter this to suit the end user/s. The aluminium shelf / staging slats come in two lengths; (4'):1240mm 'D2002' and (6'):1860mm 'D2003'. These slats can combine to create any length of staging required, i.e. 4'+6' = 10' etc...
	OPTIONAL REAR STAGING	



Victorian Rushby

Section Ref	Part No.	Section	Size (mm)	9 8	9 12
-------------	----------	---------	-----------	-----	------

1	D021		2514	1	
	D023		3754		1
	DV210		2517	1	
	DV212		3757		1
	D604		1316	2	
	D609		1160	3	5
	RUBBER		1000 (1m)	7	12
	D174		N/A	2	3

2	DV301L		537	1	
	DV301R			1	
	D608		1160	2	
	DV233L		2173	1	
	DV233R			1	
	DV269		468	2	
	DV300		1193	2	
	DV250L		1345	1	
	DV250R			1	
	D671		610	1	
	DV275		904	1	
	D163		90	2	
	DV104		N/A	2	
	DV105		N/A	1	
	RUBBER		1000 (1m)	18	
	D174		N/A	2	

MAIN FRAME QUANTITIES

VENTS / DOORS etc SEPERATE

Part No.	9 8	9 12
FS6505 HEX 12mm		
	112	124
HE569 10mm CROP		
	20	20
FS6506 HEX 16mm		
	37	41
FS6507 HEX 22mm		
	28	52
FS6504 M6 NUT		
	197	237
FS6018 19mm		
	2	

Section Ref	Part No.	Section	Size (mm)	9 8	9 12
-------------	----------	---------	-----------	-----	------

3	DV231		2614	2	
	D608		1160	4	
	DV066L		1505	2	
	DV066R			2	
	DV310L		1972	2	
	DV310R			2	
	DV061		2401	2	
	DV273		2468	2	
	DV307		1350	4	
	DV251L		1790	2	
	DV251R			2	
	DV104		N/A	4	
	DV105		N/A	2	
	RUBBER		1000 (1m)	56	
	D174		N/A	10	

4	DV345		303	2	1
	DV348		923		1
	DV357		923		1
	DV361		303	2	1
	DV363		1160	2	
	DV393		327X327	2	
	DV394				1
	DV395		327X947		1
	D609		1160		2
	RUBBER		1000 (1m)	5	10
	D174		N/A	2	4

Section Ref	Part No.	Section	Size (mm)	9 8	9 12
-------------	----------	---------	-----------	--------	---------


6	DV100		N/A	3	7
	DV101		N/A	4	6
	DV201		2517	1	
	DV203		3757		1
	DV349		1230	1	
	DV254		1790	3	7
	DV375L		830	1	
	DV375R			1	
	DV380		N/A	1	
	DV381		1668	2	
	DV384		444	1	
	DV386L		1274	1	
	DV386R			1	
	RUBBER		1000 (1m)	21	36

7	D866		639	2	5
	D863L		613	2	5
	D863R		613	2	5
	D862		593	2	5
	D079 PLUS FLUFF		590	2	5
	D114		N/A	4	10
	D220 PLUS FS6060 SCREW		N/A	4	10
	D205		N/A	4	10

Section Ref	Part No.	Section	Size (mm)	9 8	9 12
-------------	----------	---------	-----------	--------	---------

9	6b	D613		460	1
	1 / 4	D618		1144	7 11
	2	D662		600	1
	3	DV403L/R		1505	2 + 2
	3	DV408		2401	2
	10	DV479		1384	1
	3	DV610L/R		1972	2 + 2
	2	DV633L/R		2173	1 + 1
	6	DV654		1821	3 7
	6b	DV675L/R		863	1 + 1
	6b	DV685L/R		1305	1 + 1
	2 / 3	D610		1160	6
	1 / 4	D620		1144	6
	6b	DV650		1345	2
	6	DV651		1790	4
	2 / 3	D614		1162	6
	1 / 4	D619		1144	13 17
	2	D666		602	1
	6b	D685		459	1
	3	DV435		2401	2
	10	DV480		1384	1
	3	DV611L/R		1972	2 + 2
	3	DV615L/R		1505	2 + 2
	2	DV634L/R		2173	1 + 1
	6b	DV656		1378	2
	6	DV657		1821	7 11
	6b	DV679L/R		863	1 + 1
	6b	DV686L/R		1305	1 + 1
	6	DV341		N/A	1

11	D522		N/A	10
----	------	---	-----	----

13	DV120		N/A	6
	D589		N/A	4 6
	D584		1500	4 6
	D591		N/A	4 6
	D636		N/A	4 6
	D583		N/A	4 6
	D208		N/A	3
	DV219A (RH)		N/A	3
	DV218A (LH)		N/A	3

Victorian Rushby

DOUBLE BRICK WALL GABLE DOOR OPENING SECTION.

50 MINIMUM

F.F.L.

200 MINIMUM

400 MINIMUM

SINGLE BRICK WALL GABLE SECTION.

525

F.F.L.

200 MINIMUM

400 MINIMUM

SINGLE BRICK WALL SIDE SECTION.


525

F.F.L.


200 MINIMUM

400 MINIMUM

RUSHBY
WITH 1 BAY RUGBY PORCH

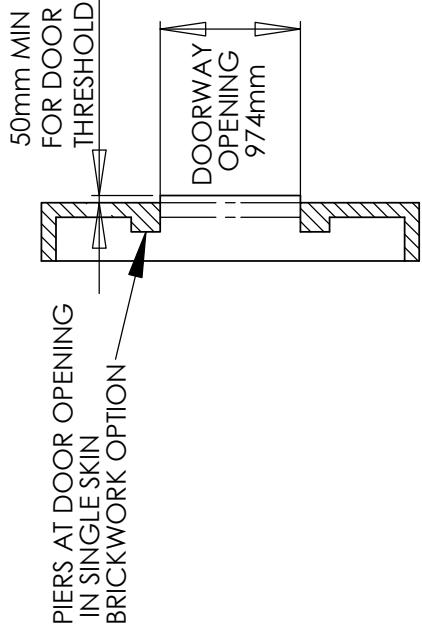

DIMENSION VARIABLES (mm)			
MODEL	LENGTH 'L'	RETURN 'Y'	DIAGONAL 'D'
8 LONG	2630mm	331mm	3697mm
12 LONG	3870mm	951mm	4661mm
16 LONG	5110mm	1571mm	5732.5mm
20 LONG	6350mm	2191mm	6861mm
24 LONG	7590mm	2811mm	8022.5mm
28 LONG	8830mm	3431mm	9204mm
32 LONG	10070mm	4051mm	10400mm
36 LONG	11310mm	4671mm	11604.5mm
40 LONG	12550mm	5291mm	12816mm

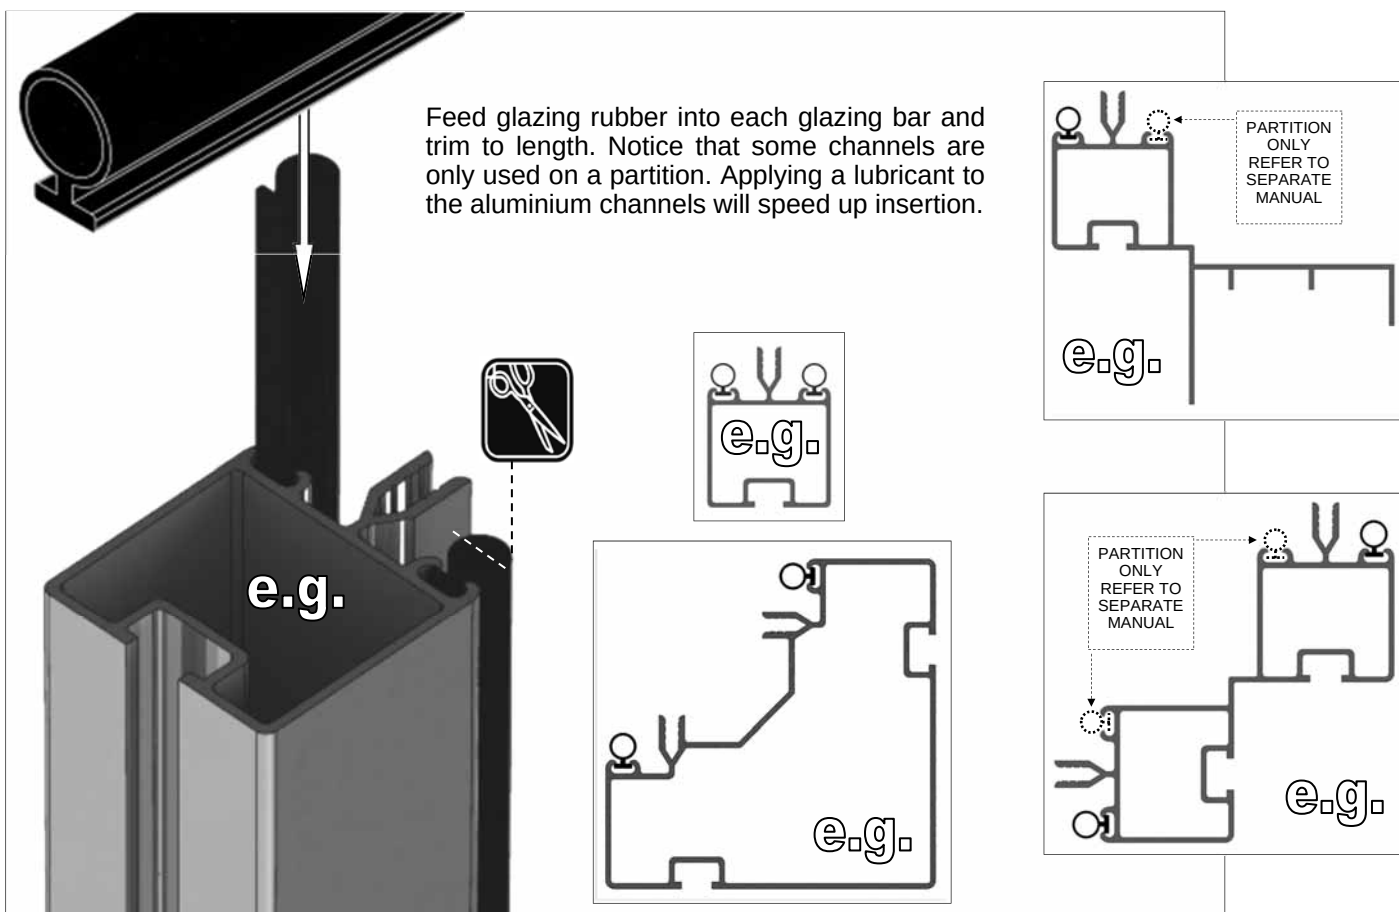

Robinsons have now upgraded the original square headed alloy bolts to stainless steel Hexagonal headed bolts. The frame is assembled by feeding these bolts, either 12mm, 16mm or 22mm in length (previously 10mm, 15mm and 22mm) into the slots on glazing bars and then locating those bolts through holes in purlings and cills, etc... The 12mm bolts tend to be used to join two parts together and the 16mm bolts tend to be used to join two or more parts or where an extrusion is thicker. 22mm bolts are for your eave and ridge spandrels (DV100 / DV101).

Twist in (rectangular) crop headed bolts are also used towards the end of construction to attach components to the frame retrospectively when the glazing bar slots are no longer exposed at the ends.



If an image in the manual shows a square headed bolt please interpret it as the new HEX headed replacement.




	ORIGINAL SQUARE HEAD		NEW HEX HEAD
10mm		12mm	
15mm		16mm	
22mm		22mm	

e.g.

P

REAR		9 x 8	9 x 12
Part No	mm	Quantity	
DV210	2517	1	
DV212	3757		1
D021	2514	1	
D023	3754		1
D604	1316	2	
D609	1160	3	5
D174		2	3
BOL M6X12		3	5
BOL M6X16		5	7
BOL M6X22		6	10
NUT M6		8	12
D227 Rubber	1000 	7	12

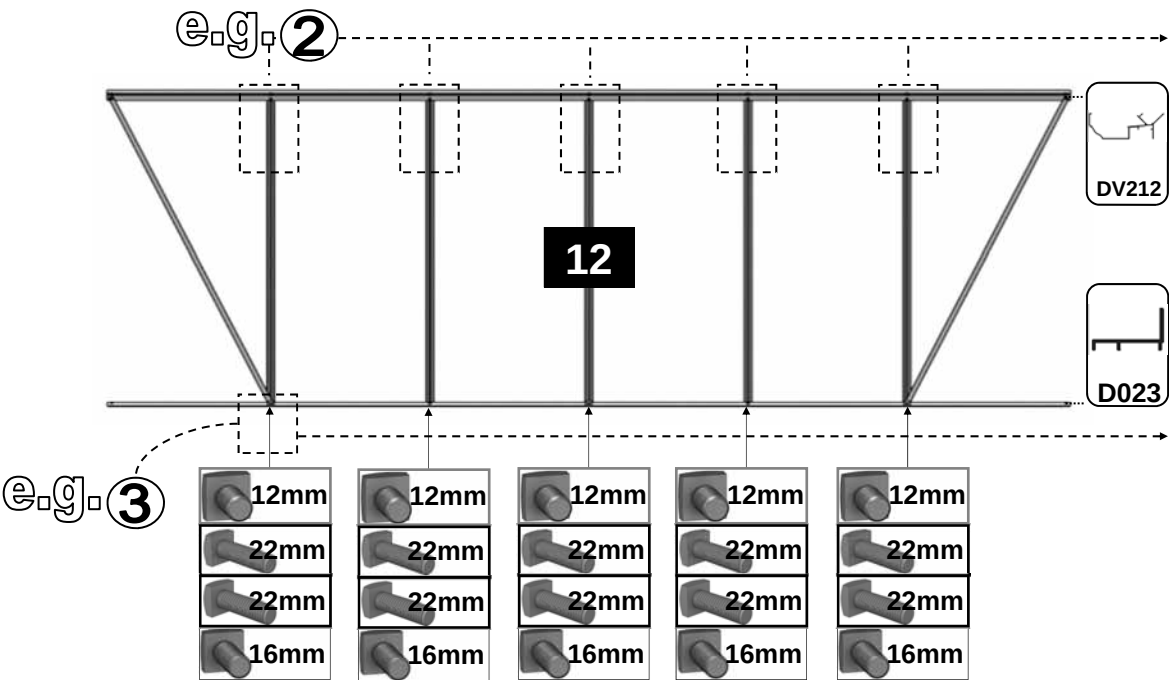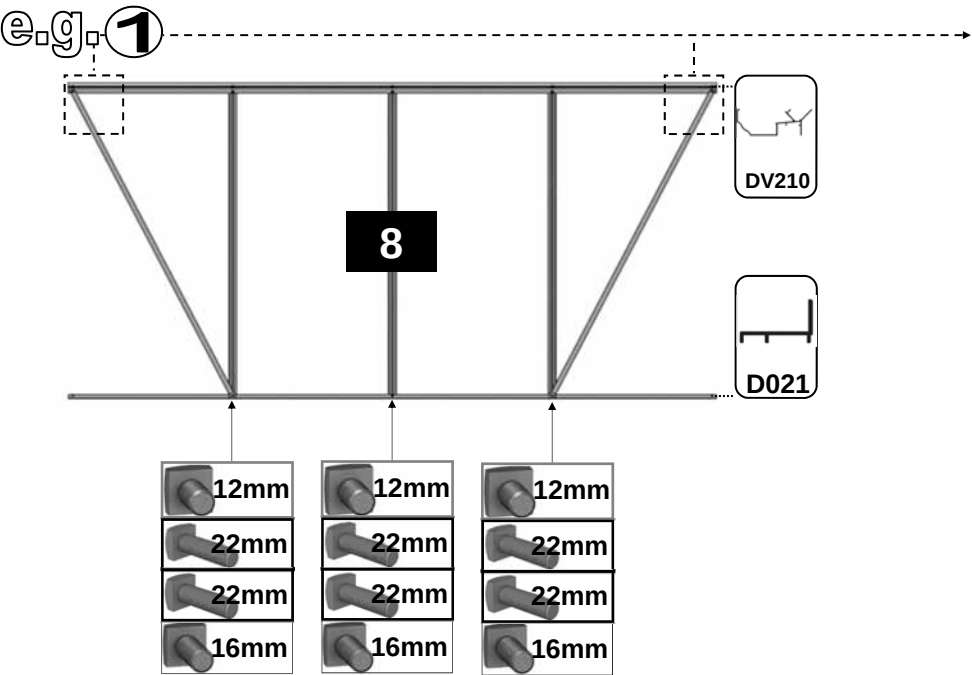

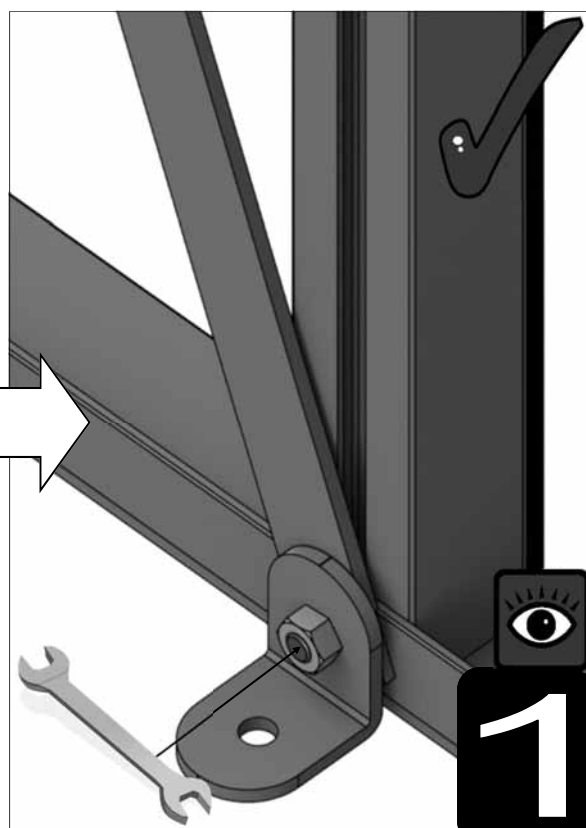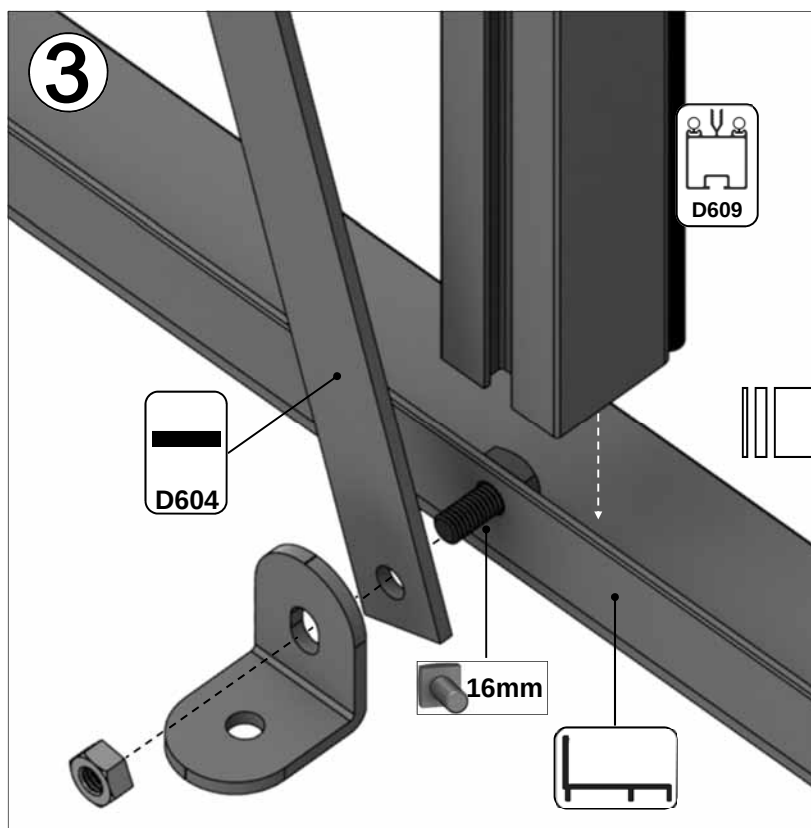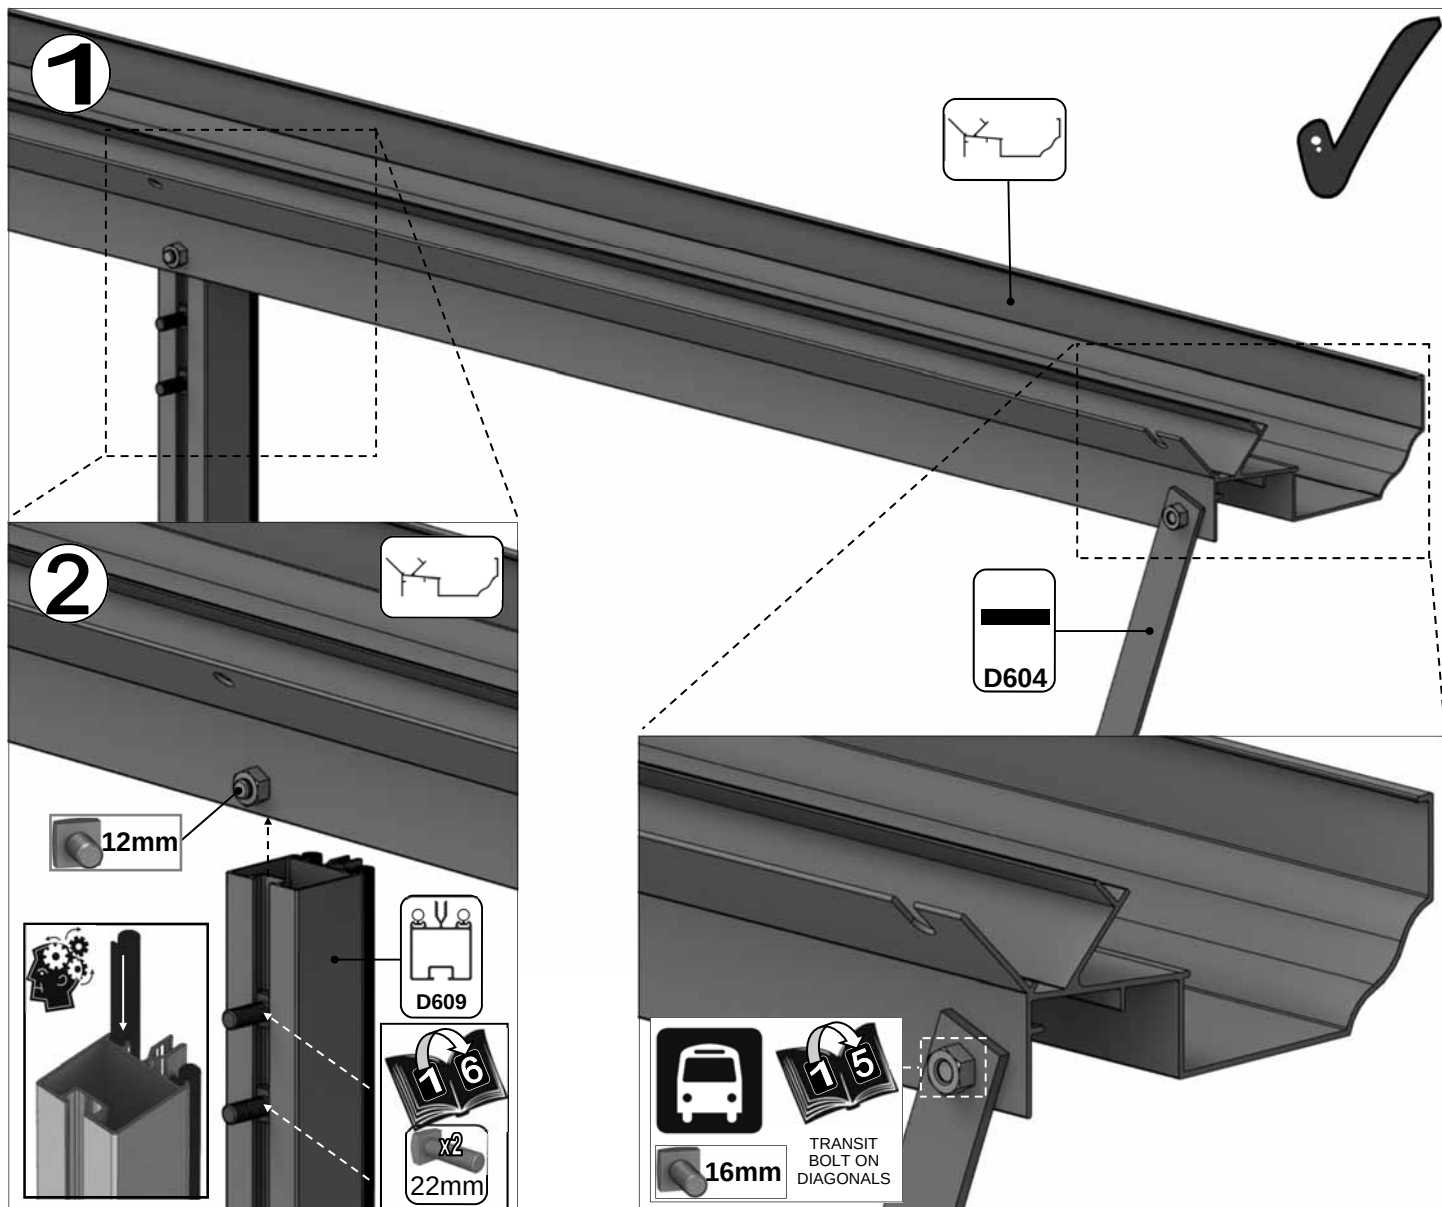


e.g.

9x12









PORCH GABLE		
Part No	mm	Quantity
D608	1160	2
D671	610	1
DV233L	2173	1
DV233R	2173	1
DV250L	1345	1
DV250R	1345	1
DV269	468	2
DV275	904	1
DV300	1193	2

Part No	mm	Quantity
DV301L	537	1
DV301R	537	1
DV104		2
DV105		1
D163		2
D174		2
D227		18m
M6X12		28
M6X16		8
M6NUT		36

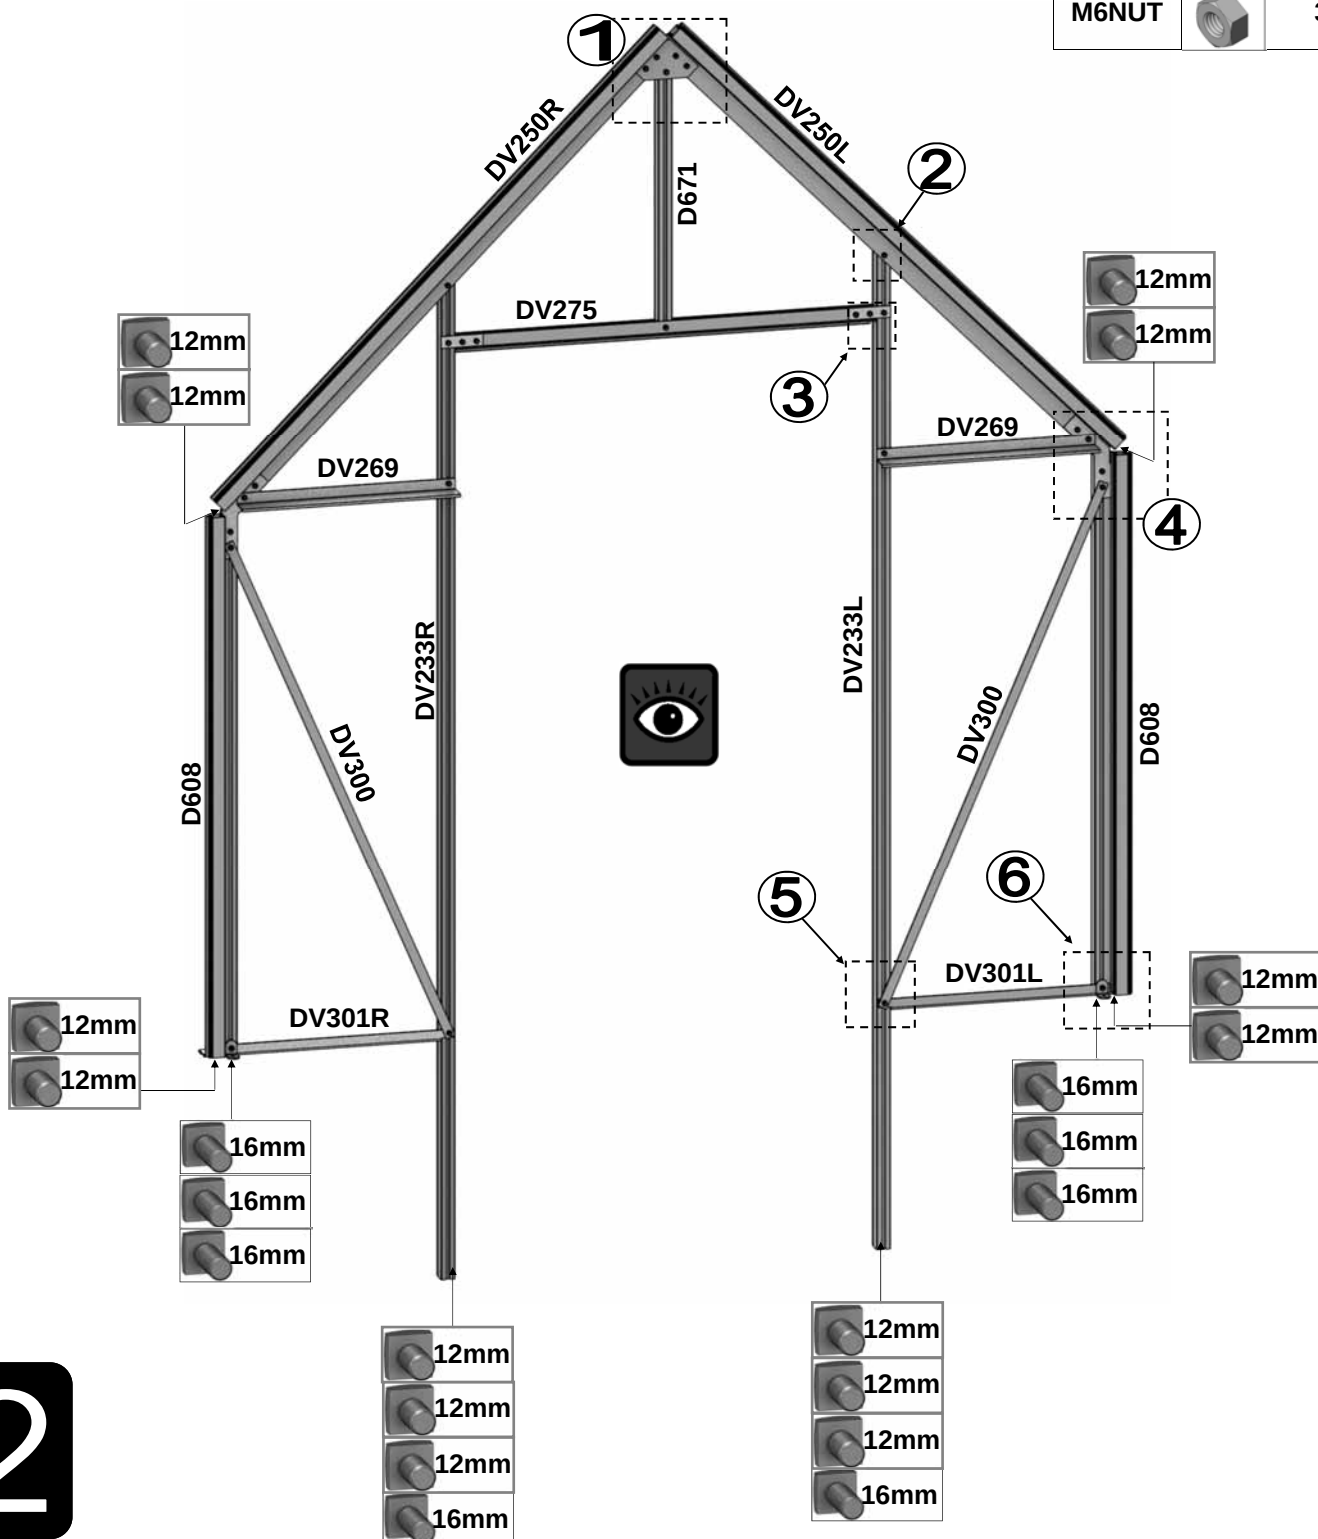

2

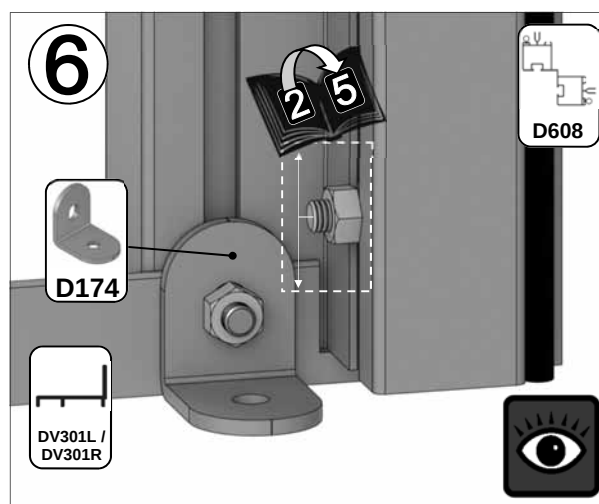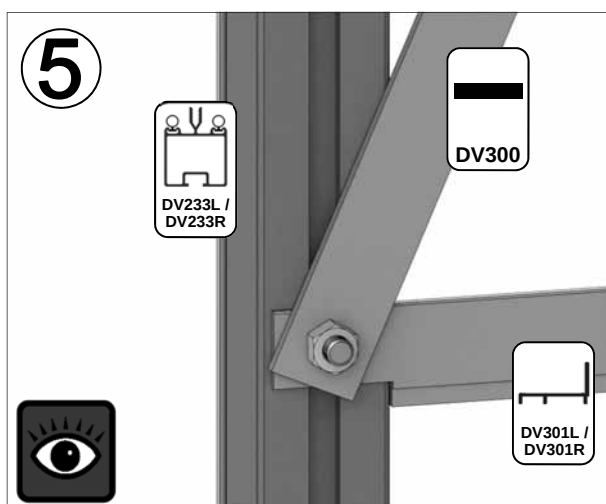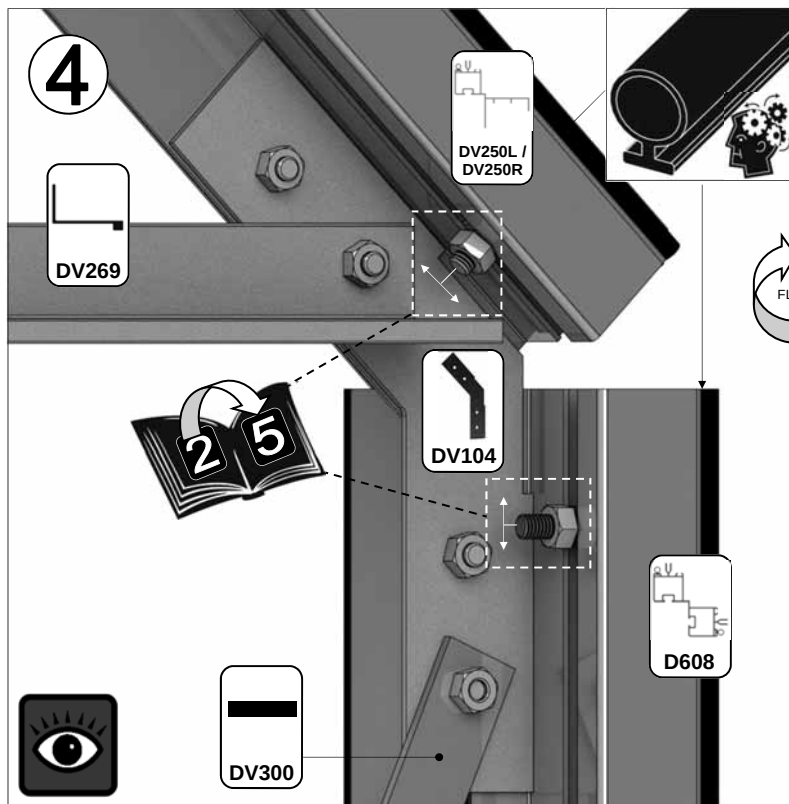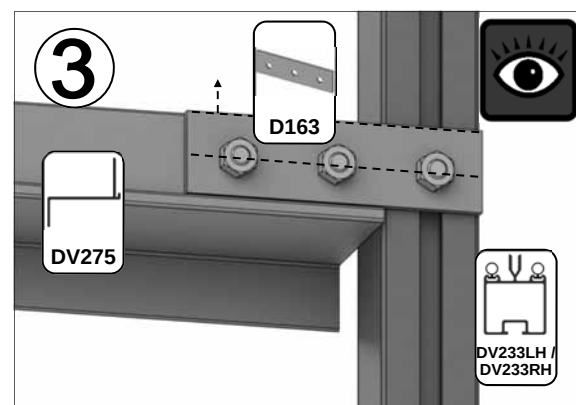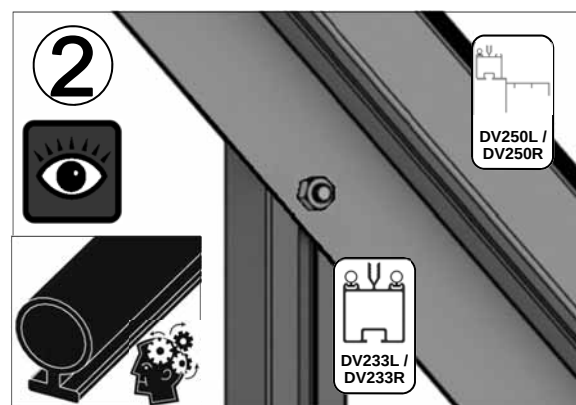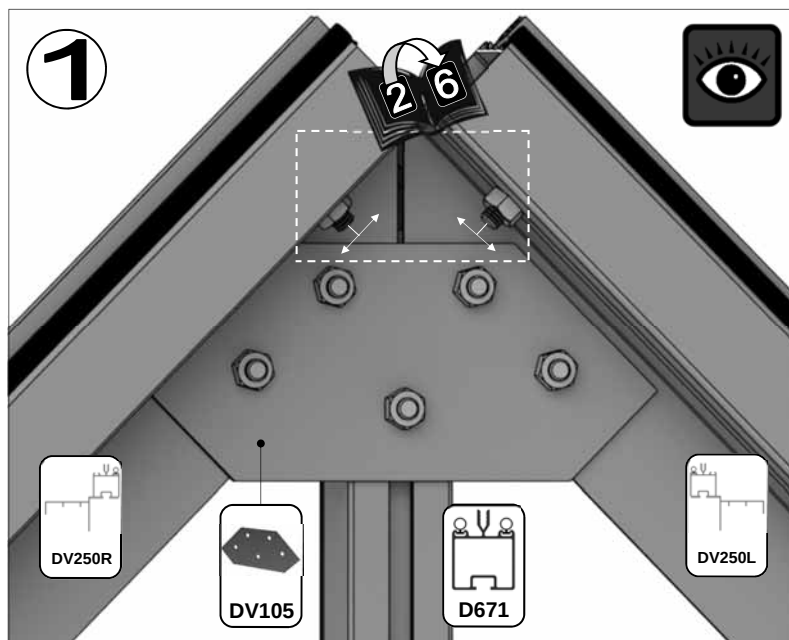

2


e.g.







9x12





END GABLE X 2		
Part No	mm	Quantity
D608	1160	4
DV066L	1505	2
DV066R	1505	2
DV061	2401	2
DV231	2614	2
DV251L	1790	2
DV251R	1790	2
DV273	2468	2
DV307	1350	4

Part No	mm	Quantity
DV310L	1972	2
DV310R	1972	2
DV104		4
DV105		2
D174		10
D227		56m
M6X12		58
M6X16		22
M6NUT		78


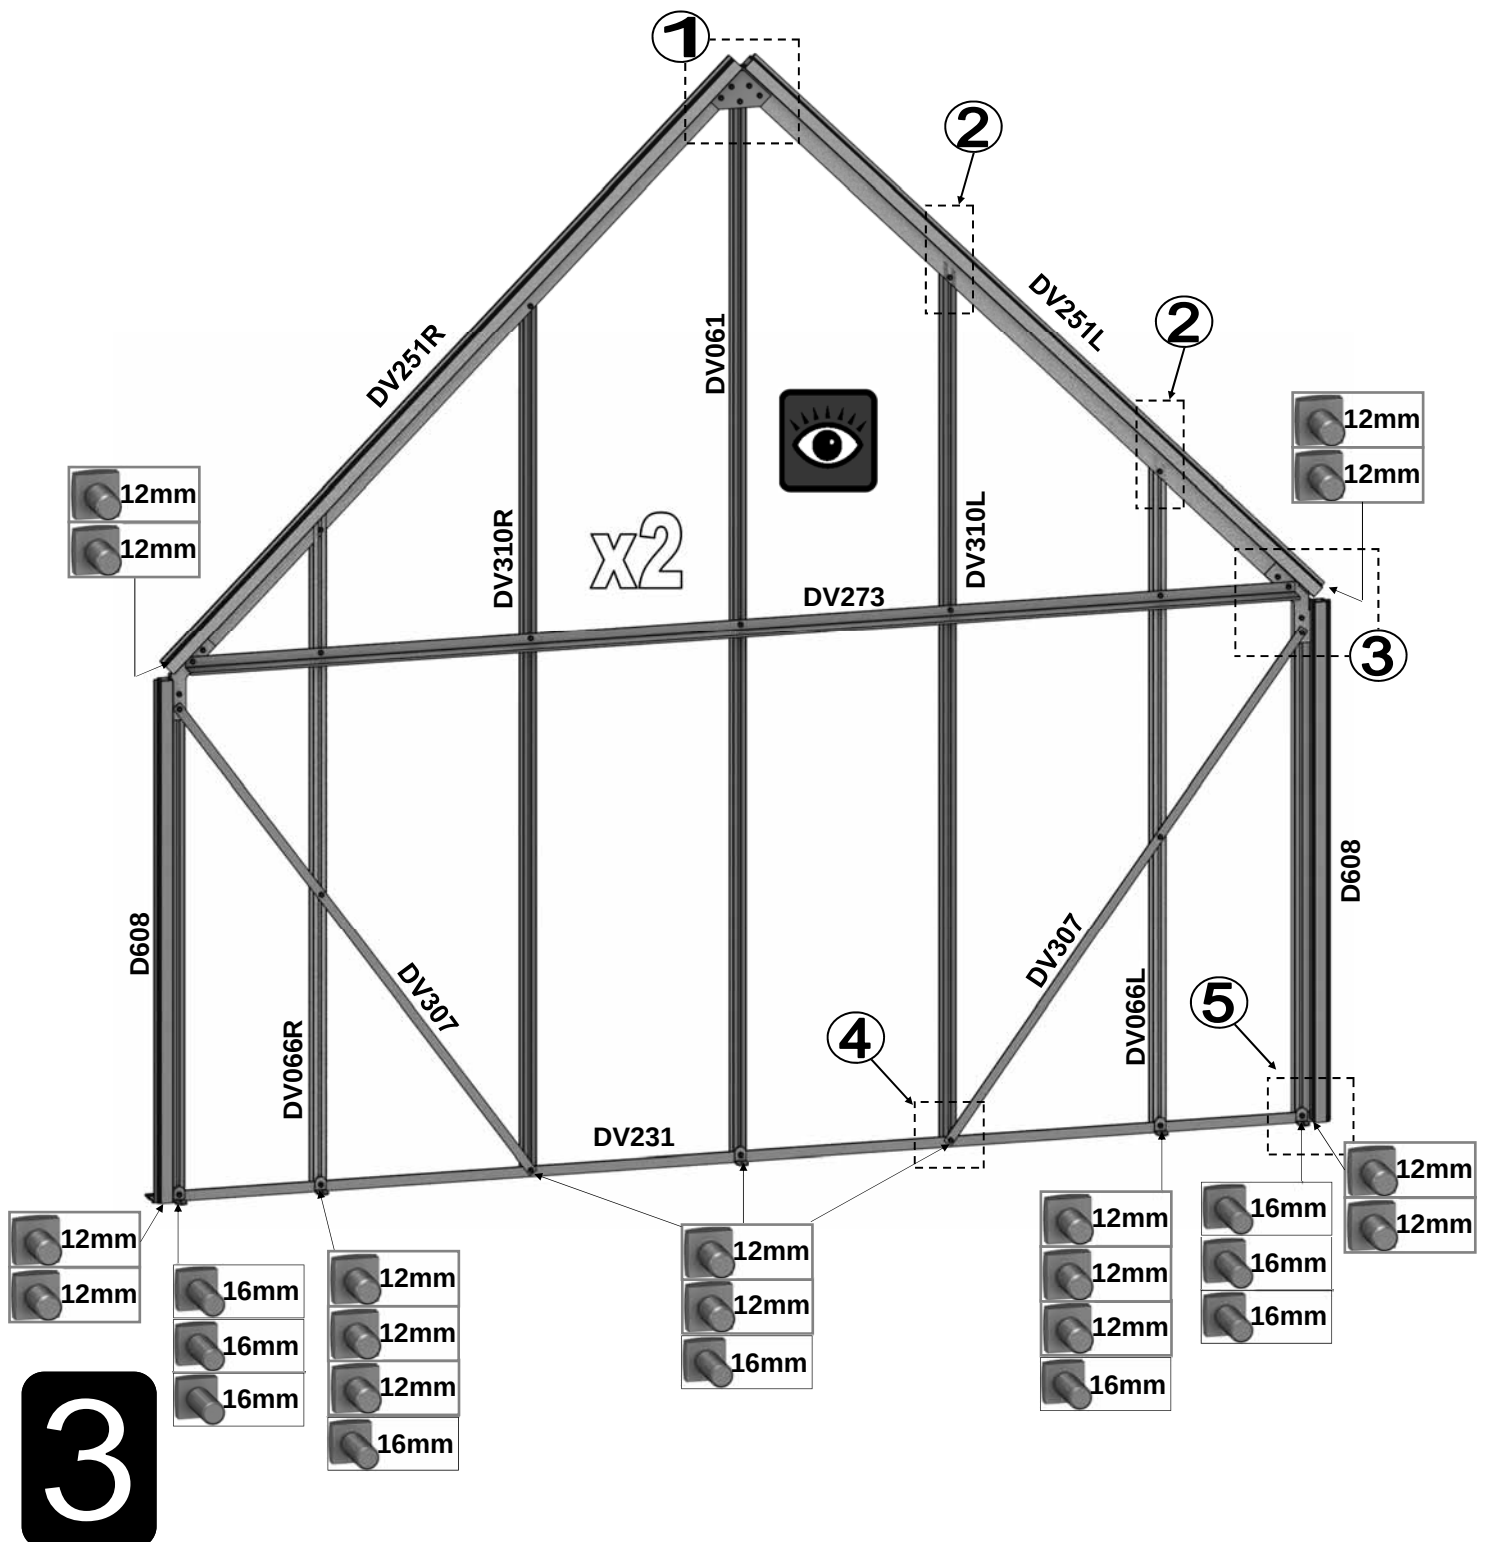


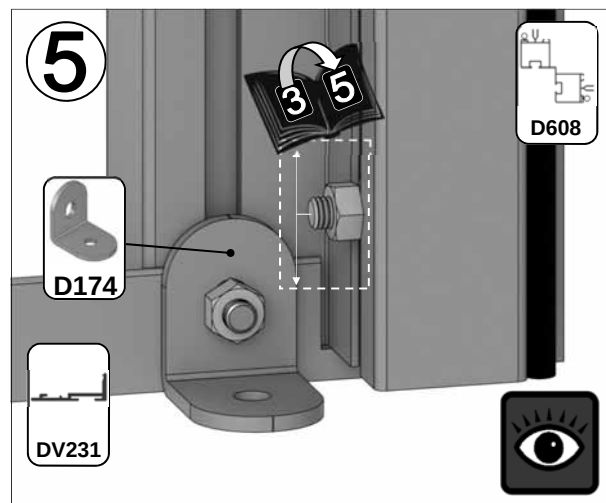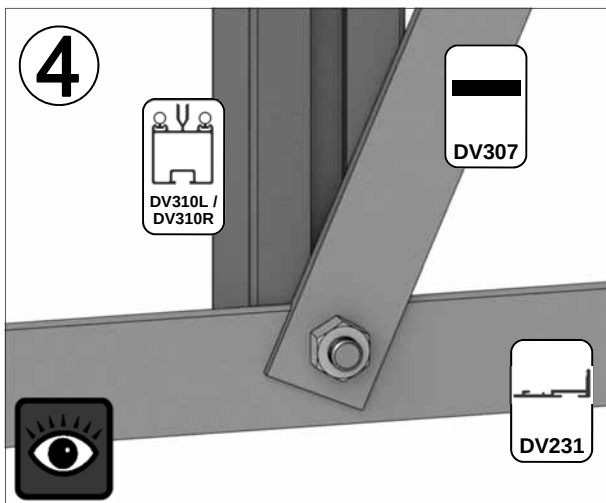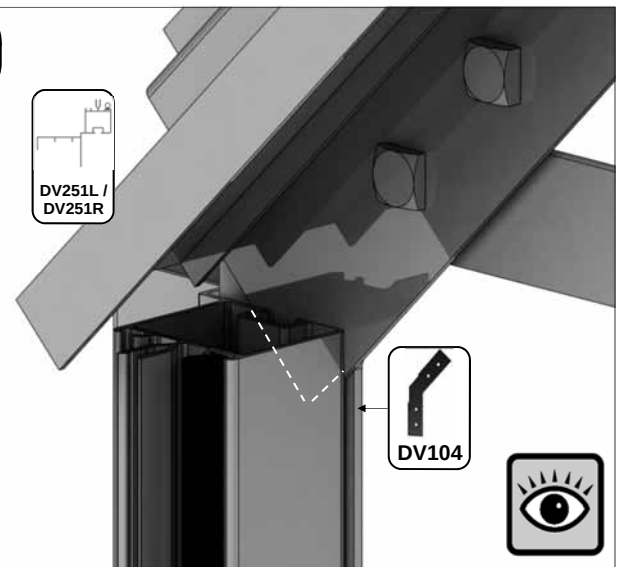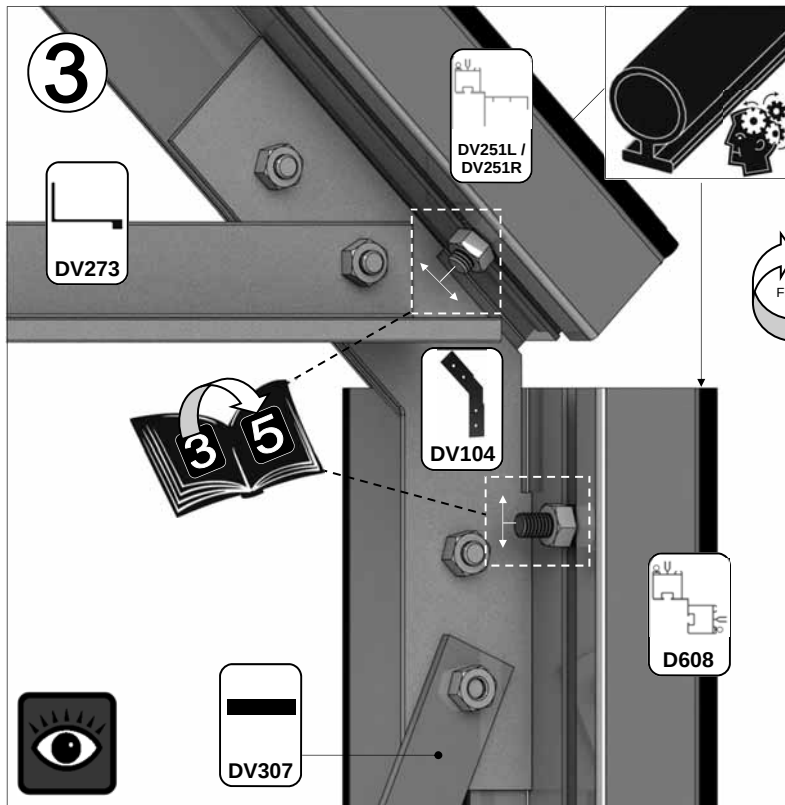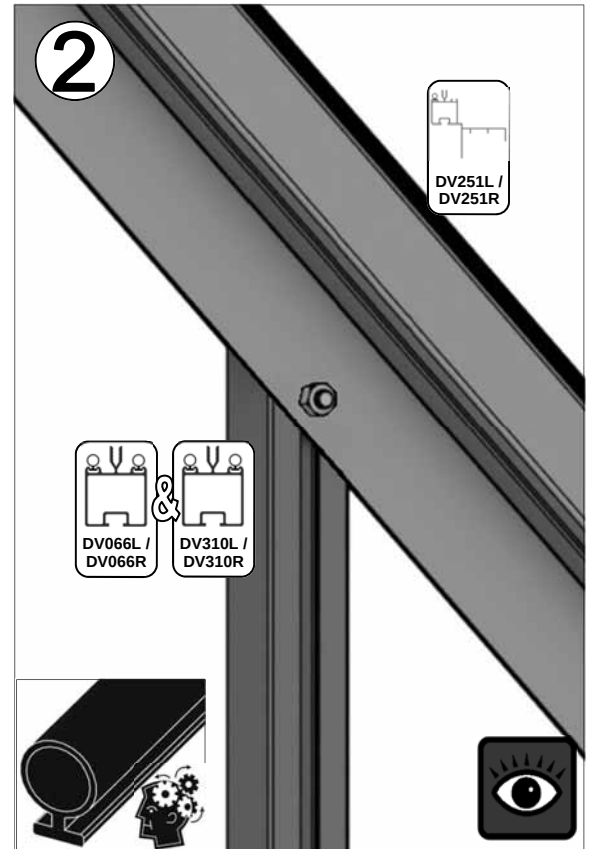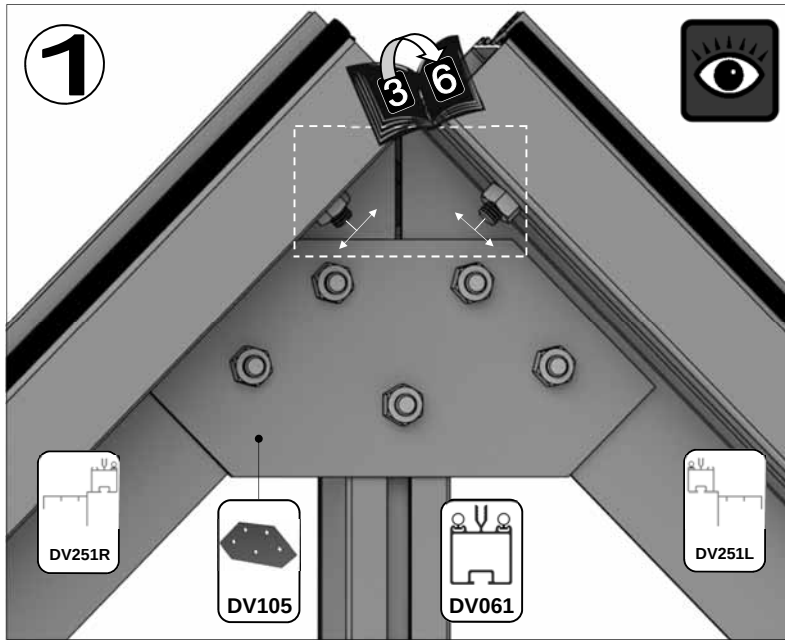




3

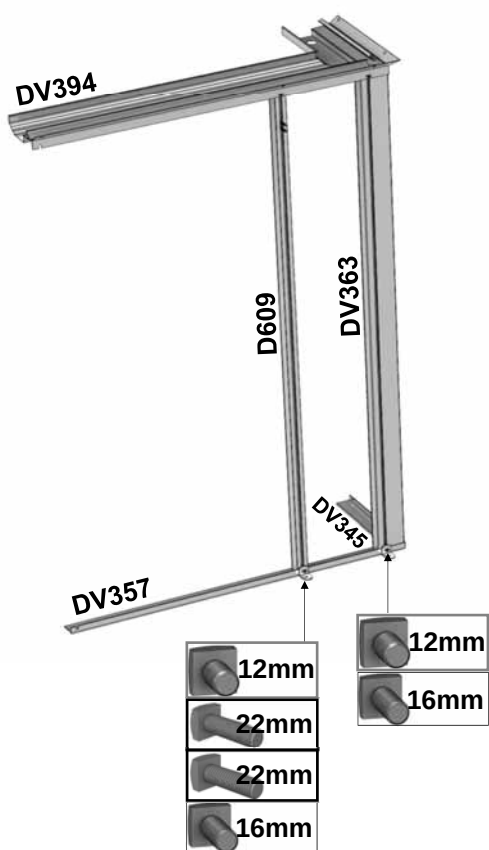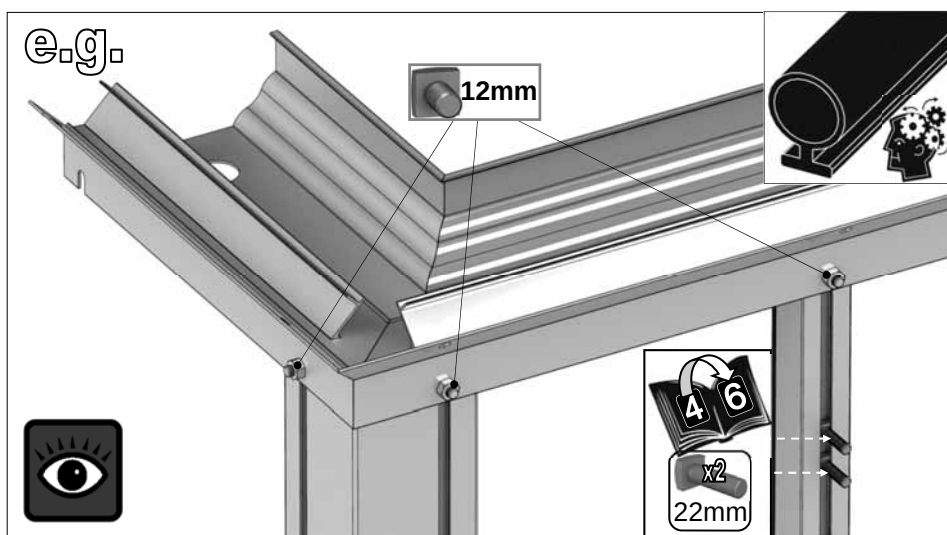



PORCH SIDES		9x8	9x12
Part No	mm	Quantity	
D609	1160		2
DV345	303	2	1
DV348	923		1
DV357	923		1
DV361	303	2	1
DV363	1160	2	
DV393	327X327	2	
DV394			1
DV395	327X947		1
D174		2	4
D227 Rubber	1000	5	10
BOL M6X12		6	8
BOL M6X16		2	4
BOL M6X22			4
NUT M6		8	12

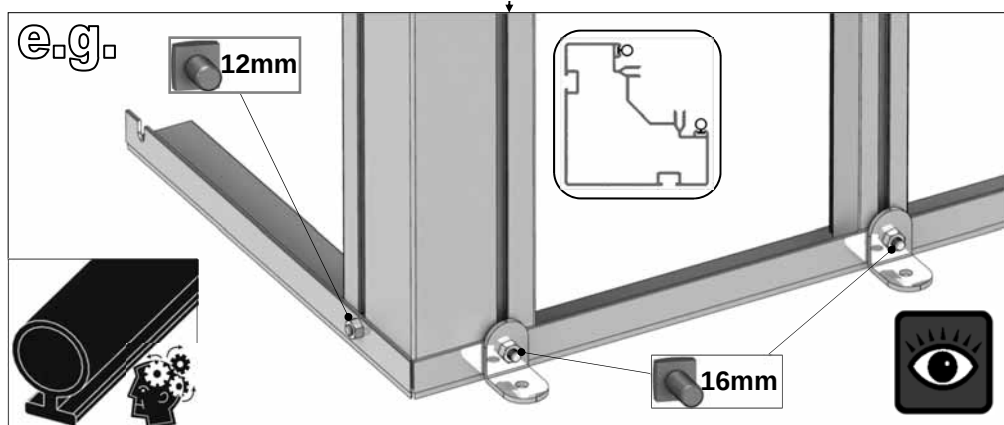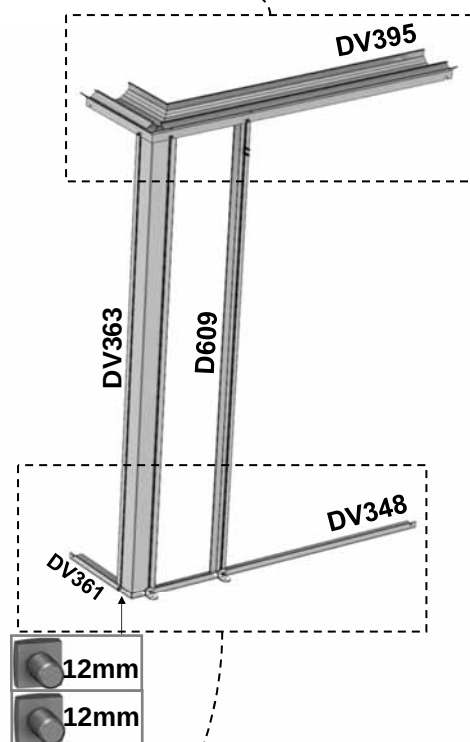


4



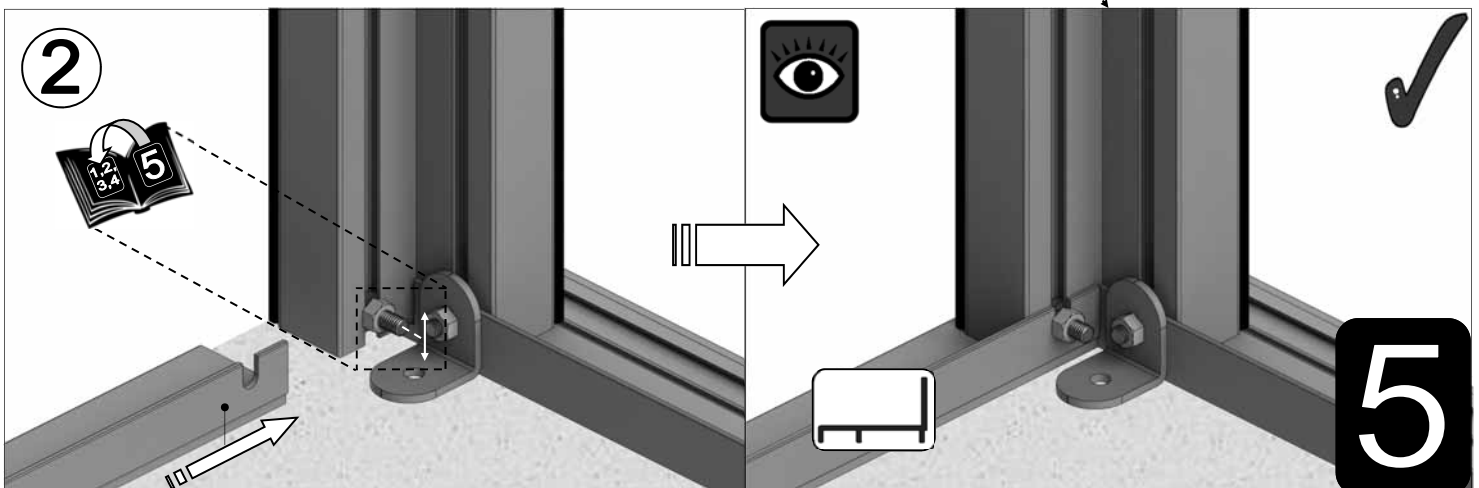
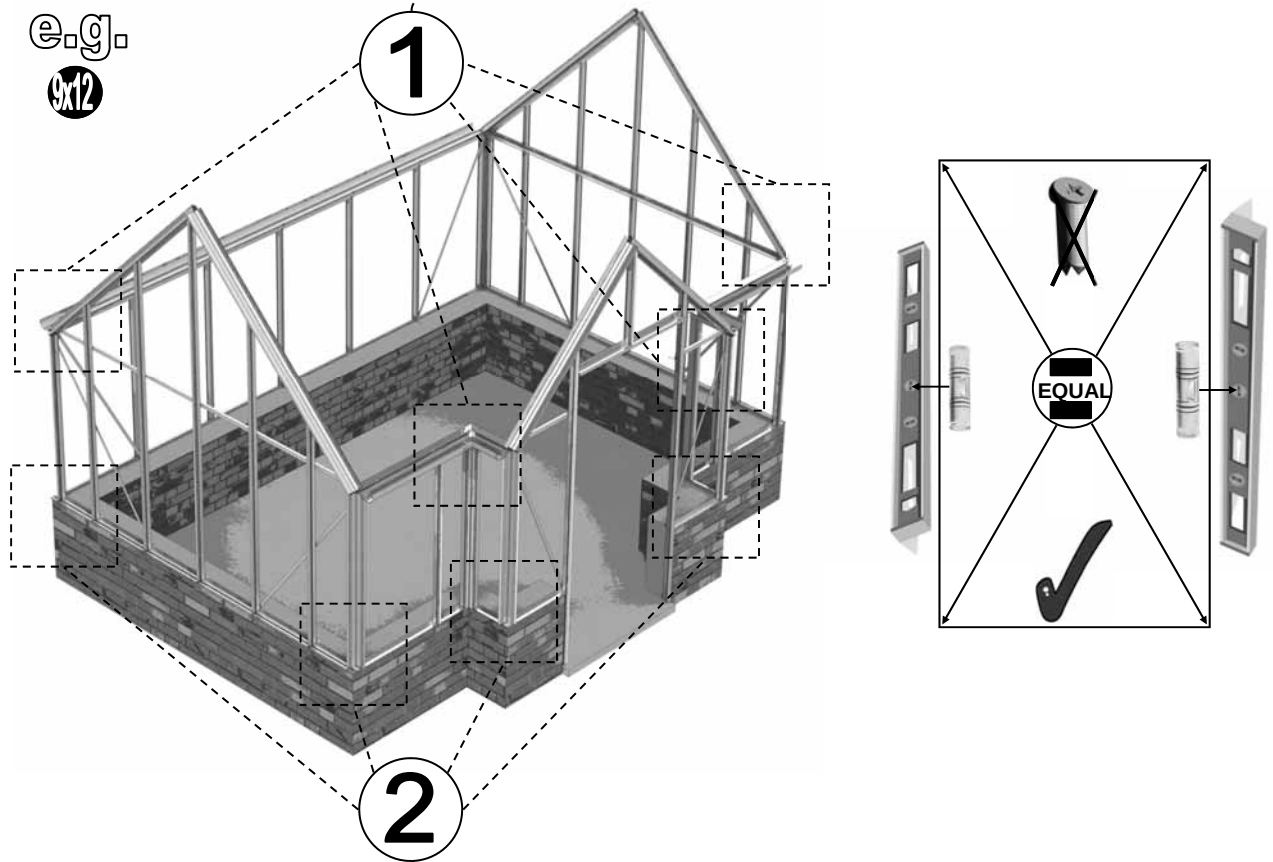
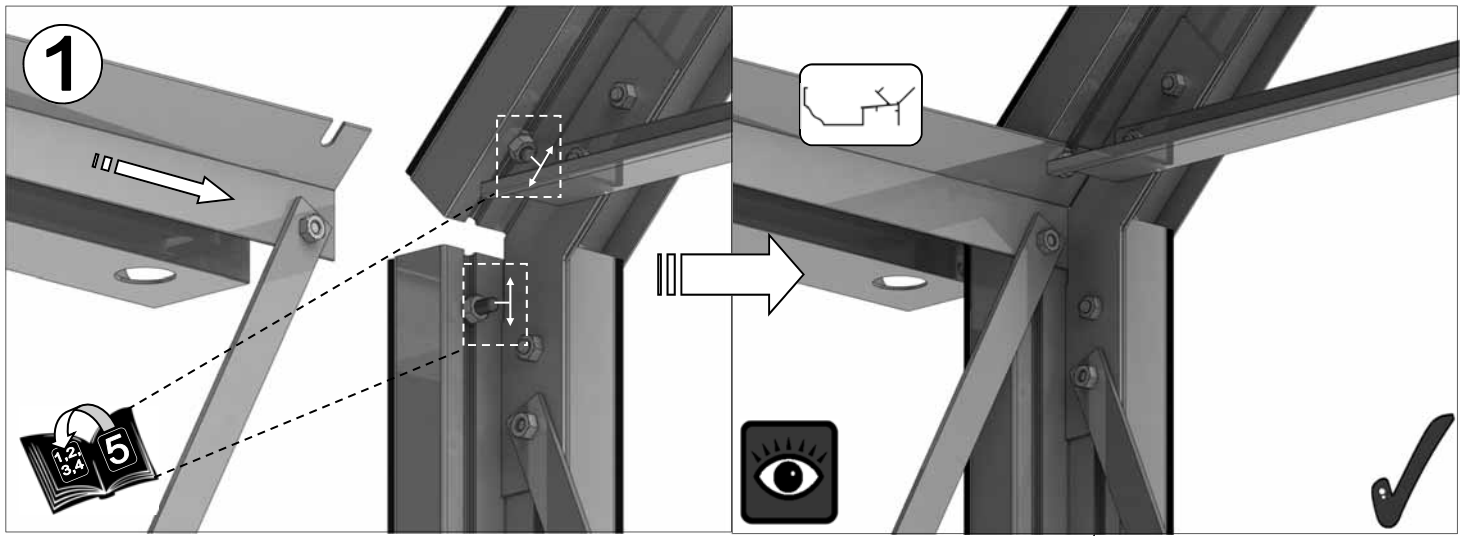




REAR ROOF		9x8	9x12
Part No	mm	Quantity	
DV100	n/a	3	7
DV201	2517	1	
DV203	3757		1
DV254	1790	3	7
D227 Rubber	1000	11	26
BOL M6X12		6	14
BOL M6X22		12	28
NUT M6		24	56

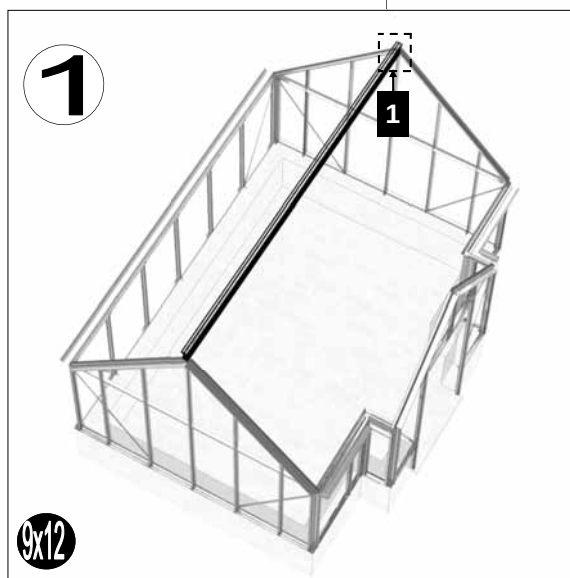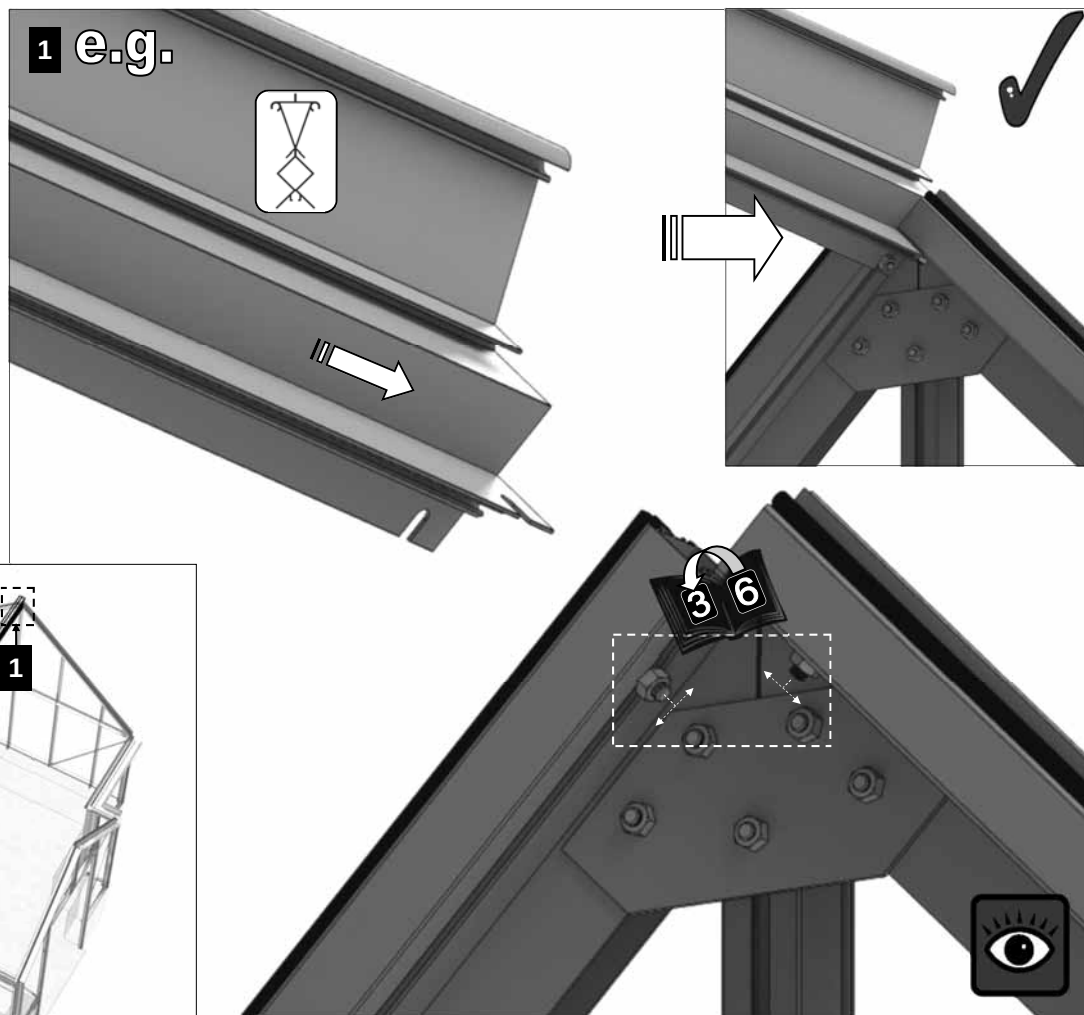



- End finials need to be pinched onto the ridge using 'DV282' grub screws.
- Depending on your ridge length a half cresting may need to be cut. Some spacer bar may also be required 'DV281' cut into two equal sections.
- Each finial and cresting piece needs to be siliconed 'D119' into place.

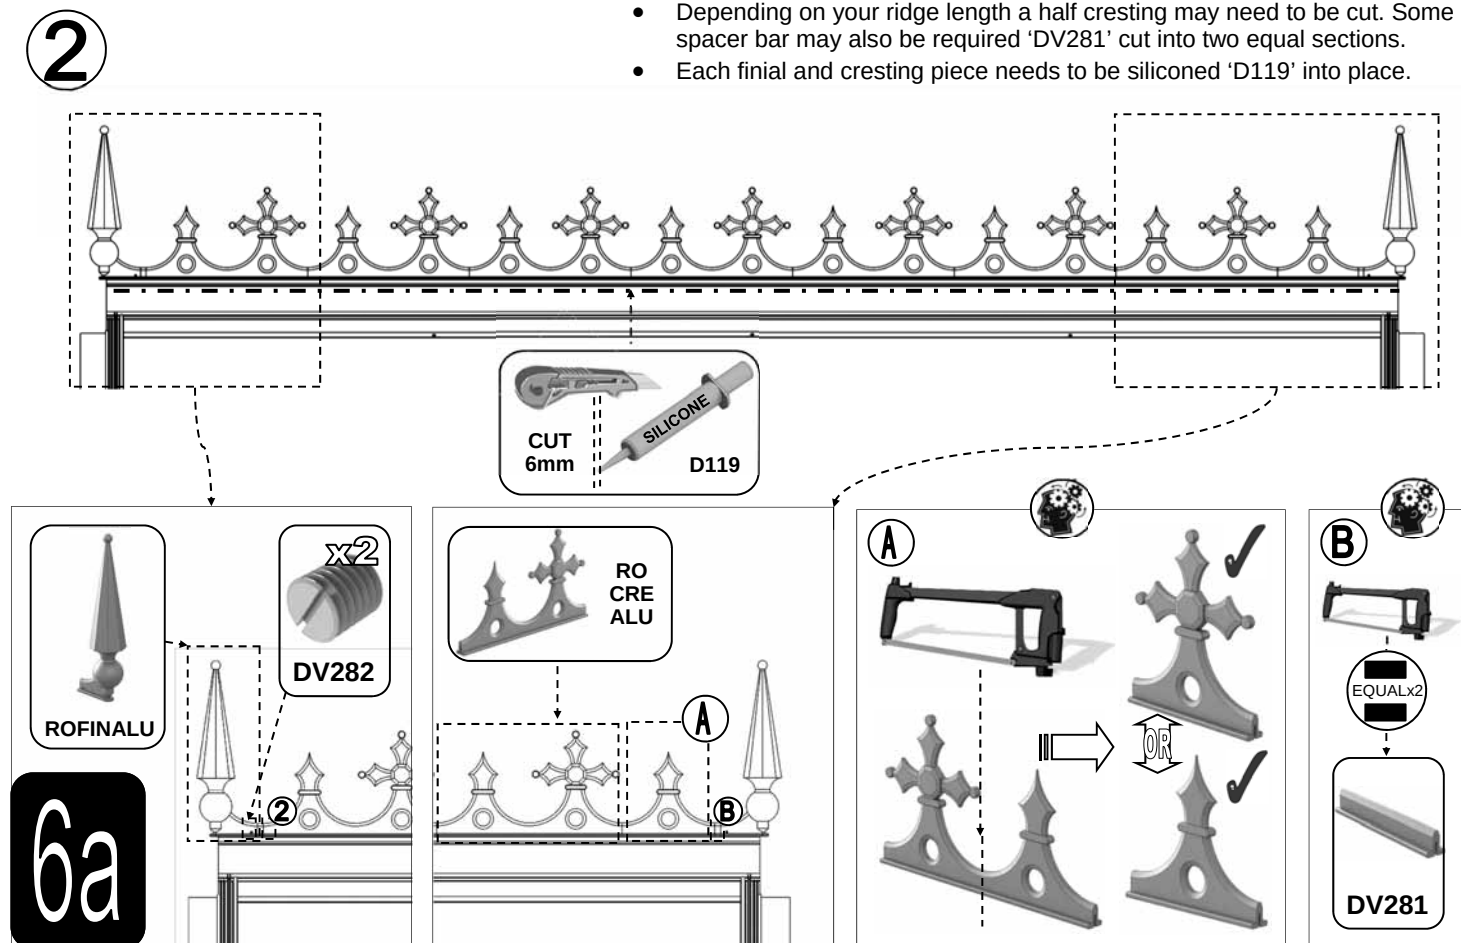

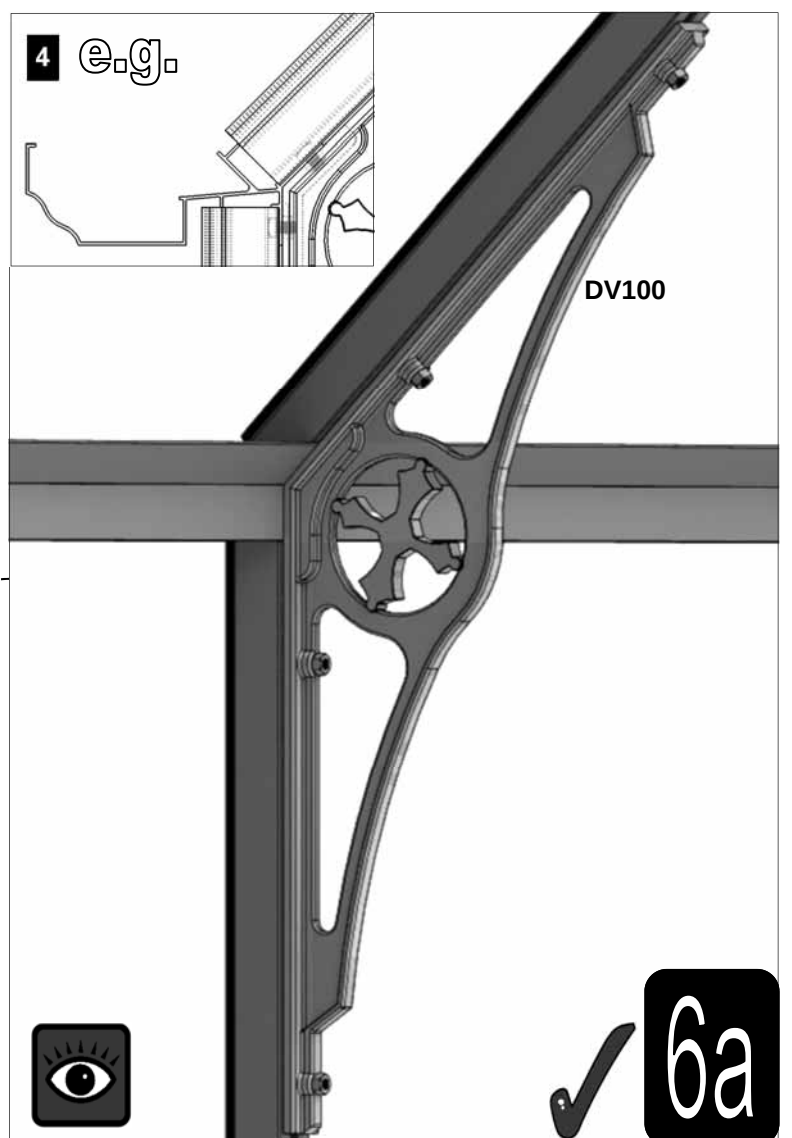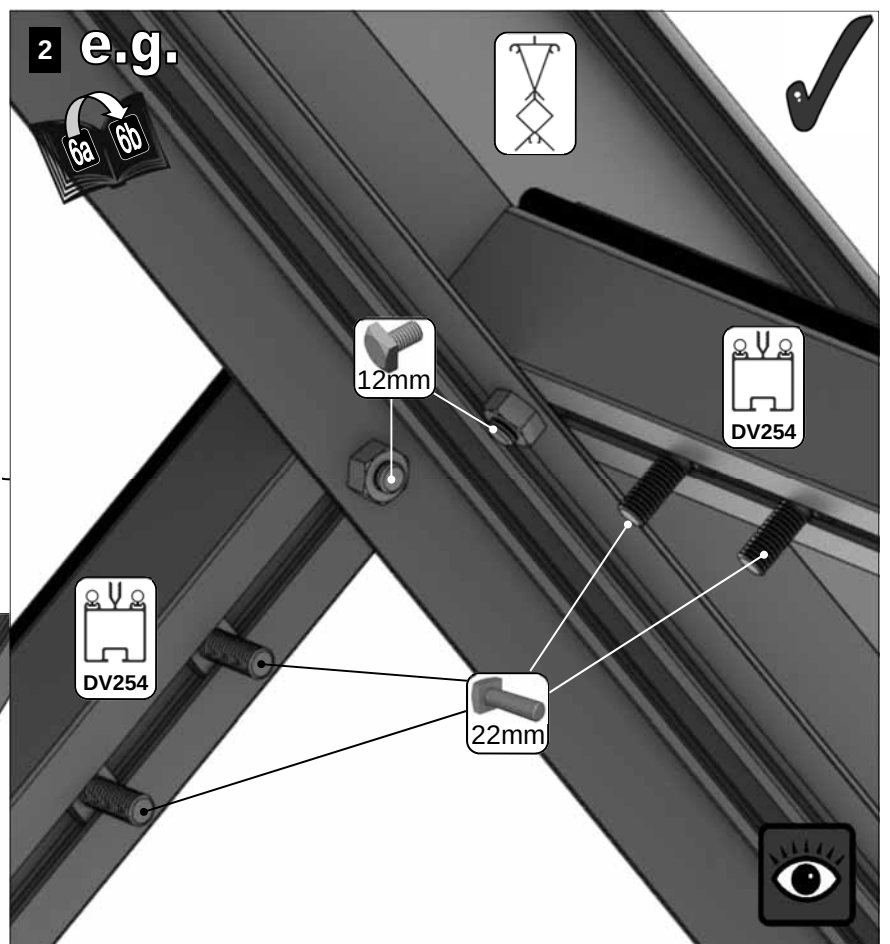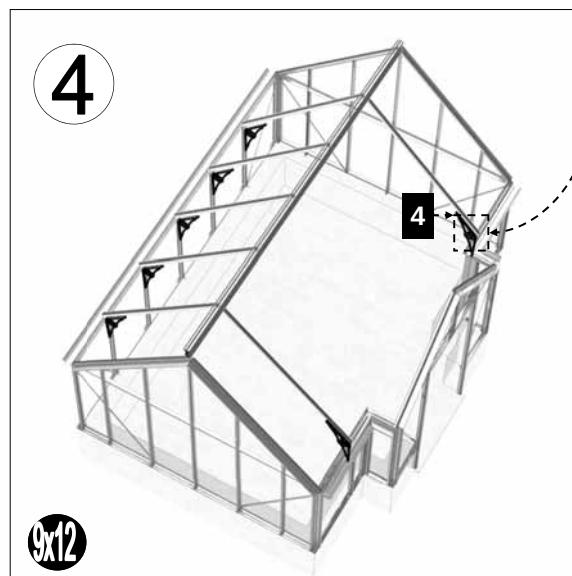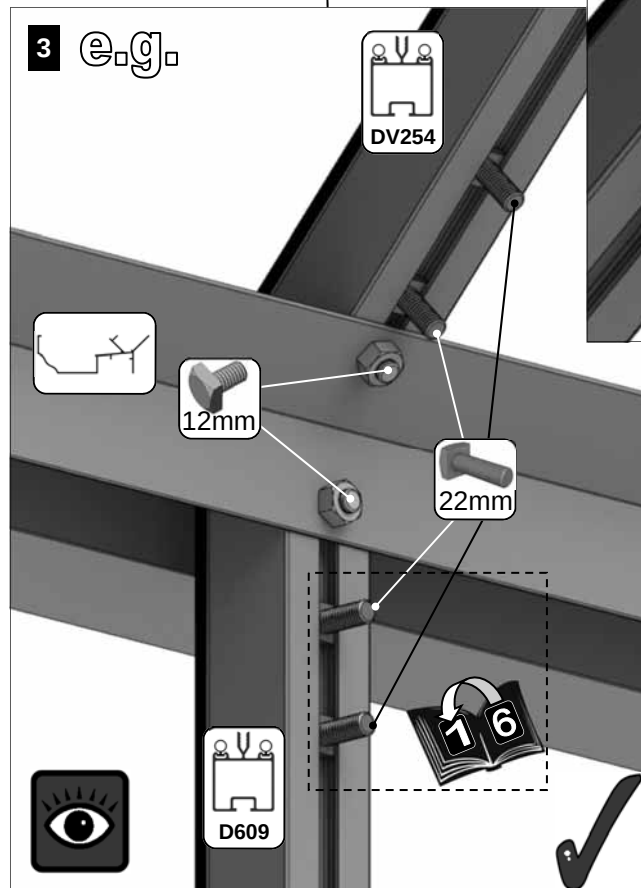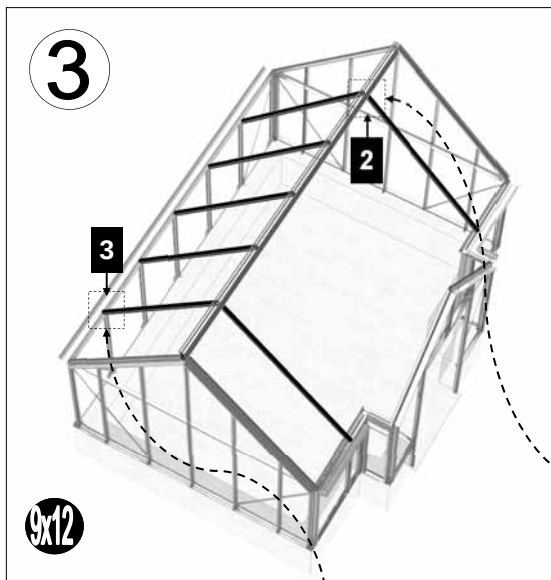

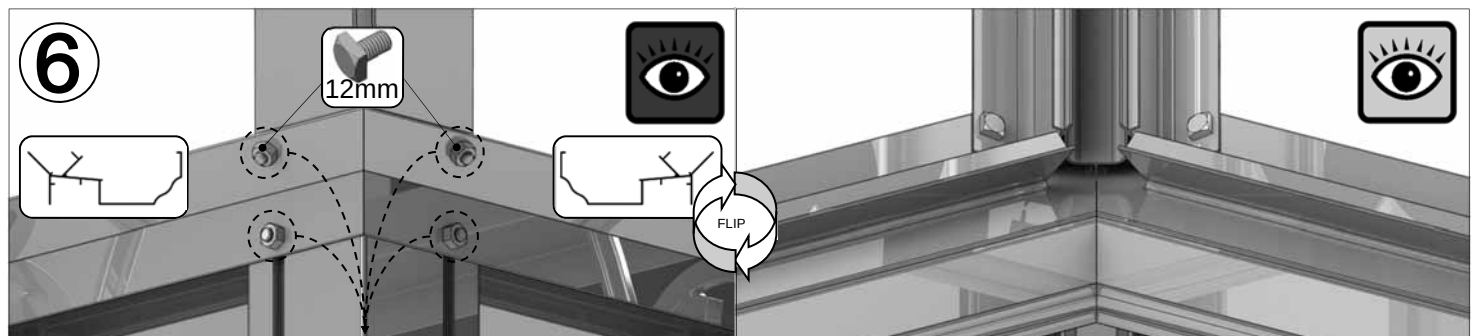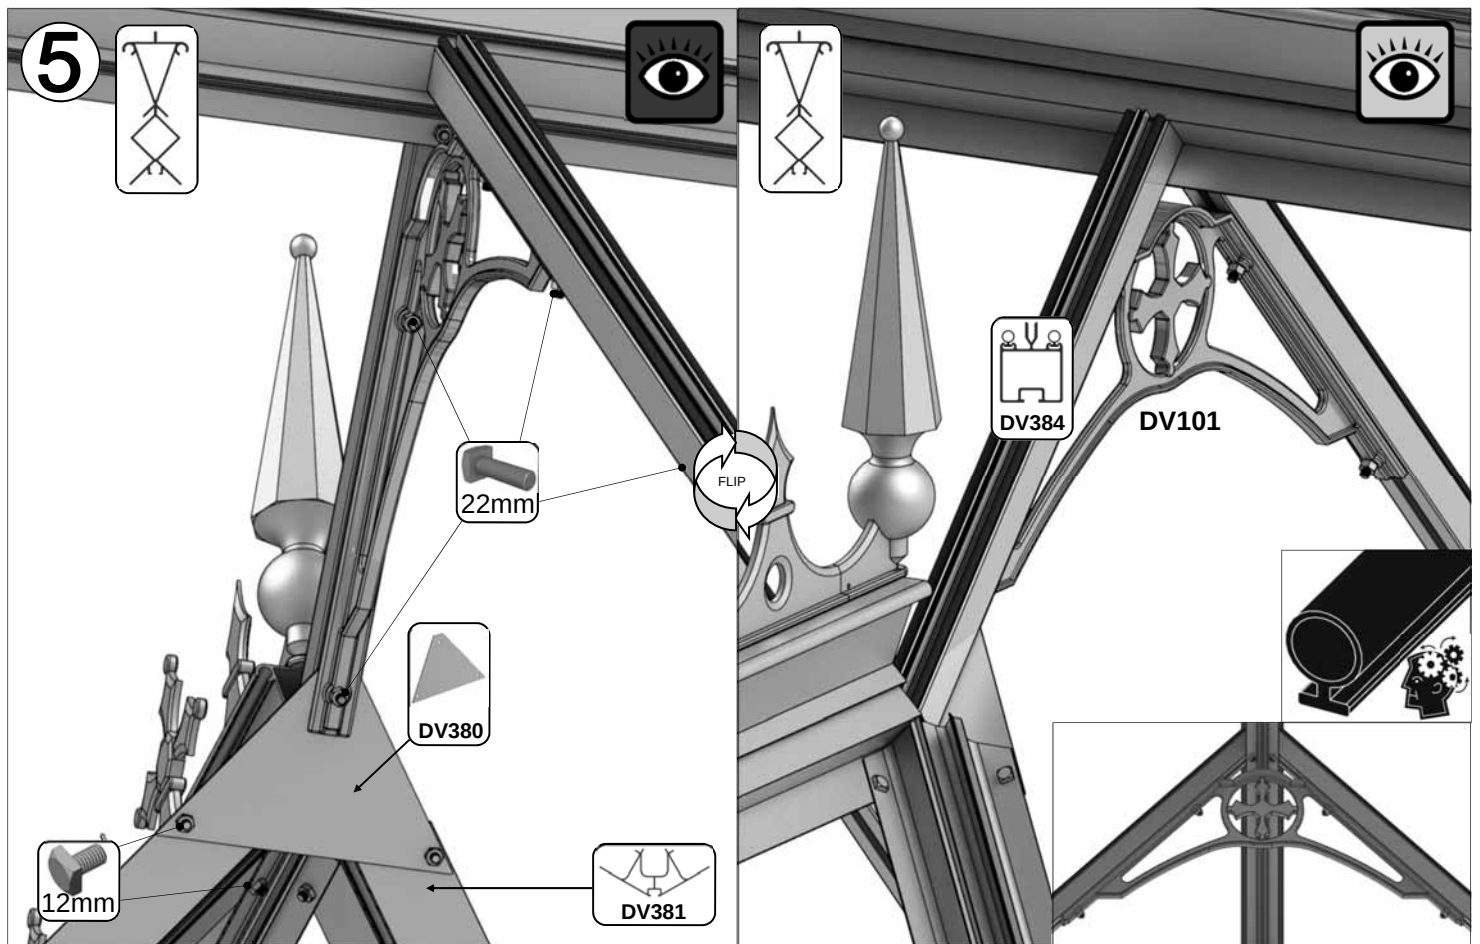

IMPORTANT: Because your porch gutter sections are welded together to eliminate the chance of any leaks the holes circled above can vary slightly in their locations. They may therefore require slight alteration to marry up with DV363 and DV381. Using an 8mm drill bit to enlarge the standard 7mm holes will for example give a little more play to aid fitting.


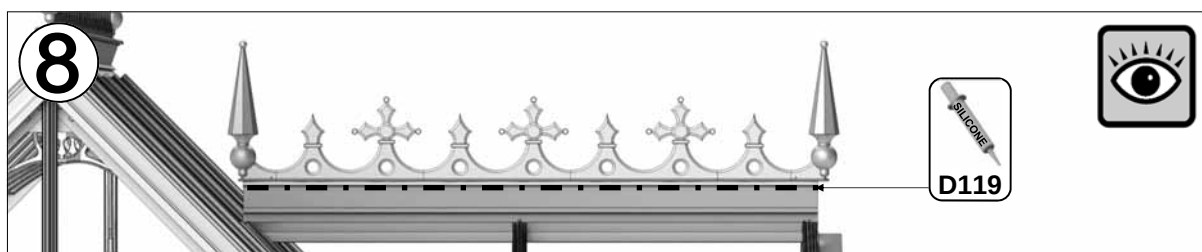
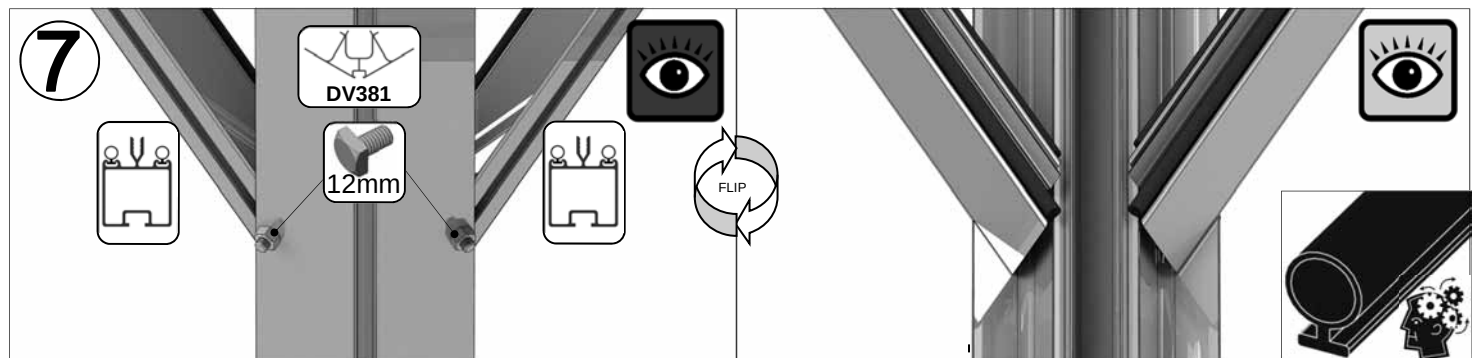


6b





Part No		mm	Quantity
D866		639	1
D863L		613	1
D863R		613	1
D862		593	1

Part No		mm	Quantity
D220 PLUS SCREW		N/A	2
D205		N/A	2
BOL M6X12		12	4
NUT M6		M6	4
8 X 12 S/T FS6017		10	2
8 x 19 S/T FS6018		19	2

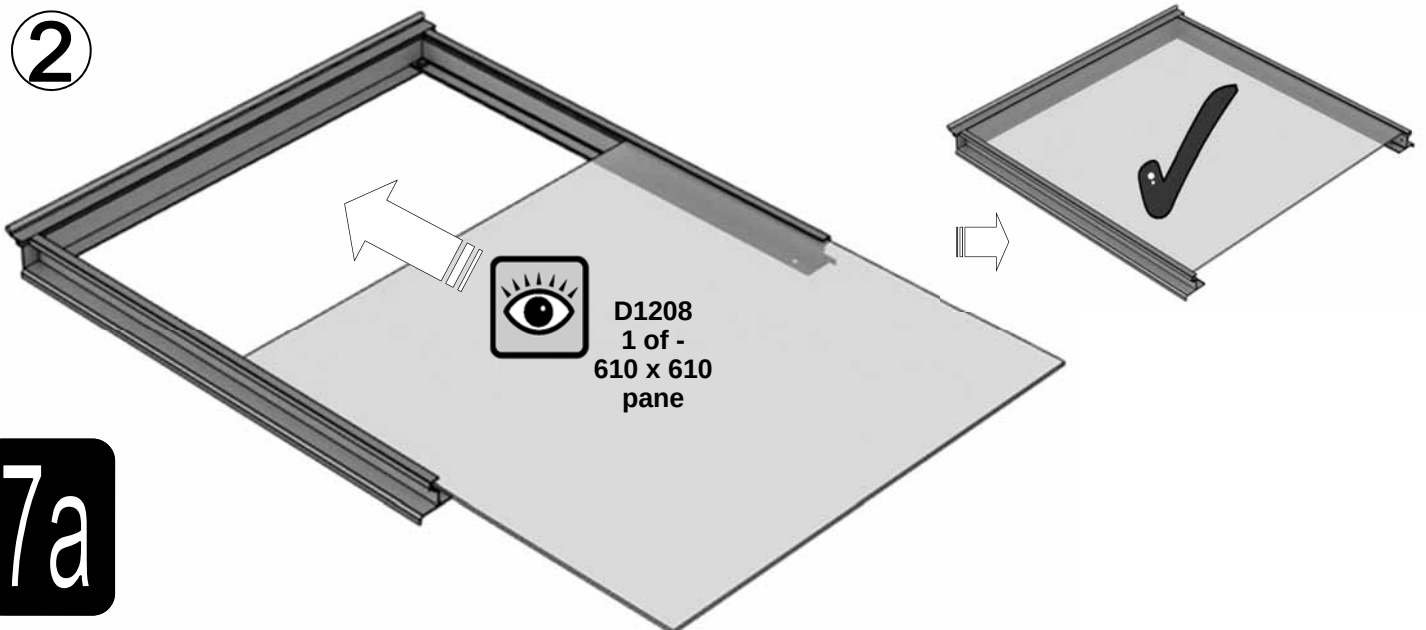
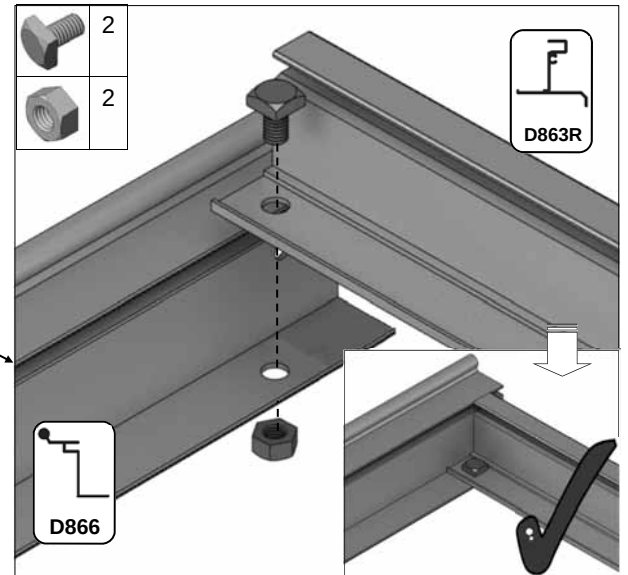
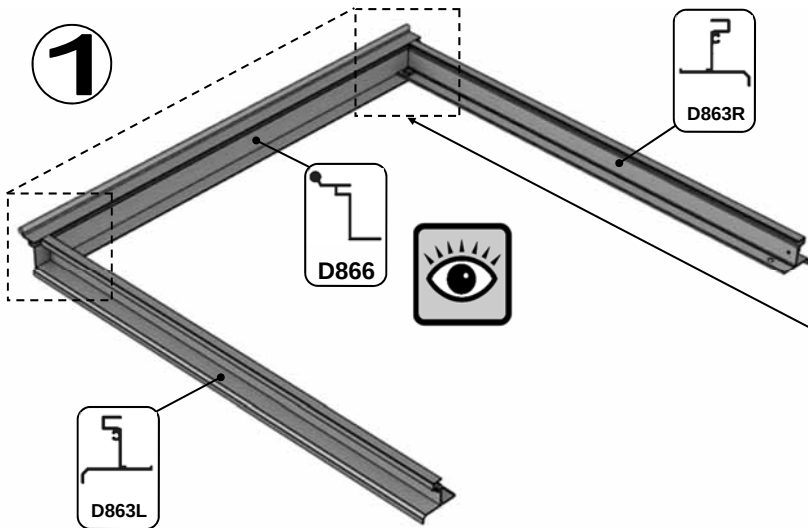


7a



3 

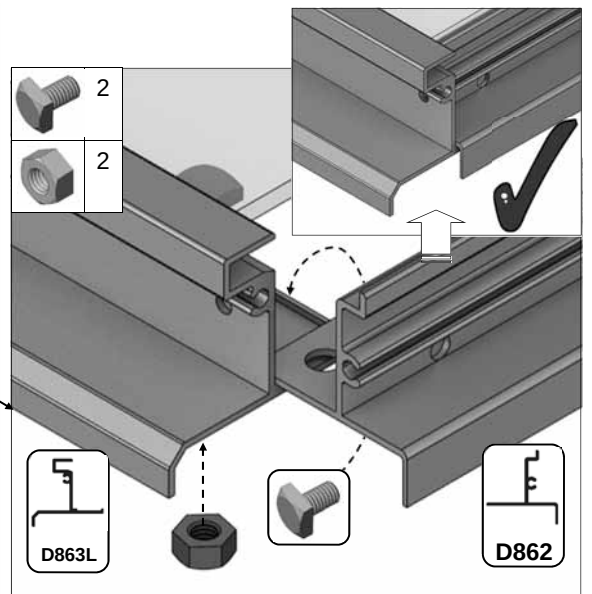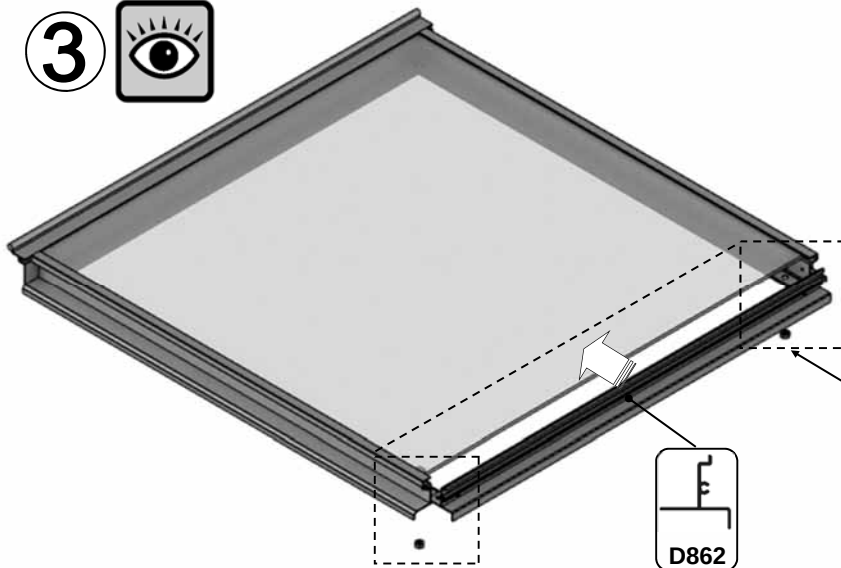

4 

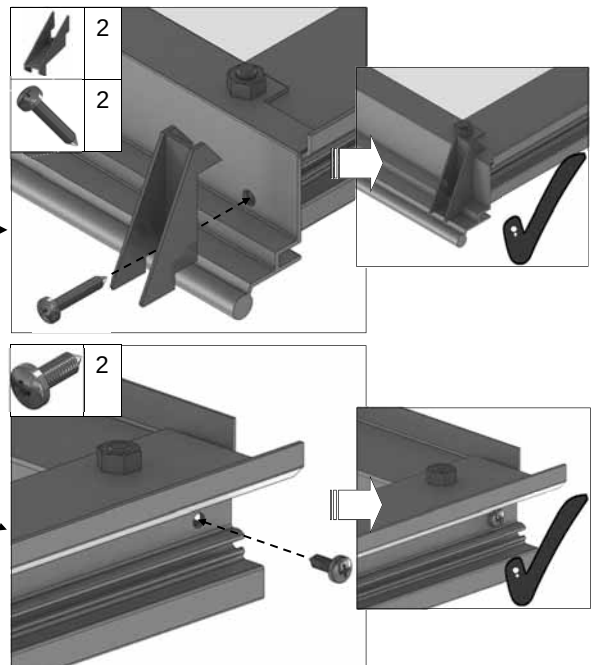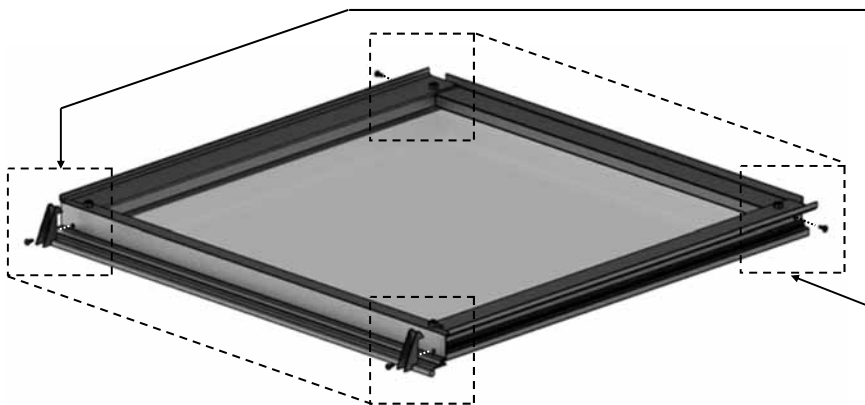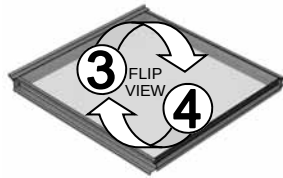

5 

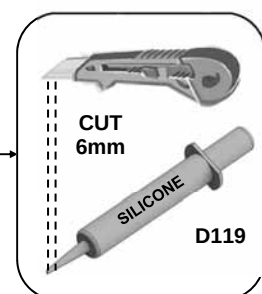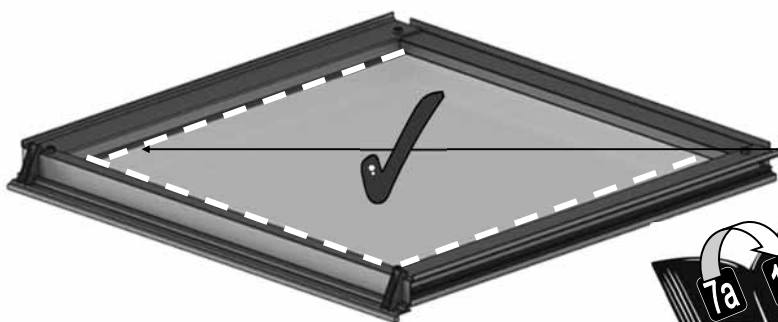



7a

1 vent
slam bar = {

Part No		mm	Quantity
BOLM6X12		12	4
BOL M6 X11CROP		10	2
NUT M6		N/A	4


Part No		mm	Quantity
D079 PLUS FLUFF		590	1
D114		N/A	2


6

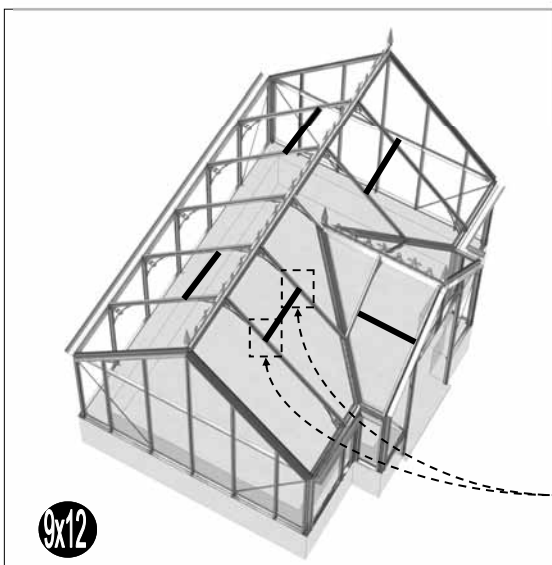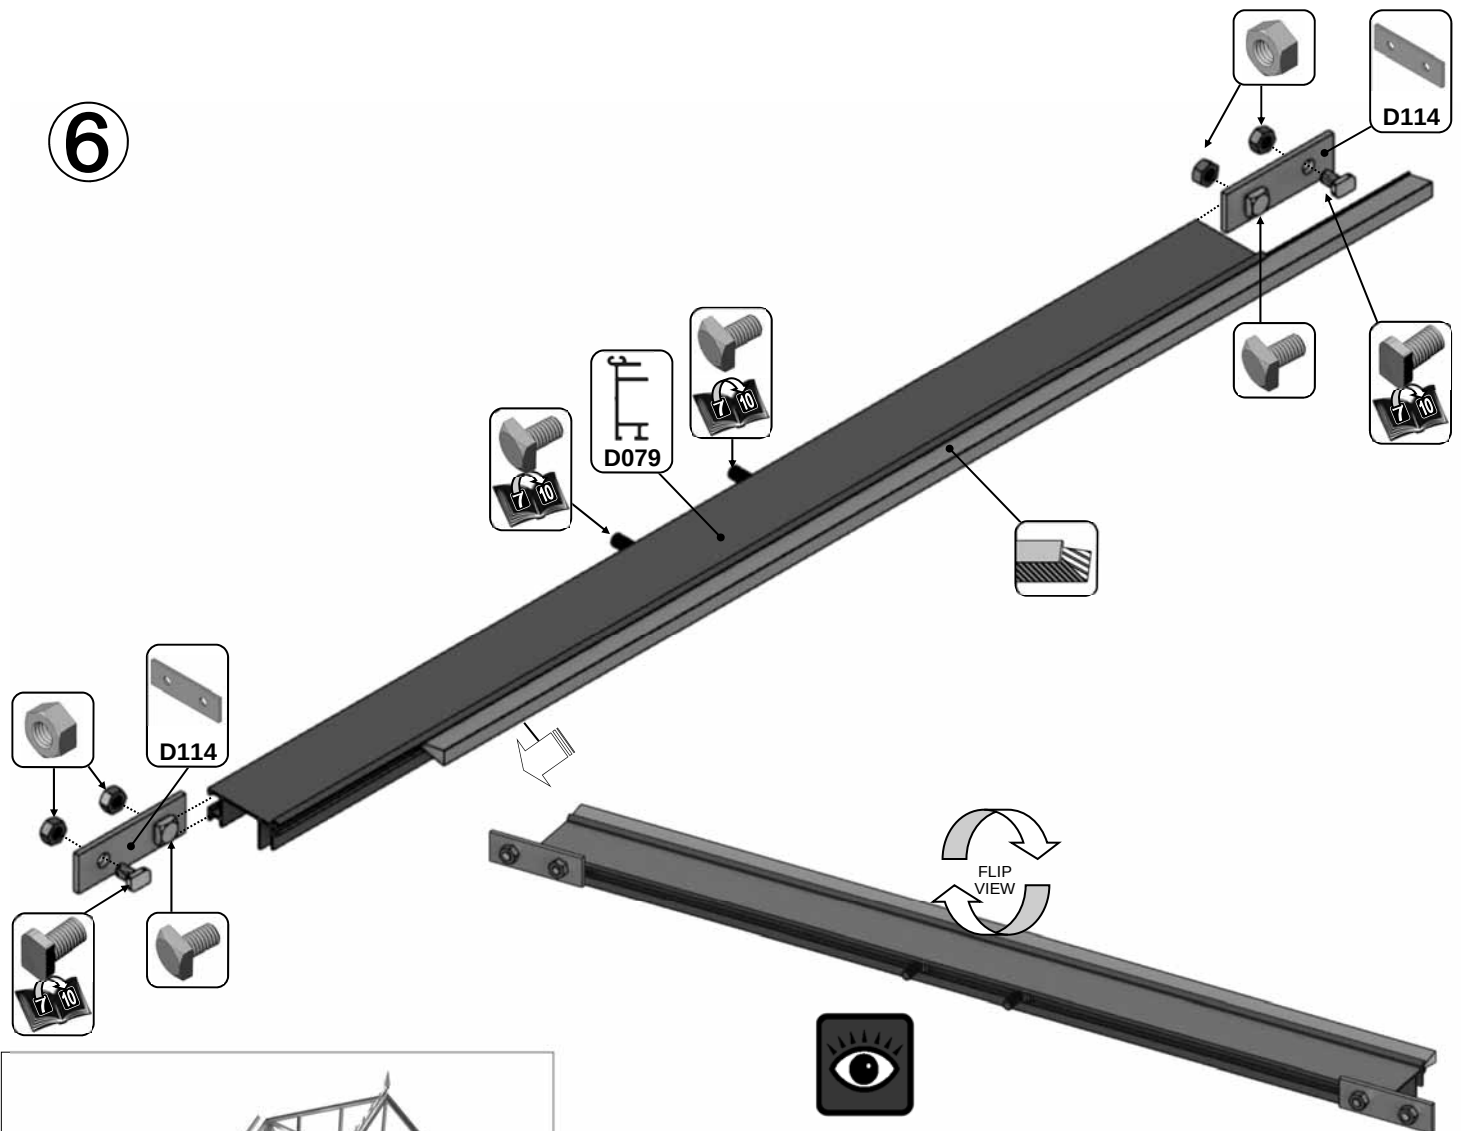





9x12

7b

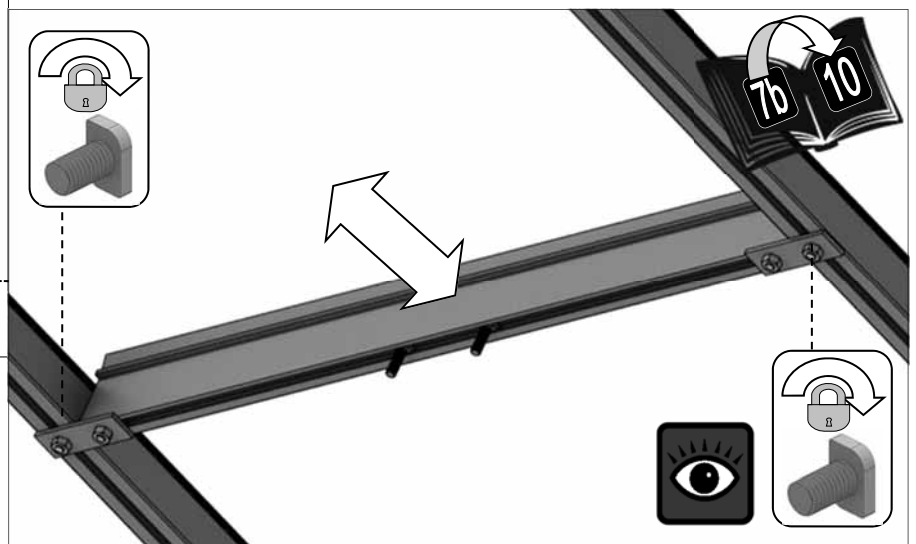

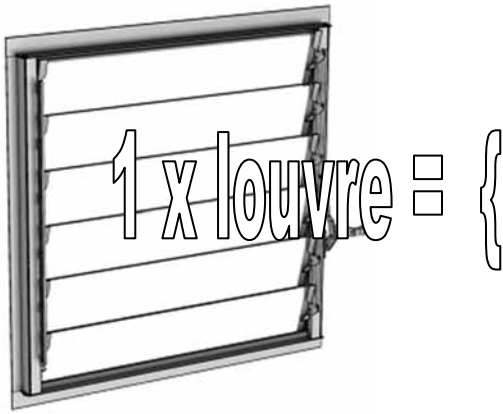

Part No		mm	Quantity
D168L		552	1
D168R (handle)		552	1
D165		612	2
D166		552	2
FS6013		12	4

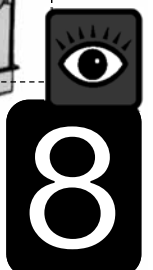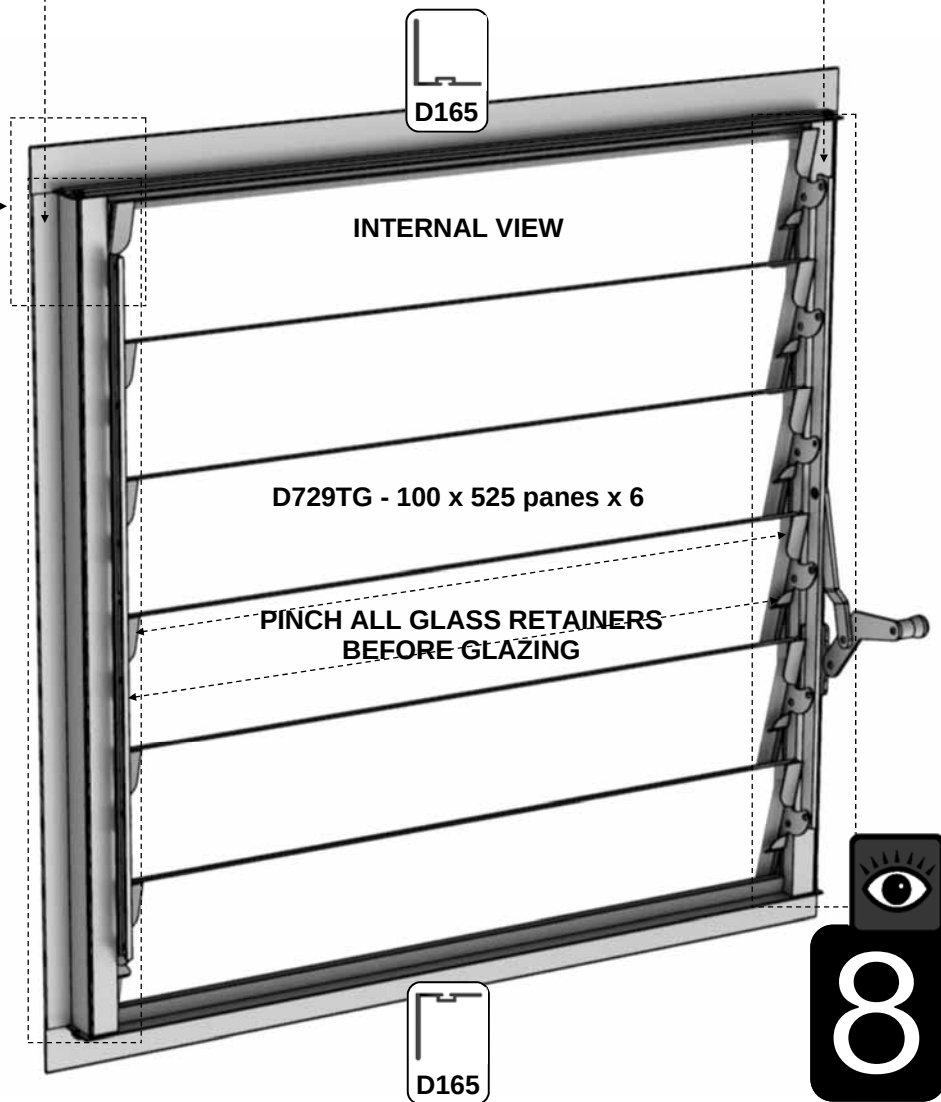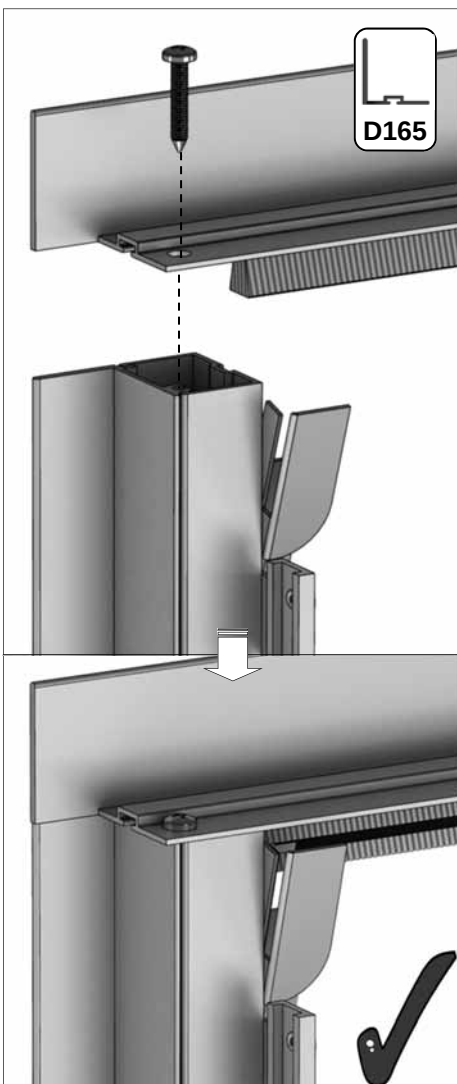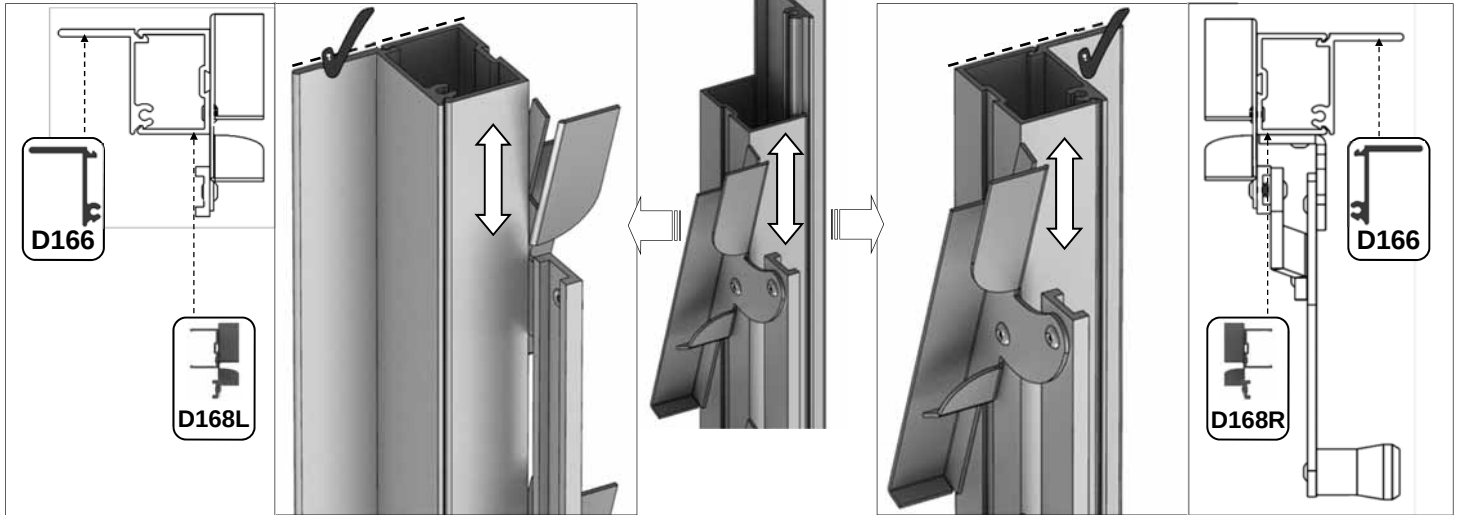

PORCH CAPS AND COVERS			9x8	9x12
PART No	SECTION	SIZE (mm)	QUANTITY	
D613		460	1	
D618		1144	7	11
D662		600	1	
DV403L/R		1505	2 + 2	
DV408		2401	2	
DV479		1384	1	
DV610L/R		1972	2 + 2	
DV633L/R		2173	1 + 1	
DV654		1821	3	7
DV675L/R		863	1 + 1	
DV685L/R		1305	1 + 1	
D610		1160	6	
D620		1144	6	
DV650		1345	2	
DV651		1790	4	
D614		1162	6	
D619		1144	13	17
D666		602	1	
D685		459	1	
DV435		2401	2	
DV480		1384	1	
DV611L/R		1972	2 + 2	
DV615L/R		1505	2 + 2	
DV634L/R		2173	1 + 1	
DV656		1378	2	
DV657		1821	7	11
DV679L/R		863	1 + 1	
DV686L/R		1305	1 + 1	

GLAZING (plans pto):



Glass and aluminium can potentially cause injury. Please ensure you wear protective goggles, gloves, headgear and suitable footwear when assembling and glazing the building.




Please remember that glass is fragile and should be handled with extreme care. Always clear up and dispose of any breakages immediately.

Layout the plastic bar cappings e.g. D618 and covers e.g. D619 around the building like a sundial checking that all is present and correct. You can also place the roof cappings in the gutters so they are closer to hand.


If you have a building which has aluminium cover caps then the roof covers are held in place with low-profile countersunk screws 'FS6020'. It looks neatest if all of these screws go towards the ridges of the building, see right.

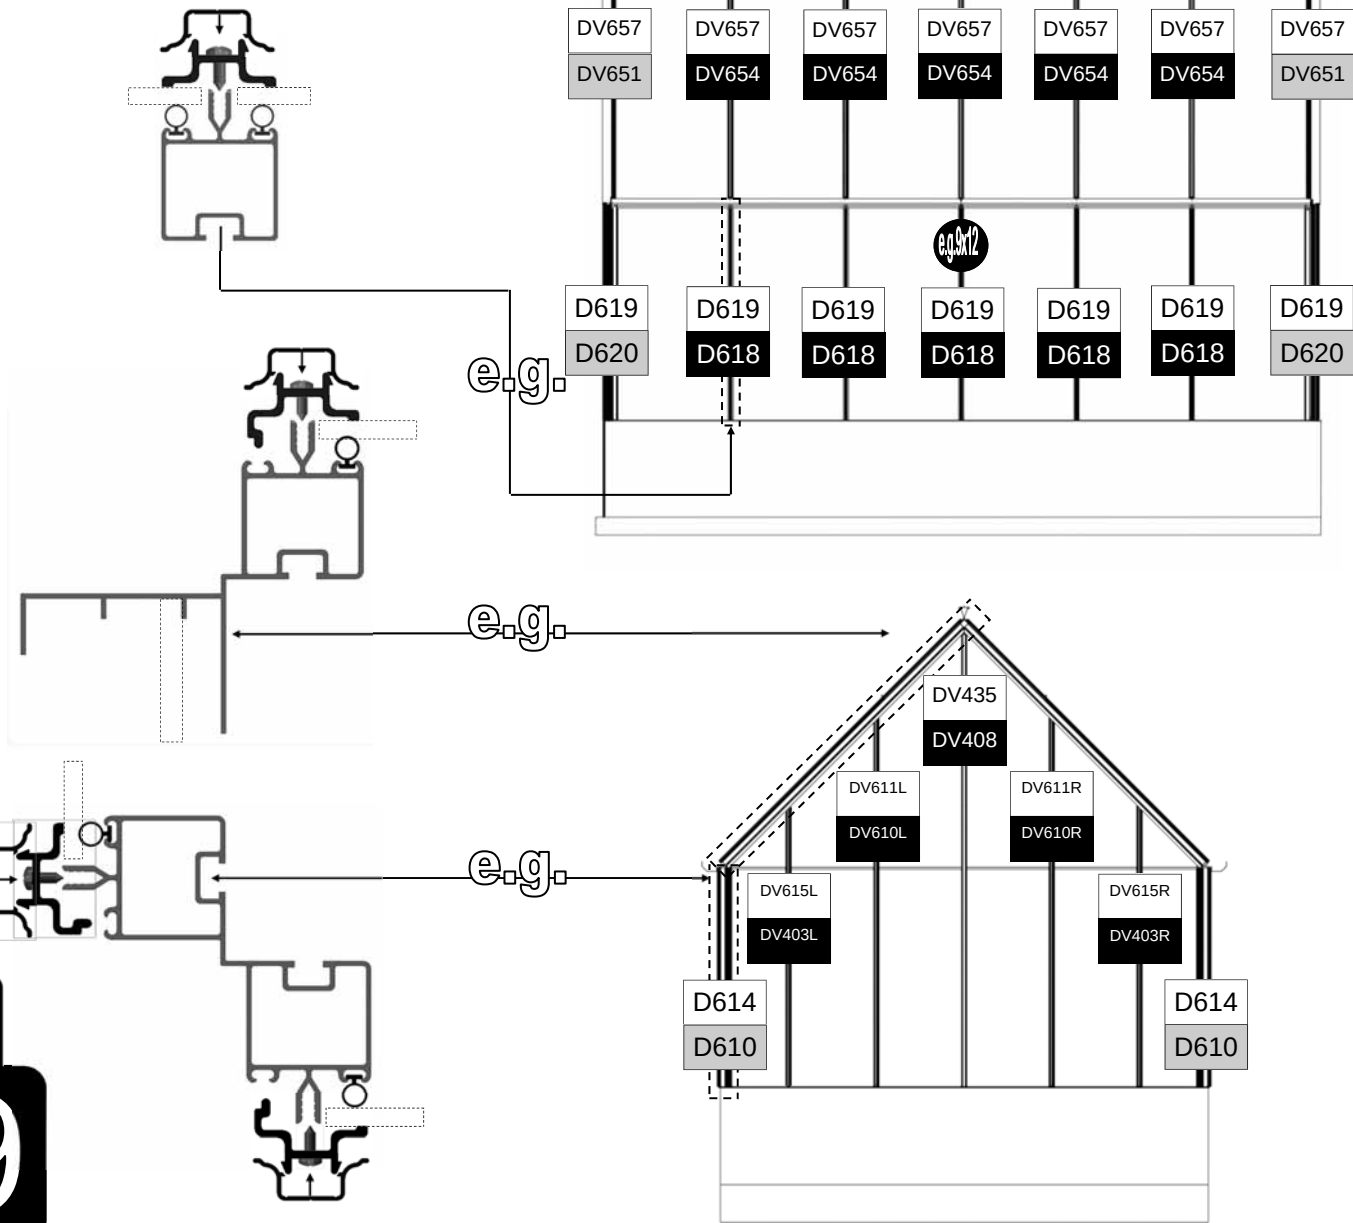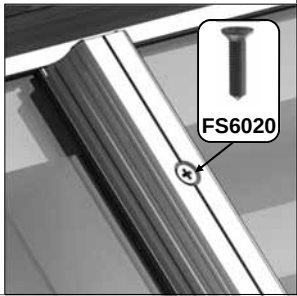

9x8


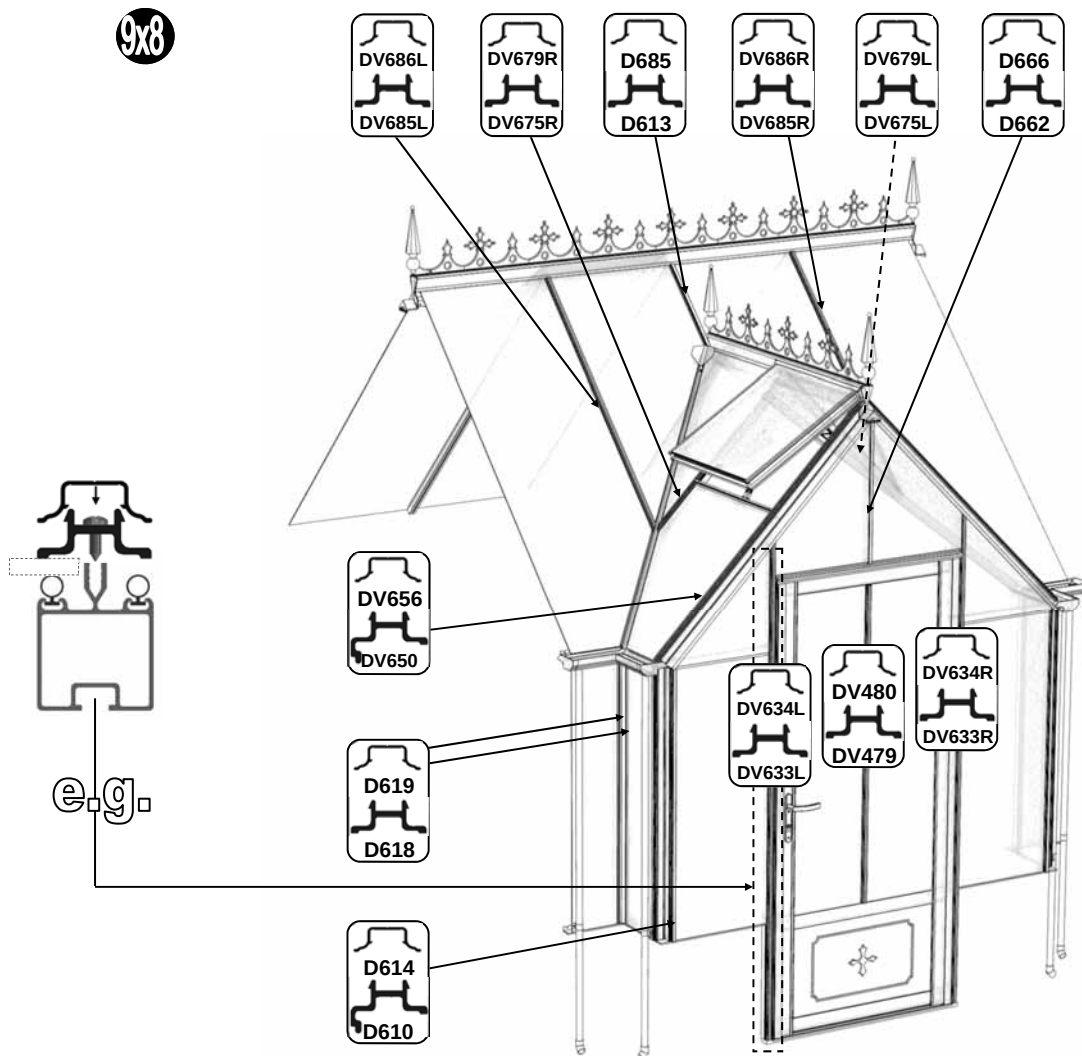



9x12

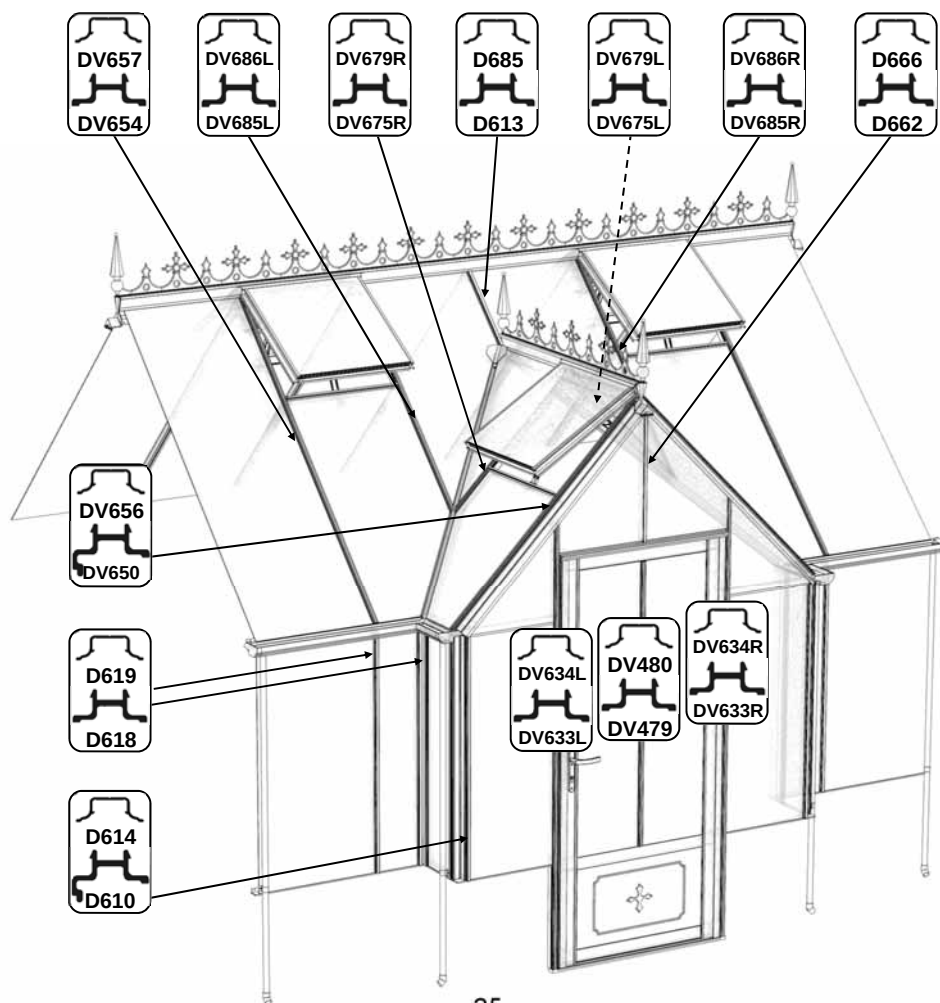

PORCH GLASS			9x8	9x12	9x16	9x20	9x24
PART No		Size (mm)	QUANTITY				
D624	M	610 X 550	2		4		6
D625	N	305 X 1162	4				
D729	L	525 X 100	12		24		36
D769	G	457 X 1162	10				
D1208	A	610 X 610	2	5		7	
D1216	S	610 X 1162	2	6	8	12	14
DV507	P	ANGLE	4				
DV700	D	357 X 1384	2 FITTED IN DOOR				
DV705	R	610 X 1828	3	6	8	12	14
DV710	C	ANGLE	2				
DV712	H	ANGLE	2				
DV713	K	ANGLE	4				
DV714	J	ANGLE	4				
DV721	U	610 X 1236	1	2	4		6
DV725	E	ANGLE	2				
DV735	W	215 X 1162	4				
DV737	T	ANGLE	1				
DV743	X	ANGLE		2		2	
DV744	Y	SPECIAL ANGLE	2				
DV746	Z	ANGLE	1				
DV747	O	ANGLE	2		2		2
D223/B		Cut to 904mm	1				
D101 / ROSEPS		610 long (inc cuts to 457&305mm)	14 (inc louvers)		16 (inc louvers)		18 (...)







IMPORTANT: On the roof sections please make sure that you place a screw around 25mm / 1" from the bottom of each capping strip (create a hole in the plastic if required) and that the screws are nice and tight to avoid any glass slippage.

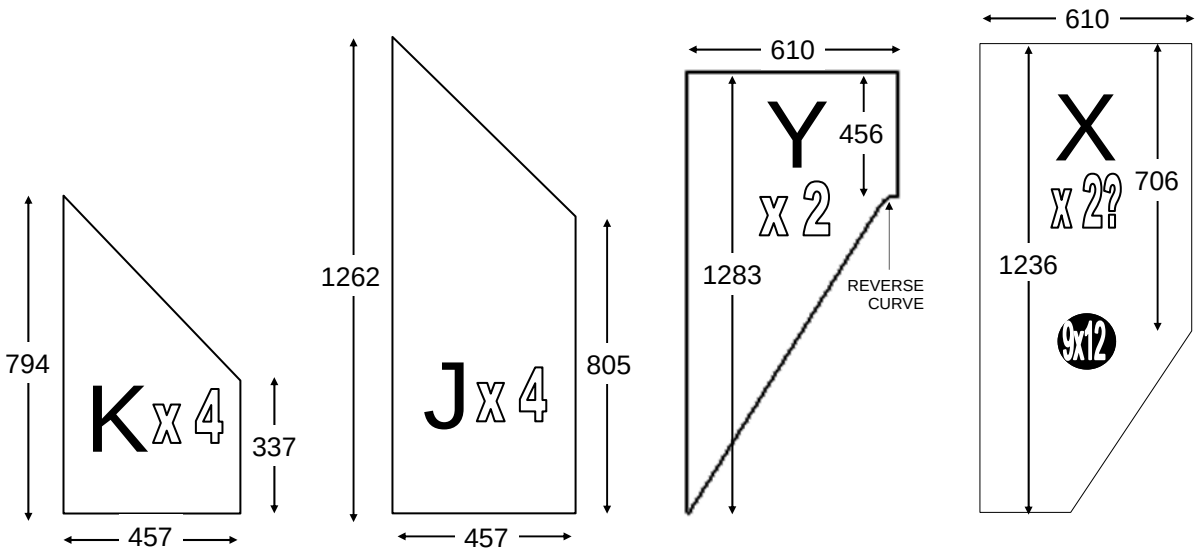
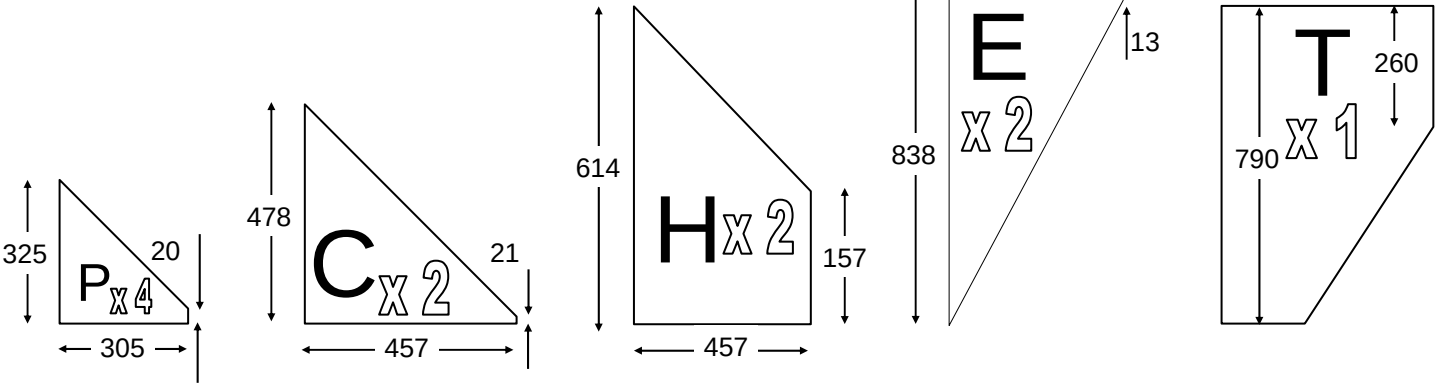







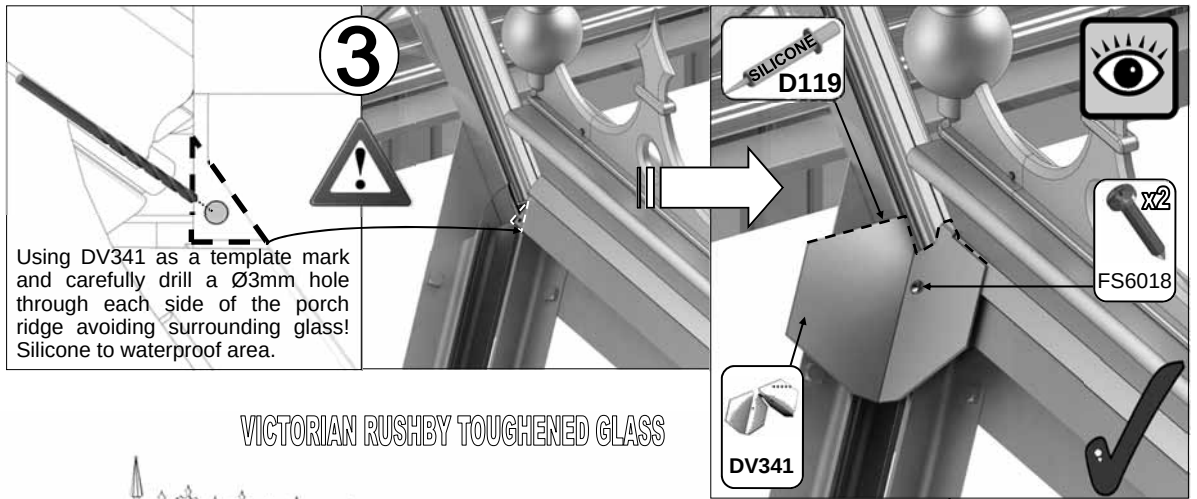





Using DV341 as a template mark and carefully drill a Ø3mm hole through each side of the porch ridge avoiding surrounding glass! Silicone to waterproof area.

VICTORIAN RUSHBY TOUGHENED GLASS

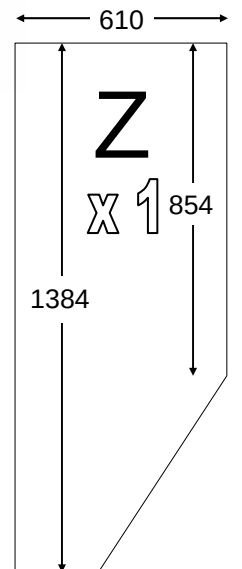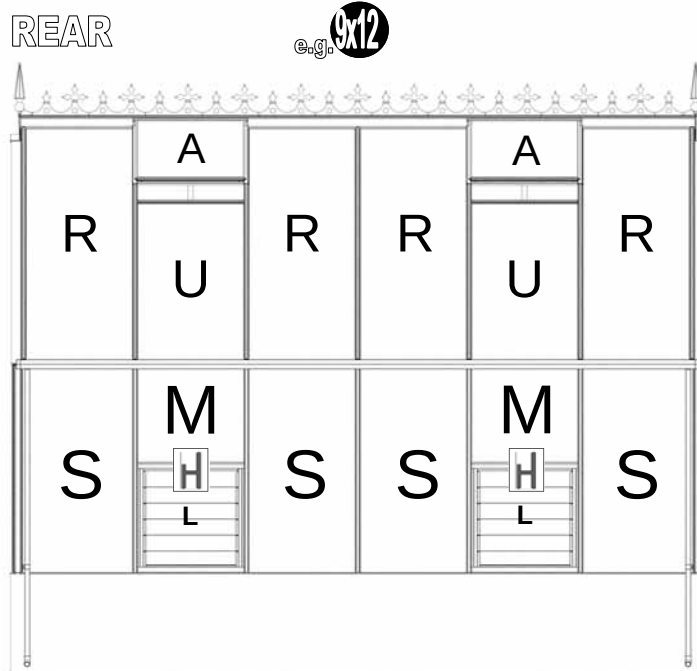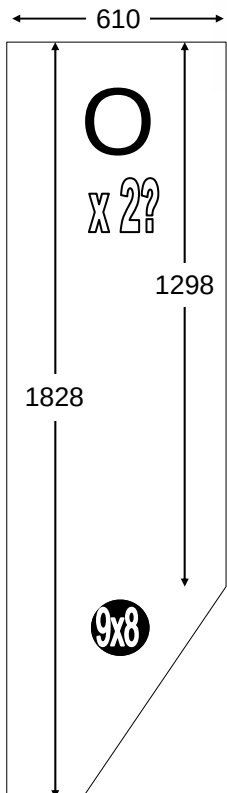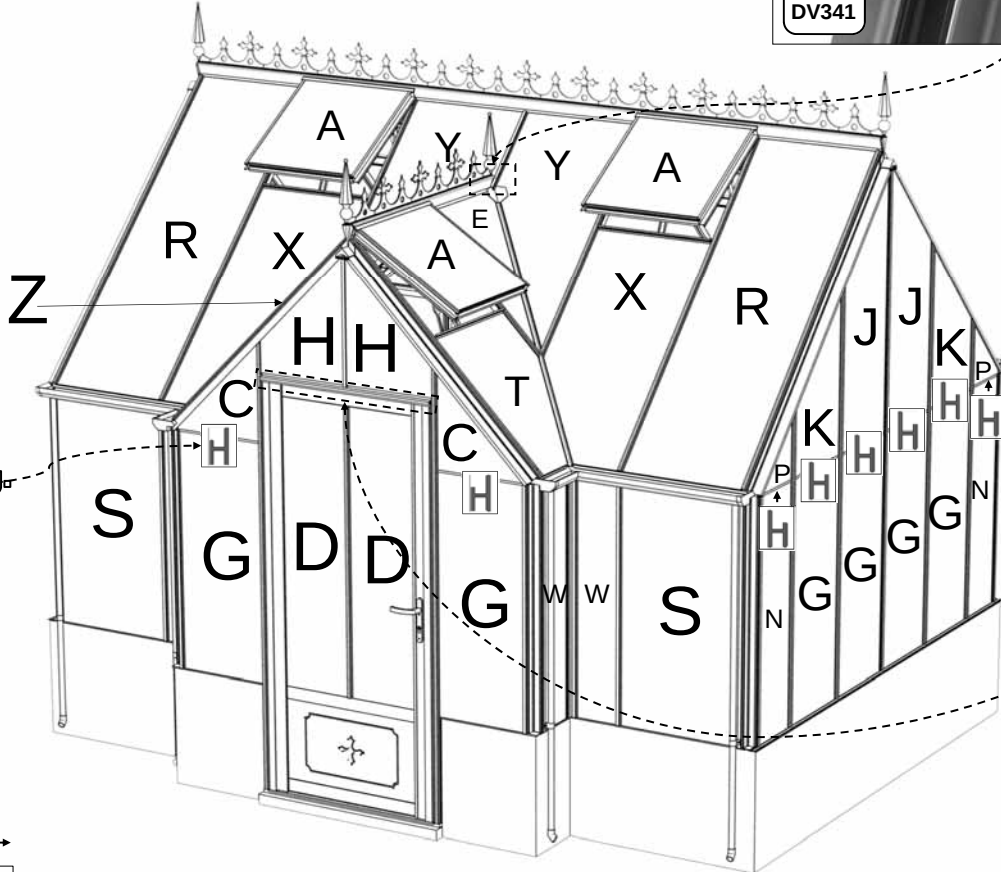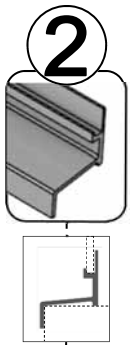
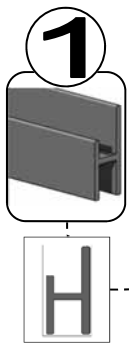



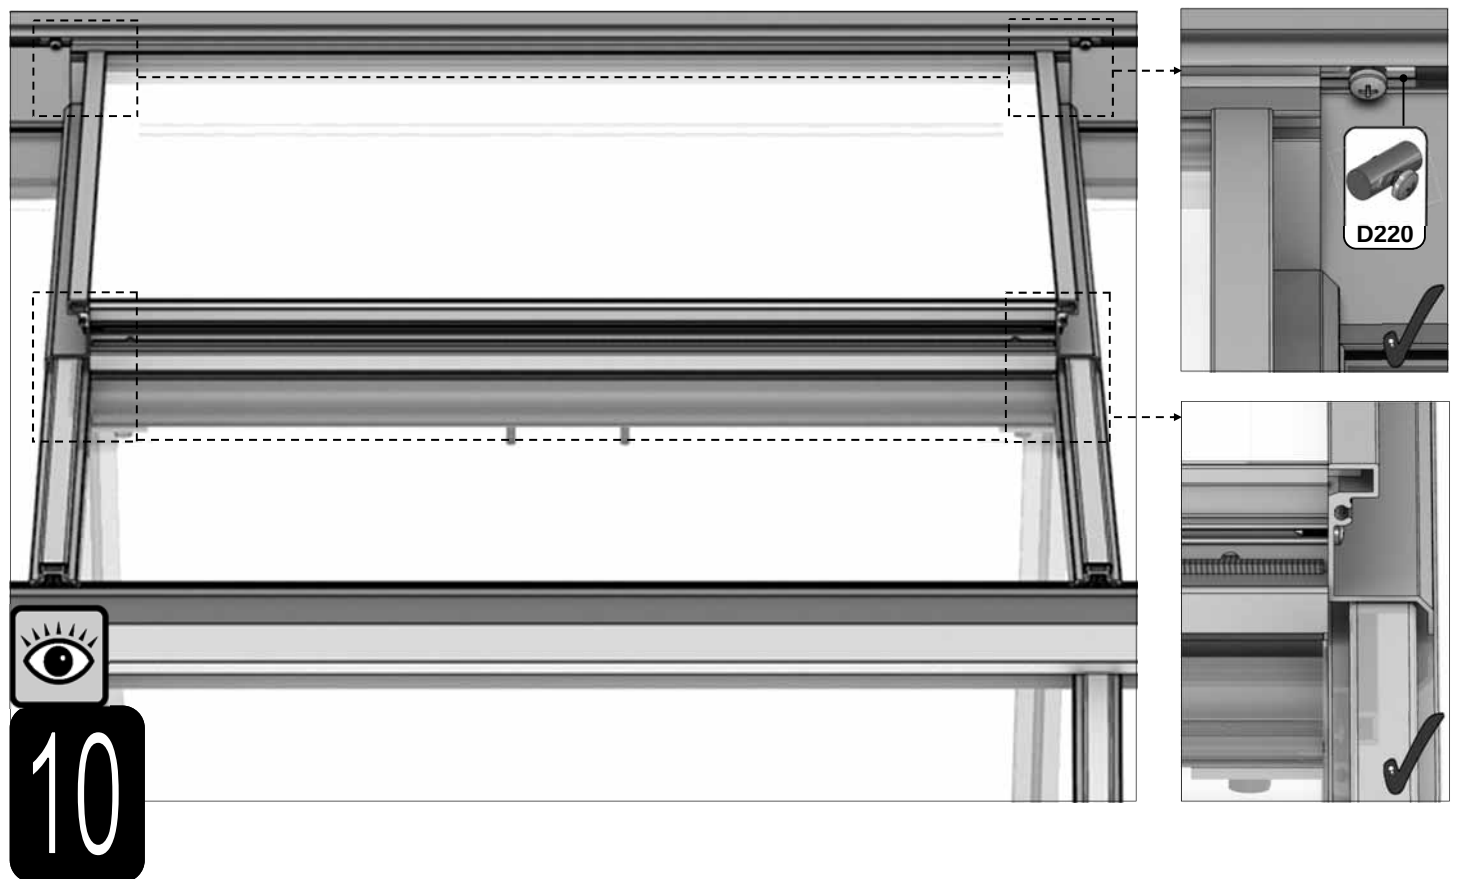
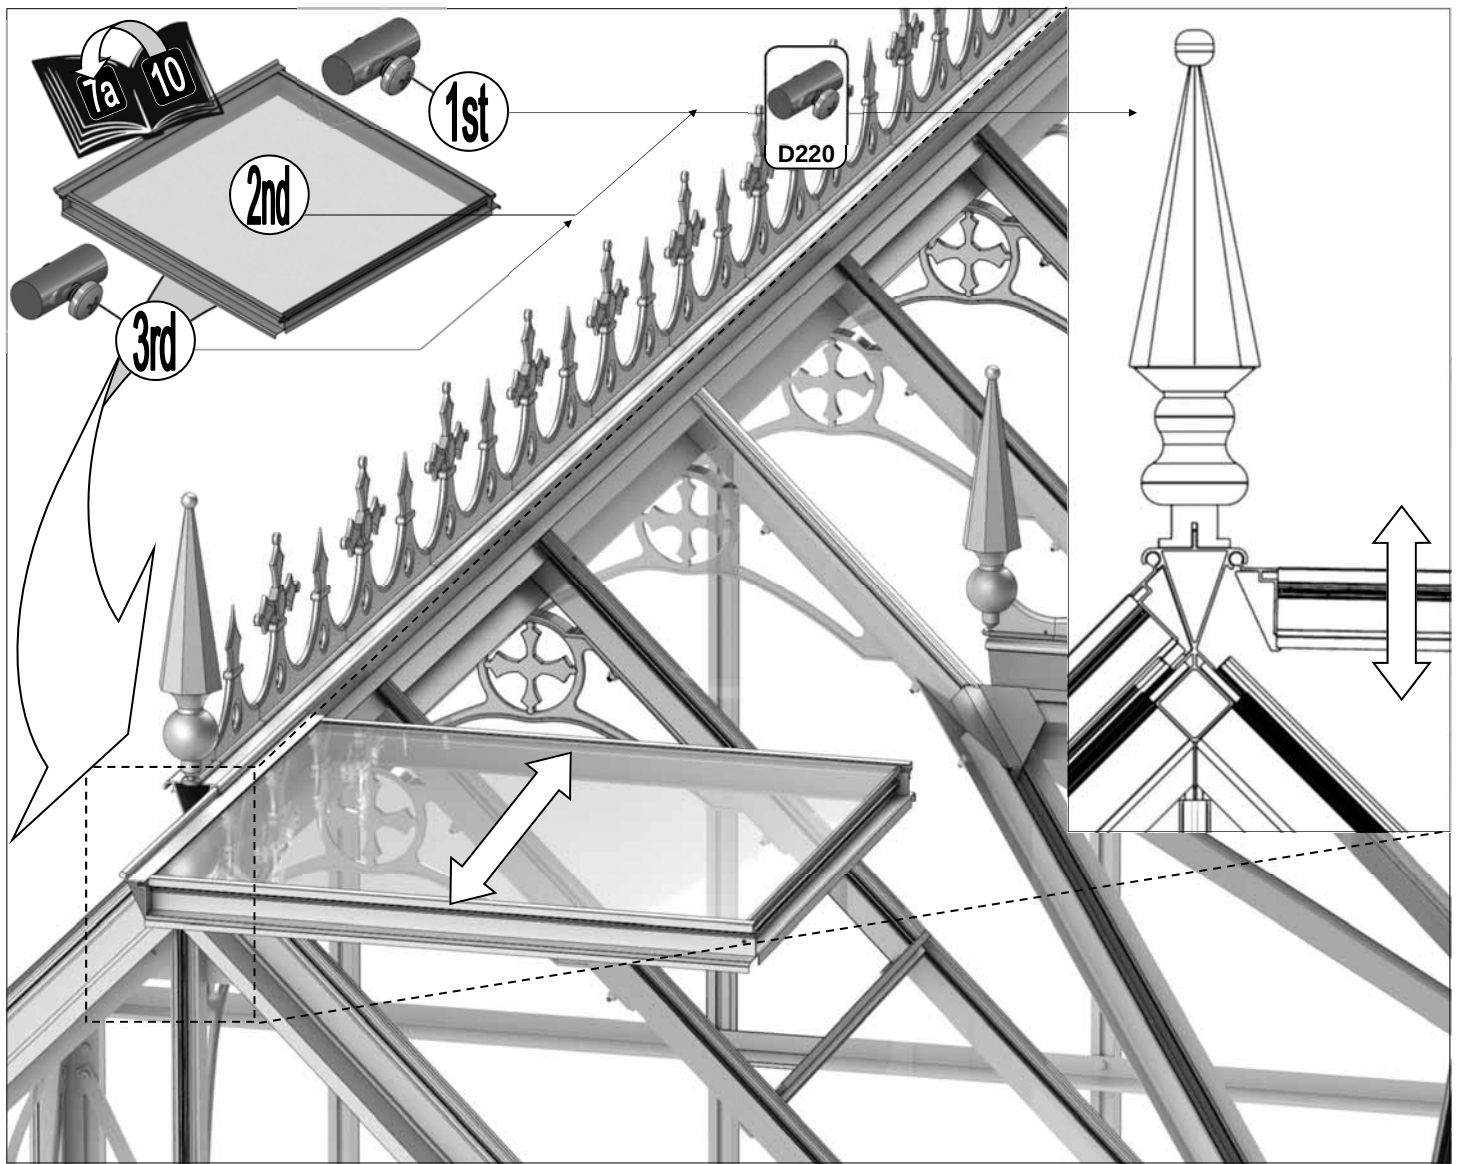


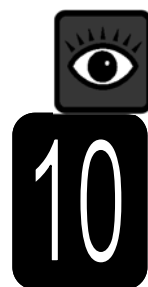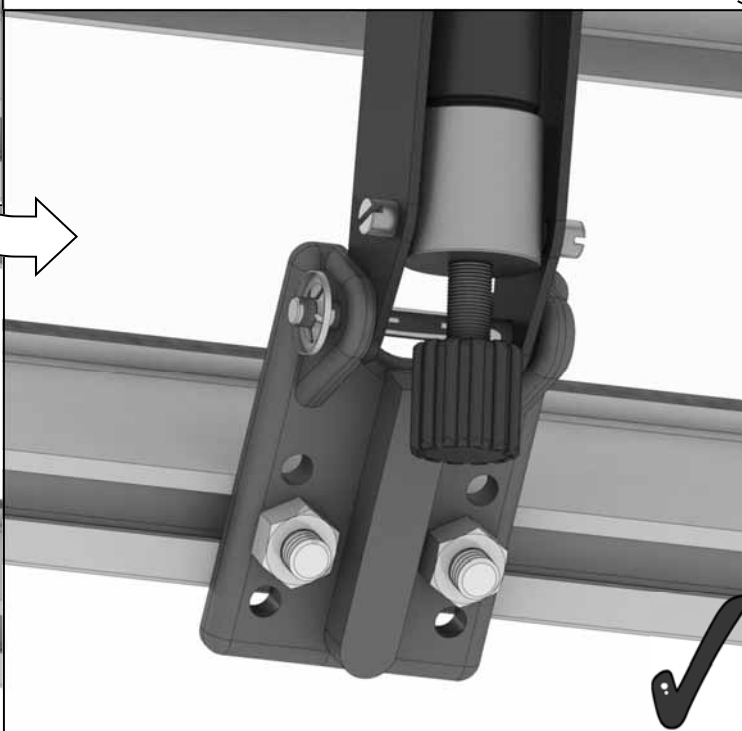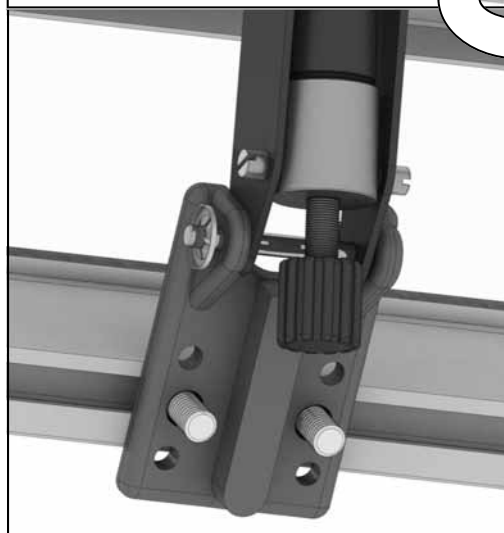
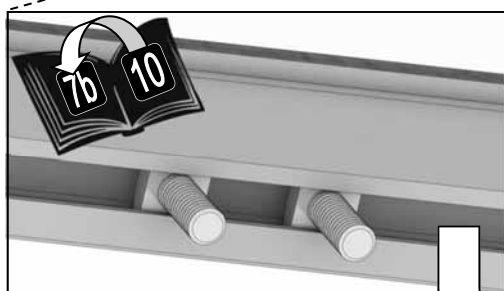
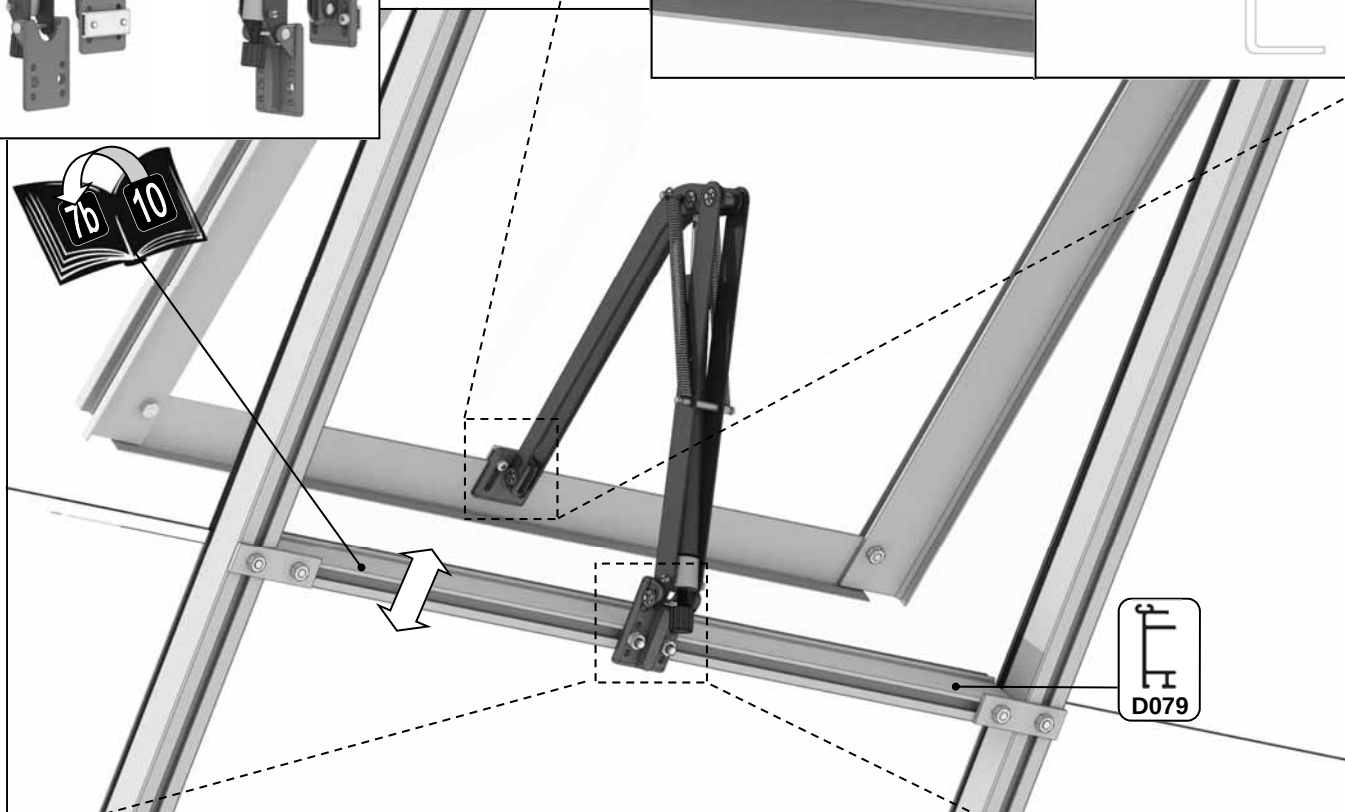
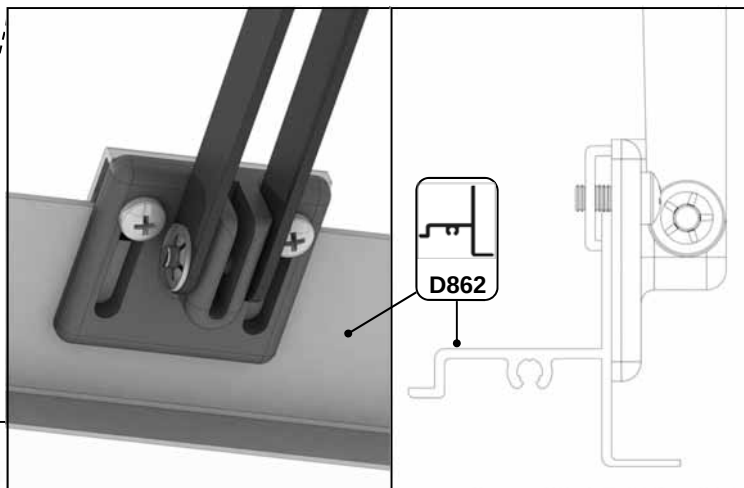


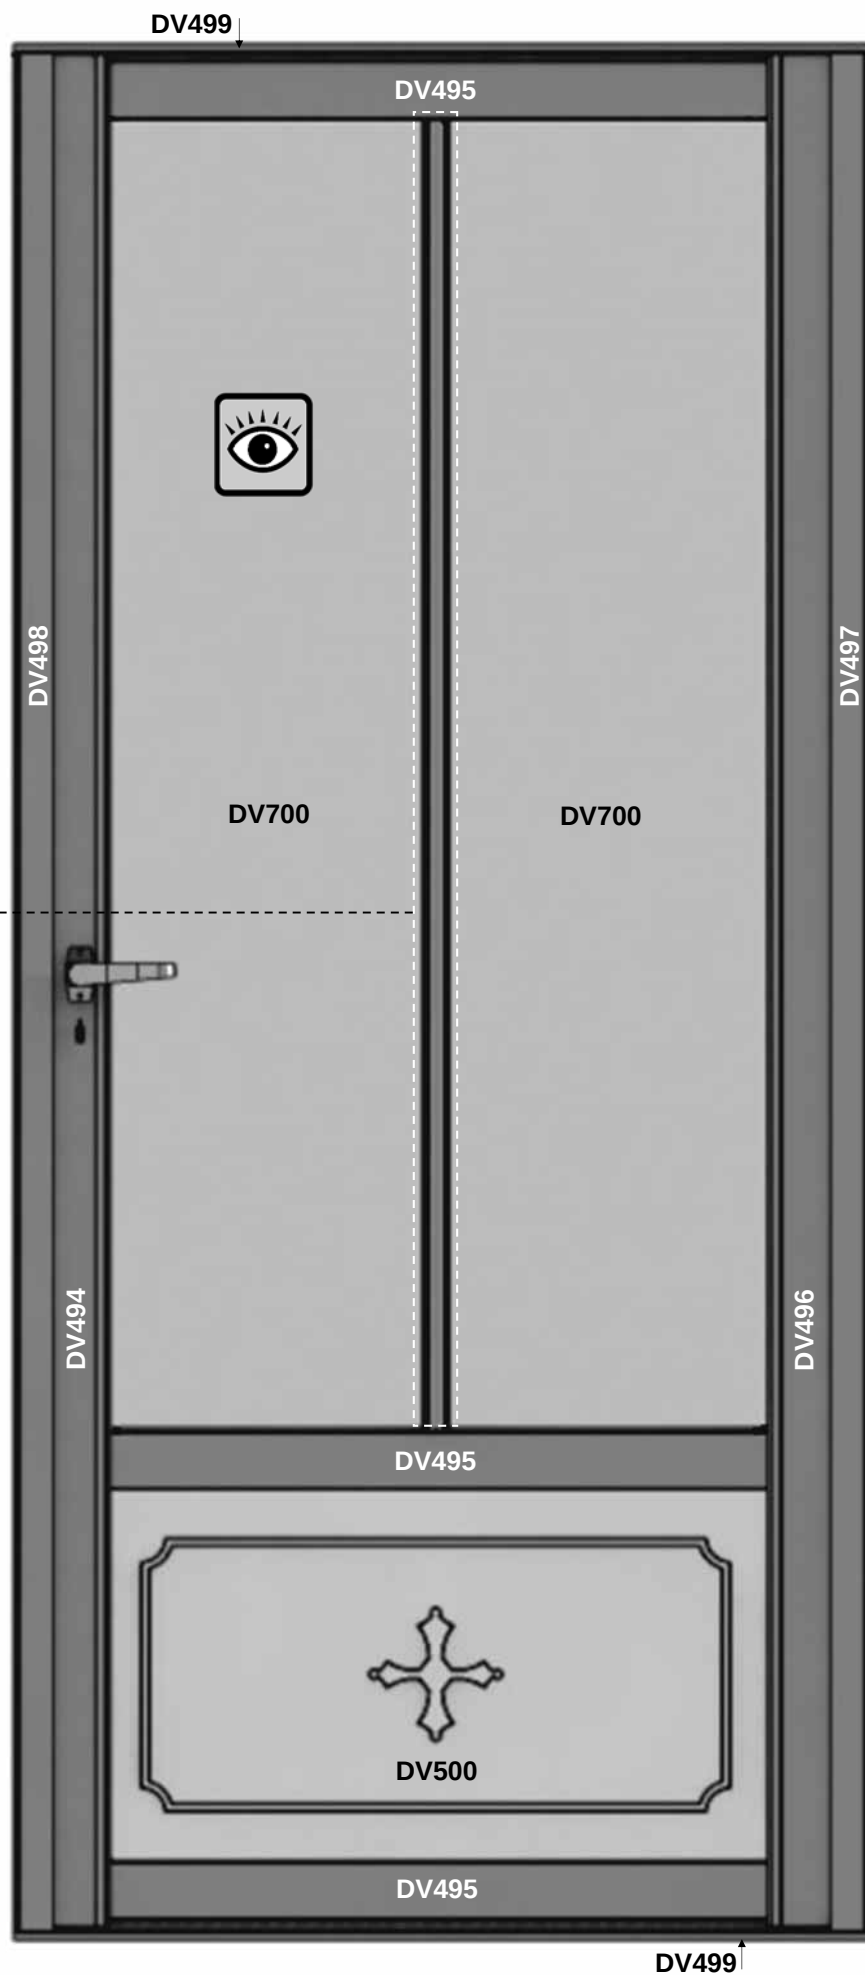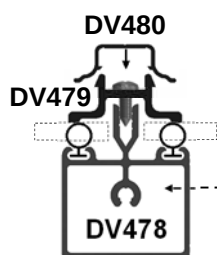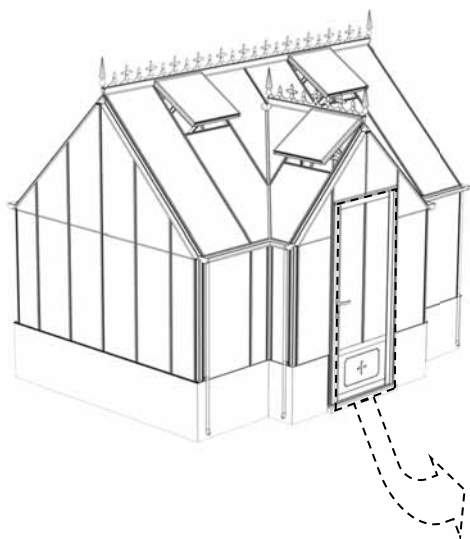








Part No		Quantity
D522		10
BOL M6 CROP		20
NUT M6		20

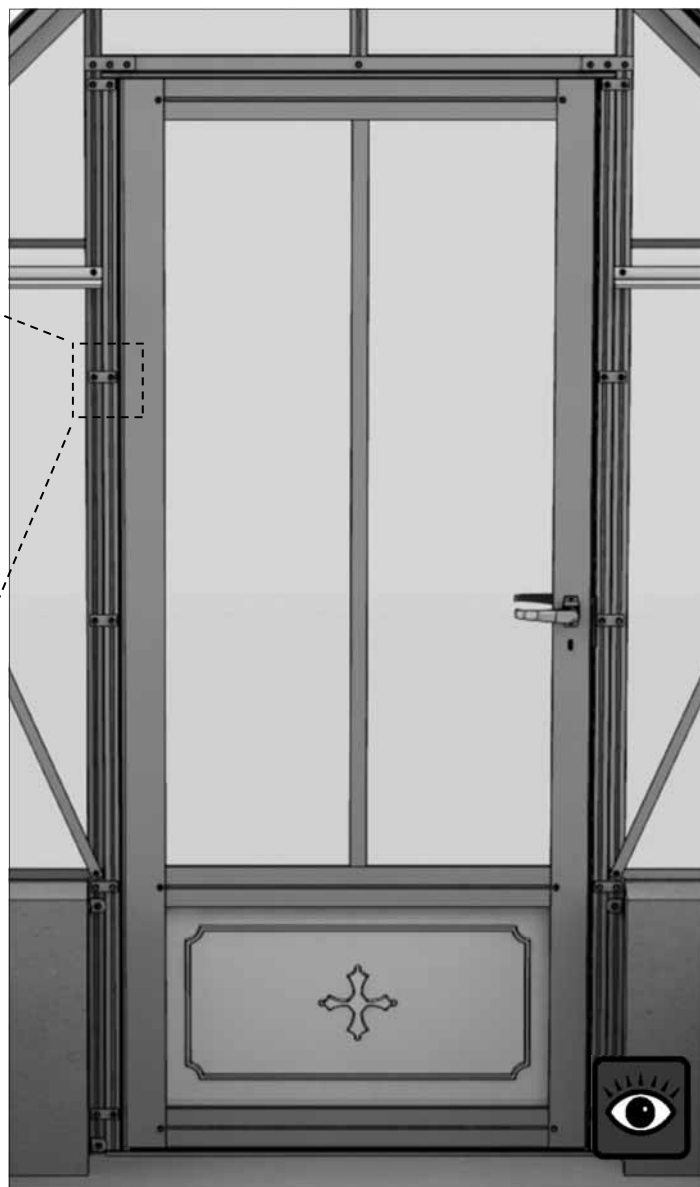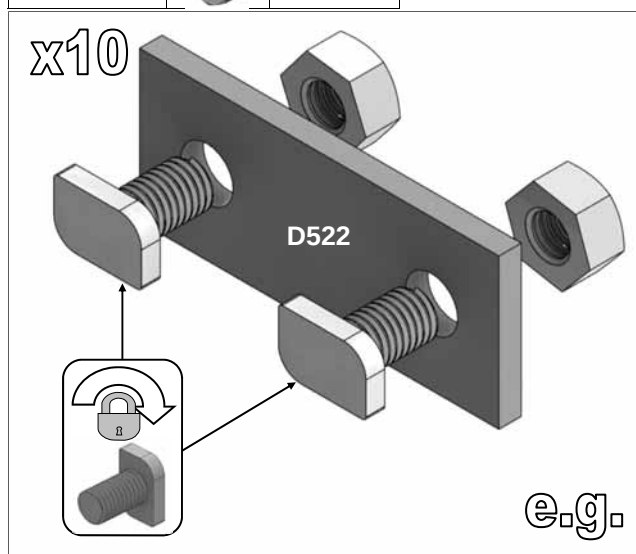

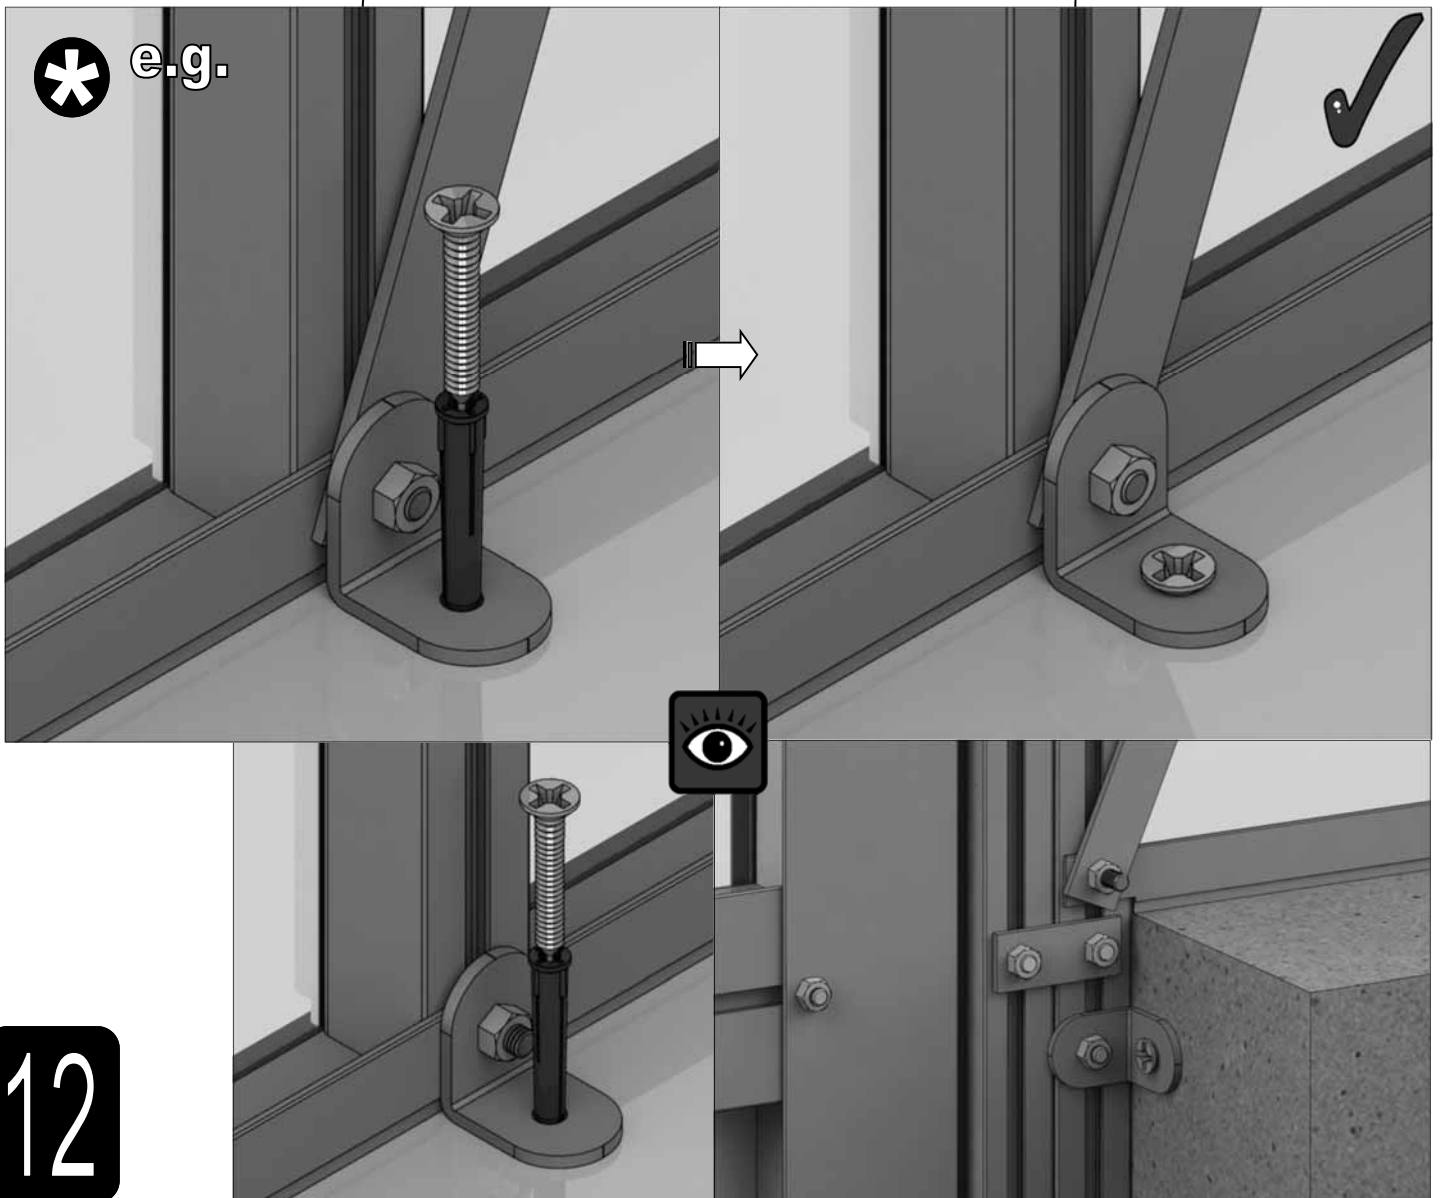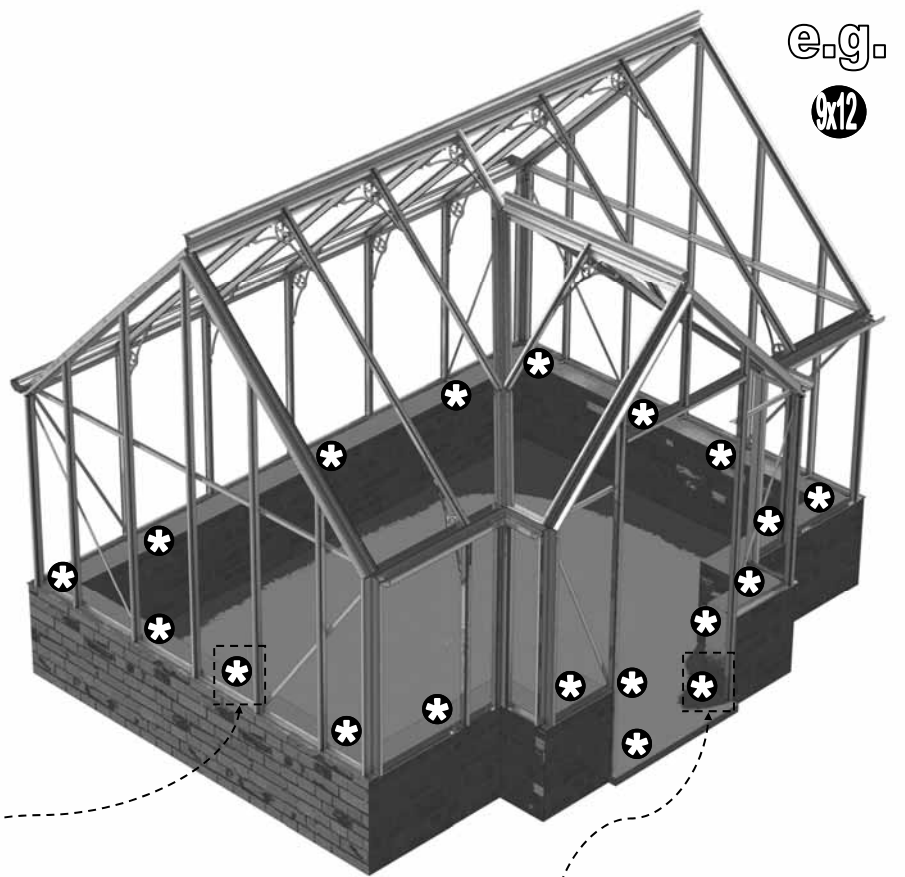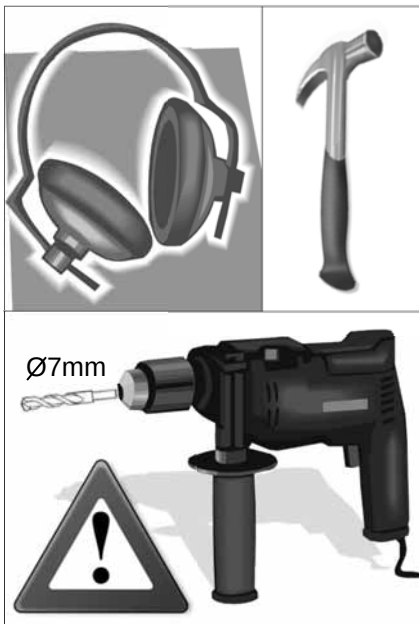

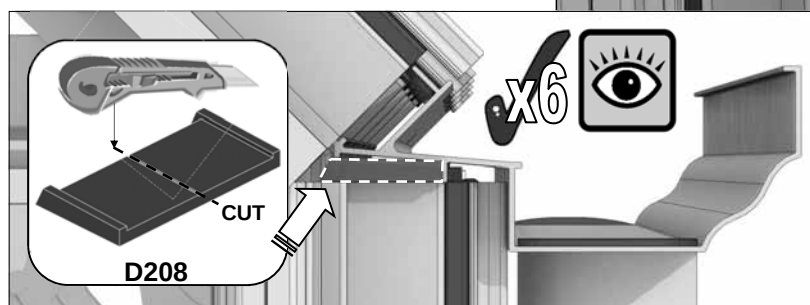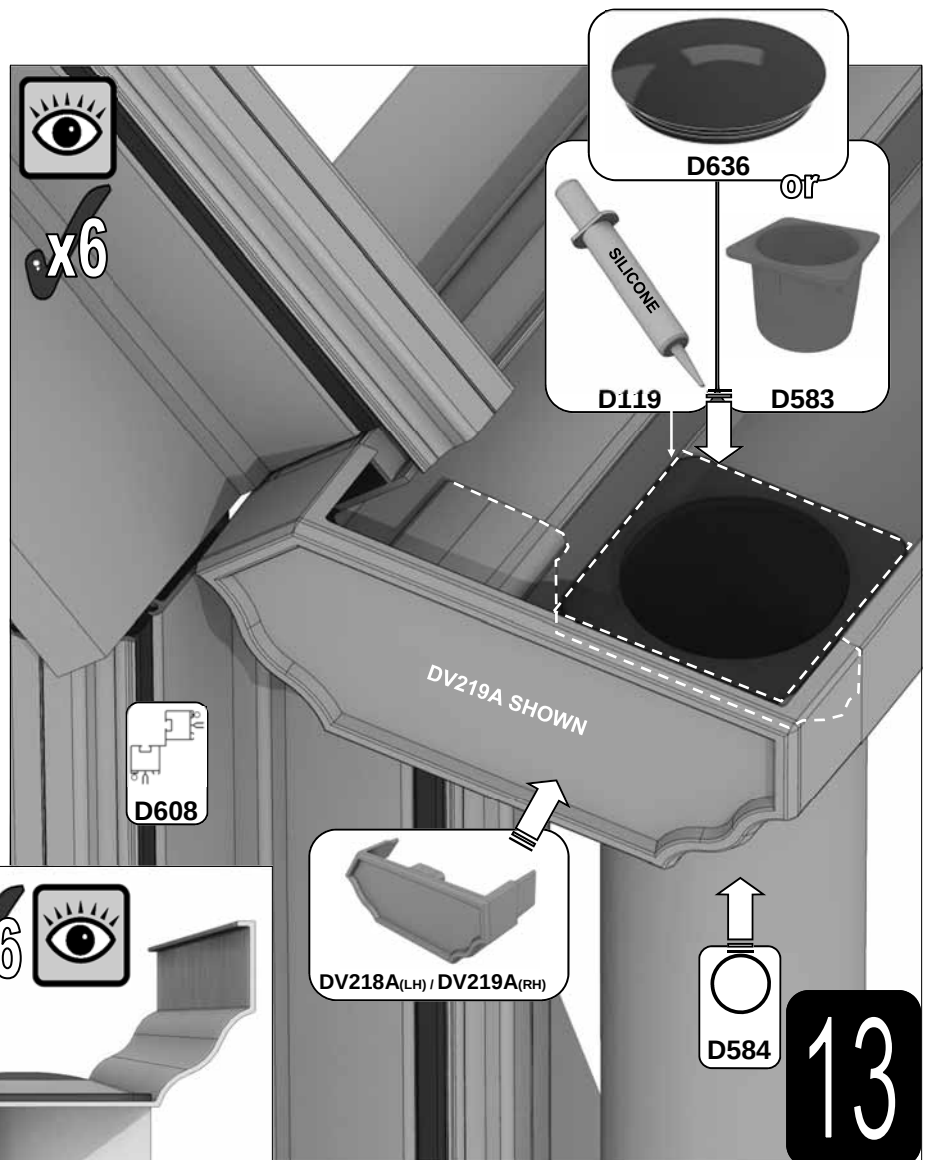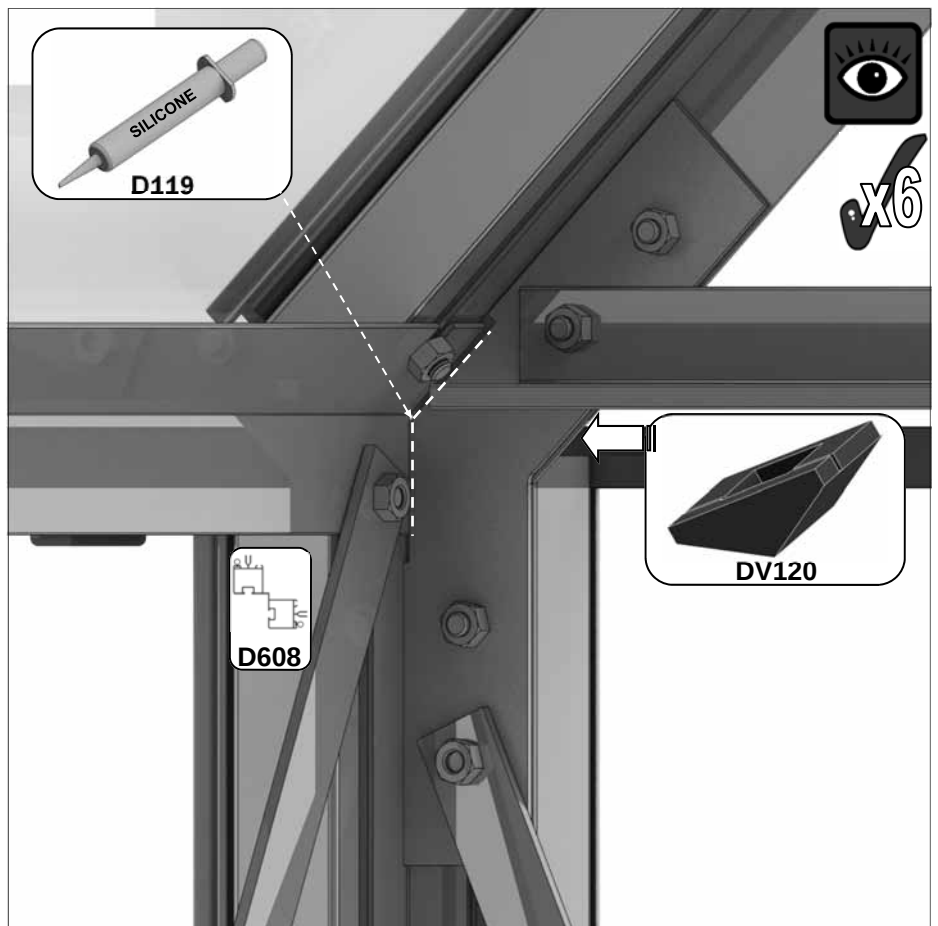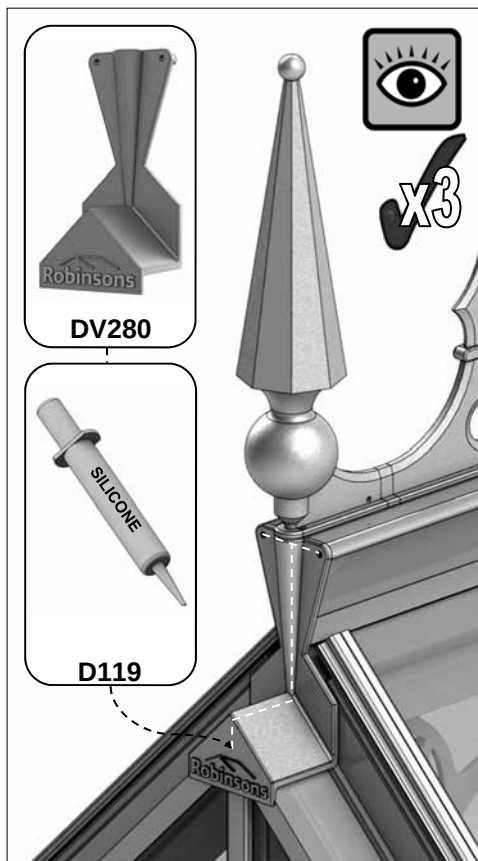


Example: 2x 4' 3 slat shelves 'ST0304' = 8' run

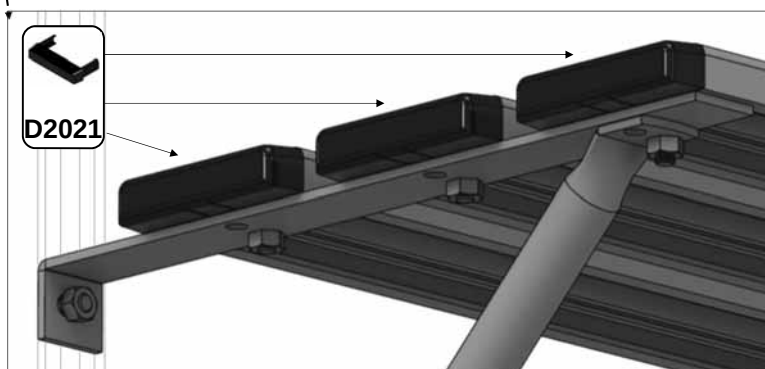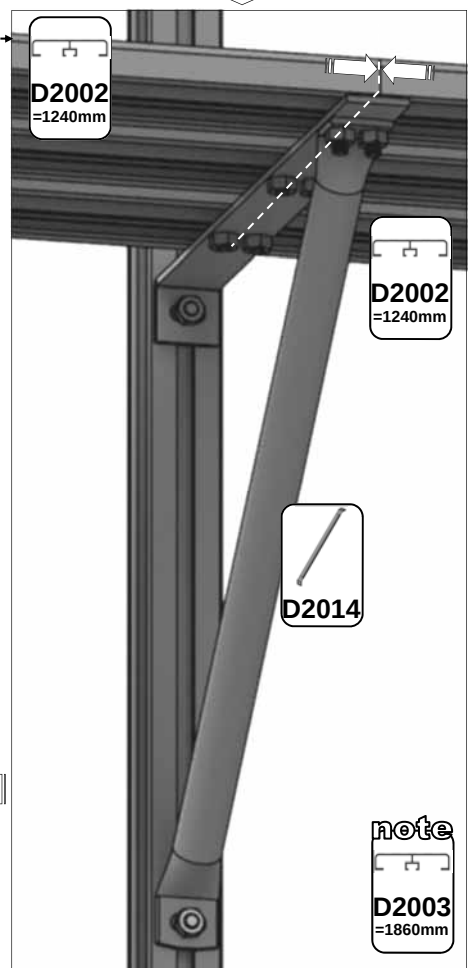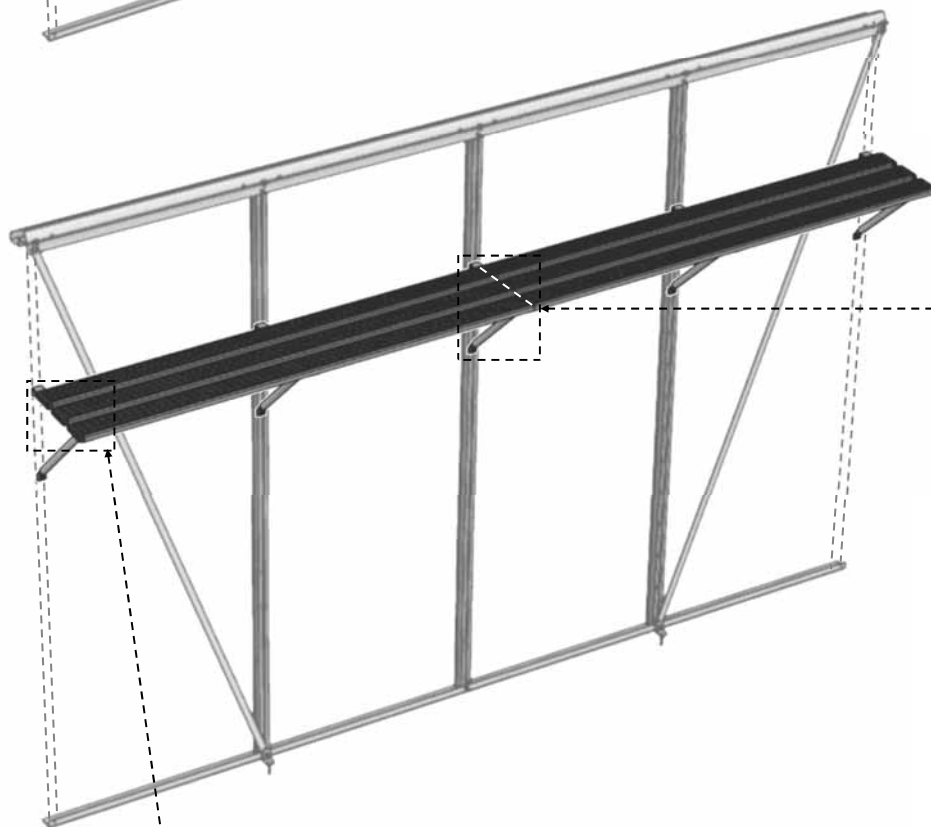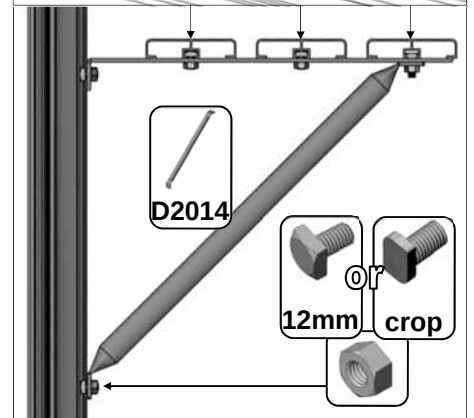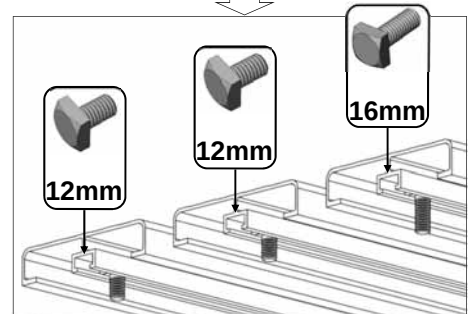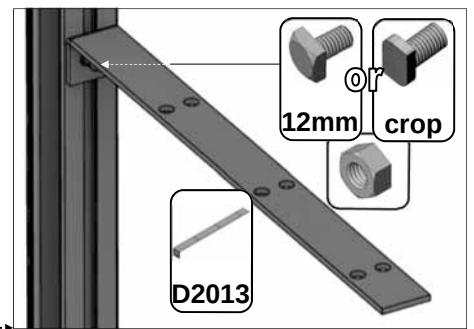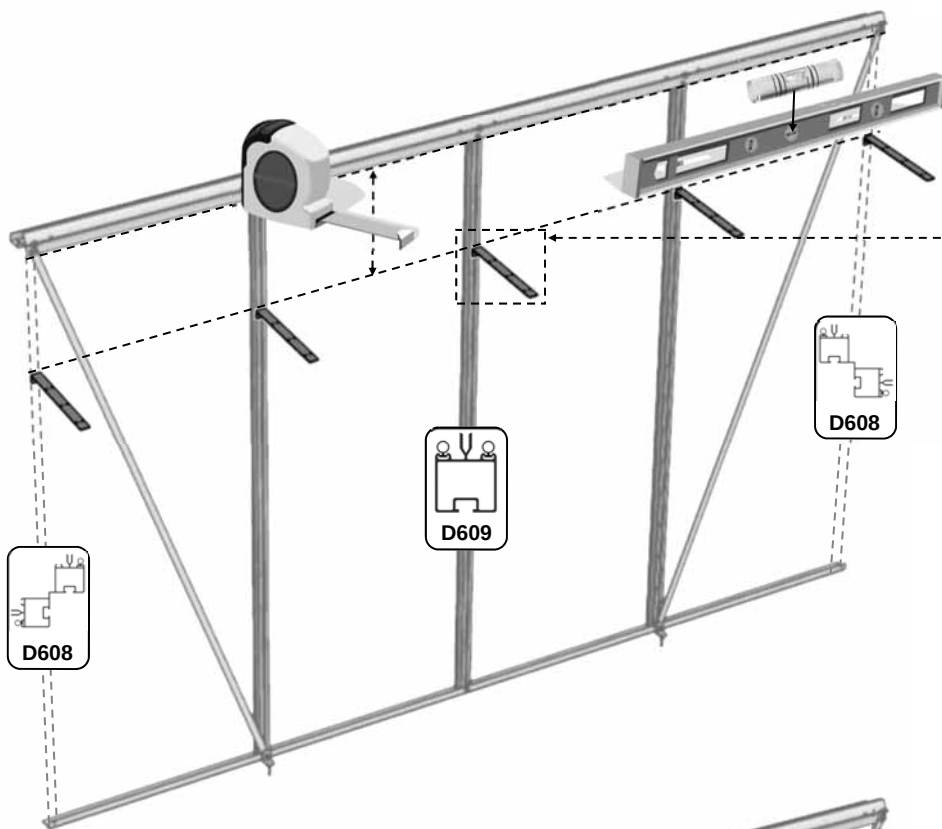

14

Example: 2x 4' 7 slat staging 'ST0704' = 8' run

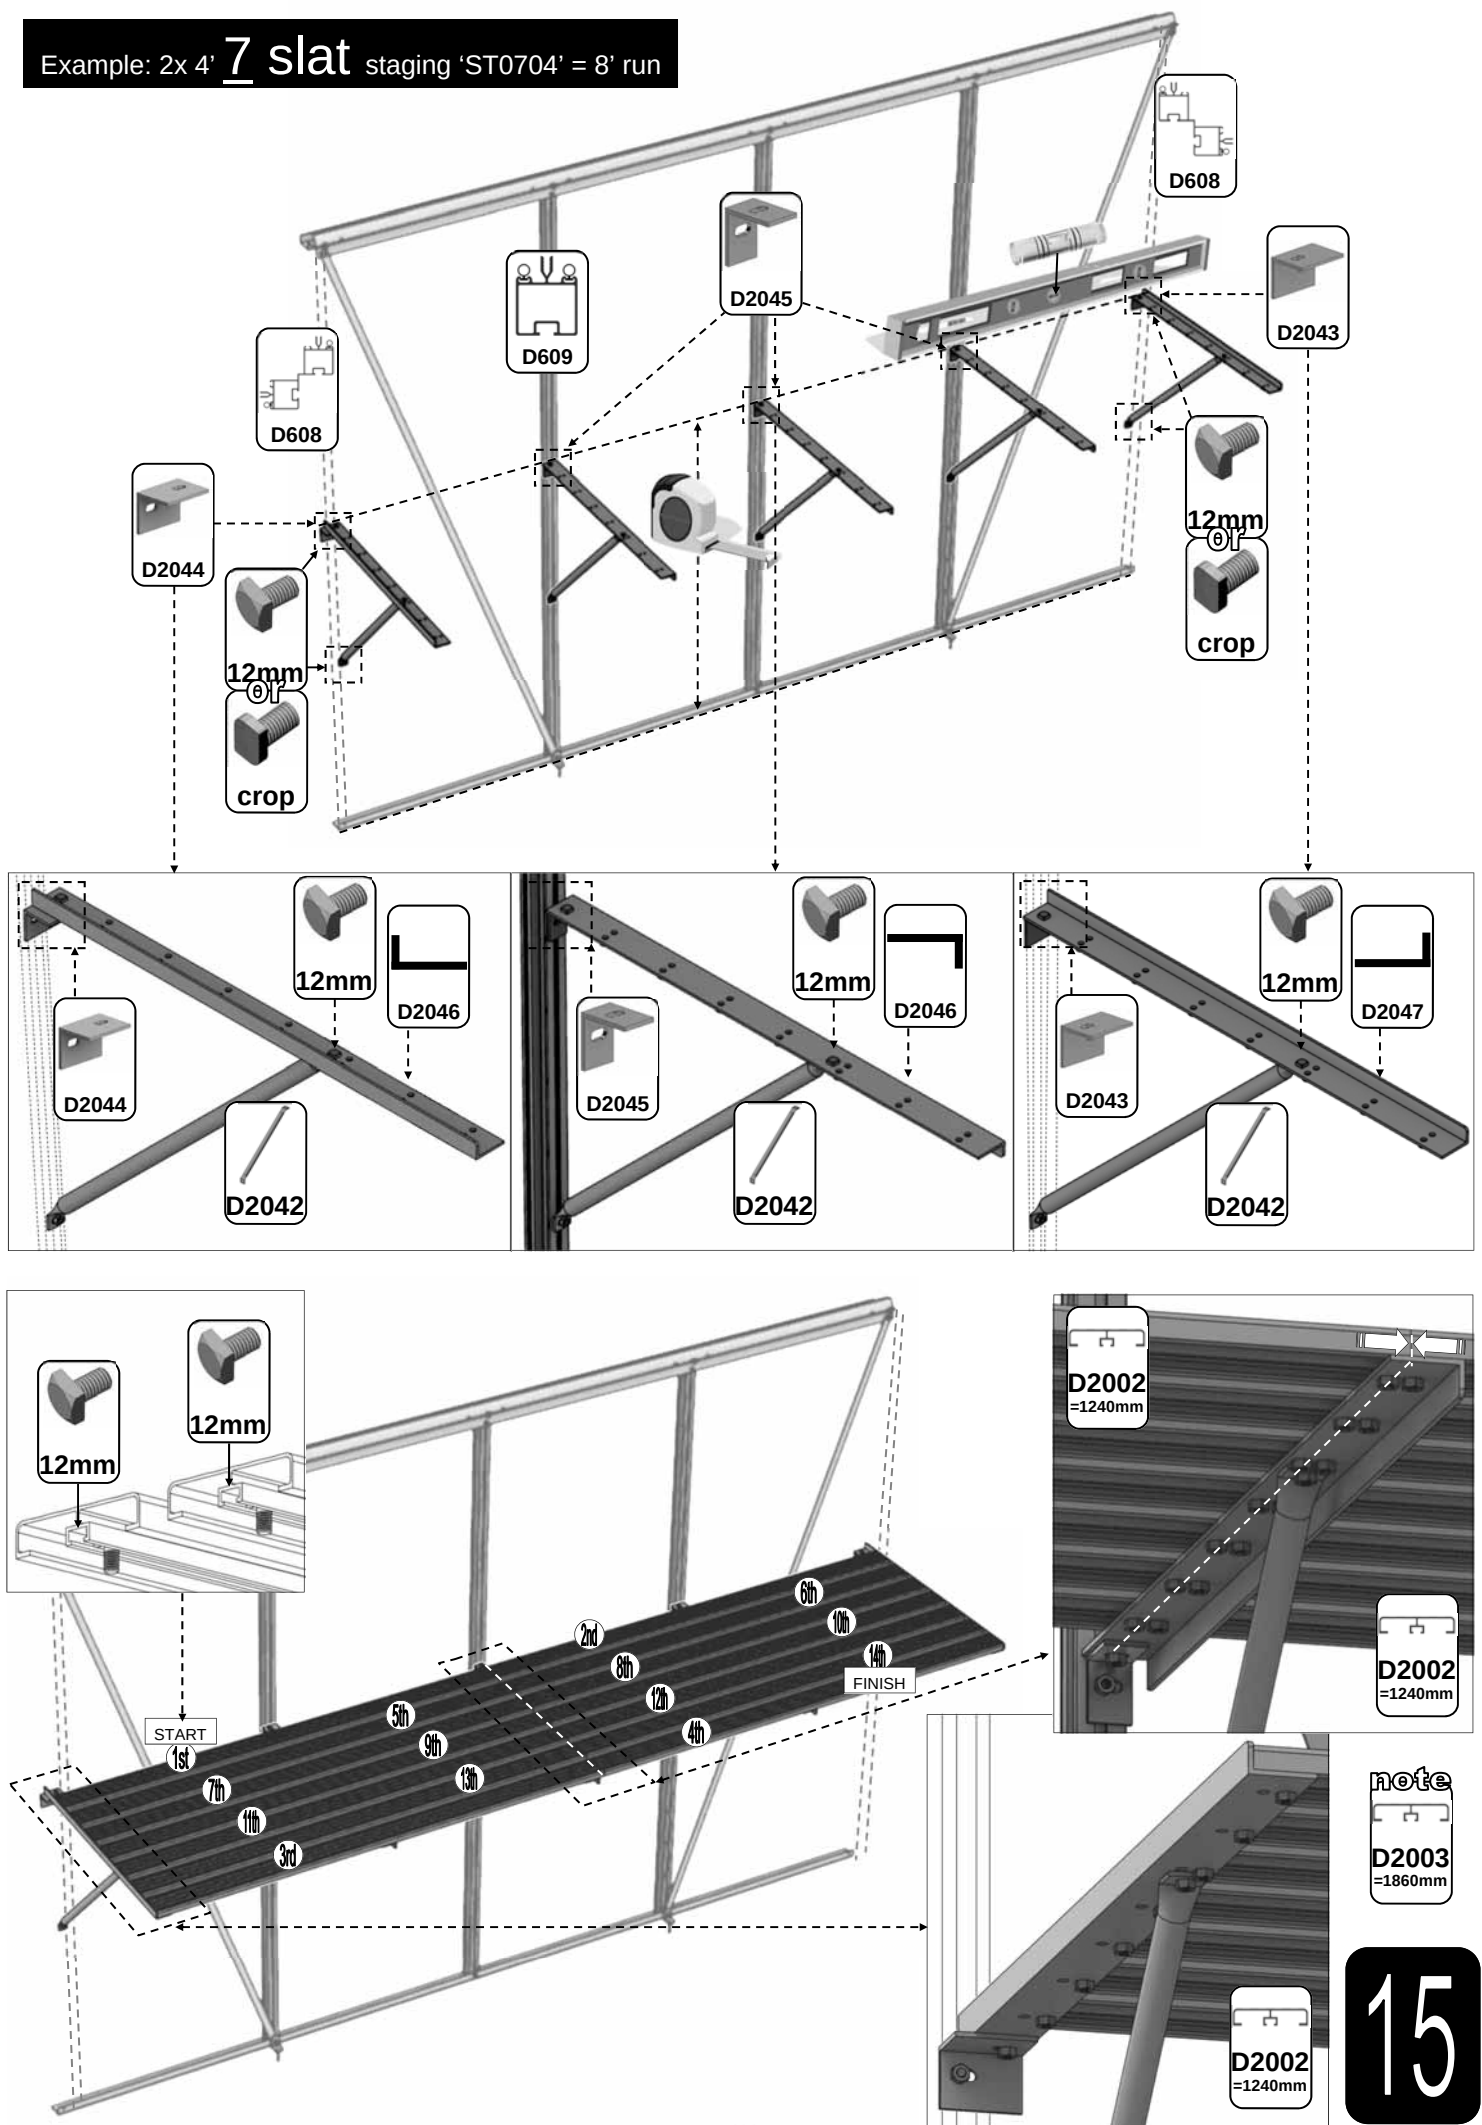

Please be aware that this is a new multi-national manual. If you spot any errors or have any constructive comments regarding the manual please email james.spooner@greenhousepeople.co.uk and I will make the necessary amendments. In addition any photographs of completed buildings would be most appreciated to add to our portfolio.

THIS GREENHOUSE BOX WAS PACKED BY:

DATE: _____



www.robinsonsgreenhouses.co.uk

To contact Robinsons Customer Services email us at sales@robinsonsgreenhouses.co.uk or call us on 01782 385 409.

Our address is Robinsons Greenhouses, Unit 19 Blythe Park, Cresswell, Stoke-on-Trent, Staffordshire, ST11 9RD